Self Diagnosis Supported model

SERVICE MANUAL

AE-5 CHASSIS

MODEL	COMMANDER	DEST	CHASSIS NO.	MODEL	COMMANDER	DEST	CHASSIS NO.
KV-28FX60A	RM-891	Italian	SCC-Q12D-A	KV-32FX60A	RM-891	Italian	SCC-Q12B-A
KV-28FX60B	RM-891	French	SCC-Q13D-A	KV-32FX60B	RM-891	French	SCC-Q13B-A
KV-28FX60D	RM-891	AEP	SCC-Q11D-A	KV-32FX60D	RM-891	AEP	SCC-Q11B-A
KV-28FX60E	RM-891	Spanish	SCC-Q14D-A	KV-32FX60E	RM-891	Spanish	SCC-Q14B-A
KV-28FX60K	RM-891	OIRT	SCC-Q16F-A	KV-32FX60K	RM-891	OIRT	SCC-Q16A-A
KV-28FX60R	RM-891	OIRT	SCC-Q16E-A	KV-32FX60R	RM-891	OIRT	SCC-Q16B-A
KV-28FX60U	RM-891	UK	SCC-Q15C-A	KV-32FX60U	RM-891	UK	SCC-Q15B-A

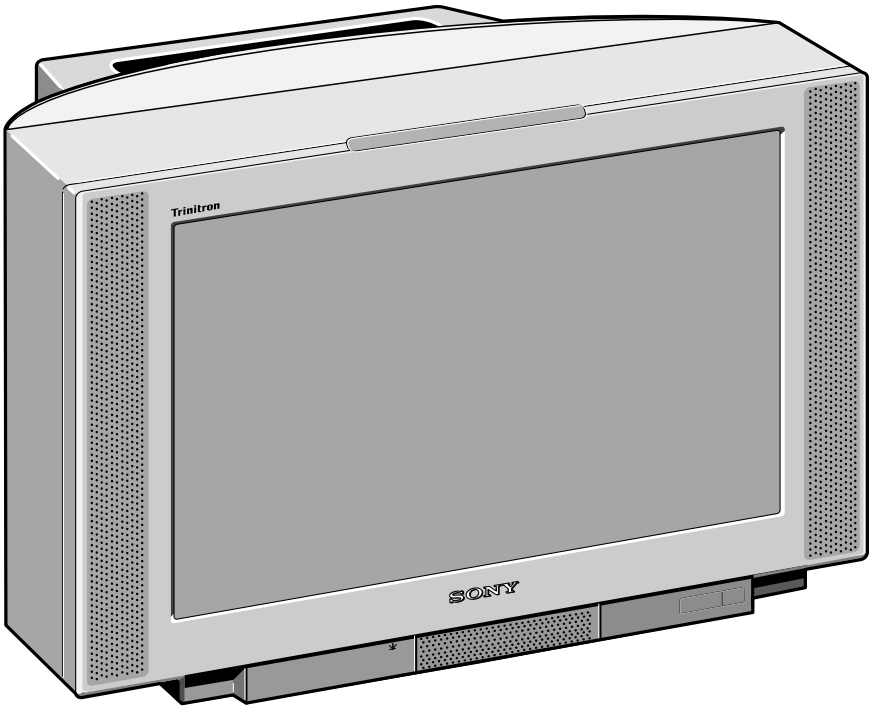

MICROFILM

TRINITRON ® COLOR TV

SONY ®

ITEM MODEL	Television System	Stereo System	Channel Coverage	Color System
Italian	B/G/H,D/K	GERMAN Stereo	ITALIA VHF : A-H2 (C) UHF : 21-69 PAL B/G/H VHF : E2-E12 UHF : E21-E69 CABLE TV (1) : S1-S41 CABLE TV (2) : S01-S05,M1-M10,U1-U10 DK VHF : R01-R12 UHF : R21-R69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
French	B/G/H, D/K,L,I	GERMAN/NICAM Stereo	L VHF : F02-F10 UHF : F21-F60 CABLE : B-Q B/G/H VHF : E2-E12 UHF : E21-E69 CABLE TV (1) : S1-S41 CABLE TV (2) : S01-S05, M1-M10, U1-U10 ITALIA VHF : A-H2 (C) UHF : 21-69 I UHF : B21-B69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
AEP	B/G/H, D/K	GERMAN Stereo	PAL B/G/H/ VHF : E2-E12 : E21-E69 CABLE TV (1) : S1-S41 CABLE TV (2) : S01-S05, M1-M10, U1-U10 ITALIA VHF : A-H2 (C) UHF : 21-69 D/K VHF : R01-R12 UHF : R21-R69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
Spanish	B/G/H, D/K	GERMAN/NICAM Stereo	PAL B/G/H/ VHF : E2-E12 : E21-E69 CABLE TV (1) : S1-S41 CABLE TV (2) : S01-S05, M1-M10, U1-U10 ITALIA VHF : A-H2 (C) UHF : 21-69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
OIRT	B/G/H, D/K	KV-28FX60K/32FX60K GERMAN/NICAM Stereo KV-28FX60R/32FX60R GERMAN Stereo	B/G/H/ VHF : E2-E12 UHF : E21-E69 CABLE TV (1) : S1-S41 D/K VHF : R01-R12 UHF : R21-R69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
UK	I	NICAM Stereo	UHF : B21-B69	PAL NTSC4.43, NTSC3.58 (VIDEO IN)

MODEL	28FX60A	28FX60B	28FX60D	28FX60E	28FX60K	28FX60R	28FX60U
Power Consumption	132W	132W	132W	132W	132W	132W	132W
MODEL	**32FX60A**	**32FX60B**	**32FX60D**	**32FX60E**	**32FX60K**	**32FX60R**	**32FX60U**
PowerConsumption	124W	124W	124W	124W	124W	124W	124W

[PICTURE TUBE]

KV-28FX60 FD Trinitron
Approx. 71 cm (28 inches)
(Approx. 66 cm picture measured diagonally)
102 degree deflection

KV-32FX60 FD Trinitron
Approx. 82 cm (32 inches)
(Approx. 76 cm picture measured diagonally)
102 degree deflection

Input/Output Terminals

[REAR]

1/1 21-pin Euro connector (CENELEC standard).
- Inputs for Audio and Video signals.
- Inputs for RGB.
- Outputs of TV Video and Audio signals.

2/2 21-pin Euro connector
- Inputs for Audio and Video signals.
- Inputs for S video.
- Outputs forVideo and Audio signals (selectable).

3/3 21-pin Euro connector
- Inputs for Audio and Video signals.
- Inputs for S video.

External speaker terminals : 2-pin Din (5)

[FRONT]

3 Video output - phono jack

3 Audio inputs - phono jacks

3 S Video input - 4 pin din

Headphone jack : stereo minijack

Sound output	2x25W (Music Power)
Subwoofer	25W (Music Power)
Power requirements	220 - 240V
Dimensions	
KV-28FX60	Approx 772x497x533 (w/h/d)
KV-32FX60	Approx 867x564x558 (w/h/d)
Weight	
KV-28FX60	Approx 42.5kg
KV-32FX60	Approx 65 kg
Supplied accessories	RM-891 Remote Commander (1) IEC designated R6 battery (2)
Other features	NICAM*, FASTEXT, TOPTEXT

* (KV-28FX60B,28FX60E,28FX60K,28FX60U, 32FX60B,32FX60E,32FX60K,32FX60U only)

[RM-891]

Remote control system	Infrared control
Power requirements	3V dc 2 batteries IEC designation R6 (size AA)
Dimensions	Approx 210x56x24mm (w/h/d)
Weight	Approx 110g (Not including battery)

Design and specifications are subject to change without notice.

Model Name / Item	KV-28FX60A KV-32FX60A	KV-28FX60B KV-32FX60B	KV-28FX60D KV-32FX60D	KV-28FX60E KV-32FX60E	KV-28FX60K KV-32FX60K	KV-28FX60R KV-32FX60R	KV28FX60U KV-32FX60U
Pal Comb	OFF	OFF	OFF	OFF	OFF	OFF	OFF
PIP	OFF	OFF	OFF	OFF	OFF	OFF	OFF
RGB Priority	ON	ON	ON	ON	ON	ON	ON
Woofer Box	ON	ON	ON	ON	ON	ON	ON
Scart 1	ON	ON	ON	ON	OFF	ON	ON
Scart 2	ON	ON	ON	ON	ON	ON	ON
Front in (3)	ON	ON	ON	ON	ON	ON	ON
Scart 4	ON	ON	ON	ON	ON	ON	ON
Projector	OFF	OFF	OFF	OFF	OFF	OFF	OFF
AKB in 16:9 mode	ON	ON	ON	ON	ON	ON	ON
Norm B/G	ON	ON	ON	ON	ON	ON	OFF
Norm I	OFF	ON	OFF	OFF	OFF	OFF	ON
Norm D/K	ON	ON	ON	ON	ON	ON	OFF
Norm AUS	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Norm L	OFF	ON	OFF	OFF	OFF	OFF	OFF
Norm SAT	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Norm M	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Teletext	ON	ON	ON	ON	ON	ON	ON
Nicam Stereo	OFF	ON	OFF	ON	ON	OFF	ON
Language Preset	Italian	French	German	Spanish	OIRT	OIRT	English

WARNING (KV-28FX60U/32FX60U only)

The flexible mains lead is supplied connected to a **B.S. 1363** fused plug having a fuse of **5 AMP** capacity. Should the fuse need to be replaced, use a **5 AMP FUSE** approved by **ASTA** to **BS 1362**, ie one that carries the ASTA mark.

IF THE PLUG SUPPLIED WITH THIS APPLIANCE IS NOT SUITABLE FOR THE OUTLET SOCKETS IN YOUR HOME, IT SHOULD BE CUT OFF AND AN APPROPRIATE PLUG FITTED. THE PLUG SEVERED FROM THE MAINS LEAD MUST BE DESTROYED AS A PLUG WITH BARED WIRES IS DANGEROUS IF ENGAGED IN A LIVE OUTLET SOCKET.

When an alternative type of plug is used it should be fitted with a **5 AMP FUSE**, otherwise the circuit should be protected by a **5 AMP FUSE** at the distribution board.

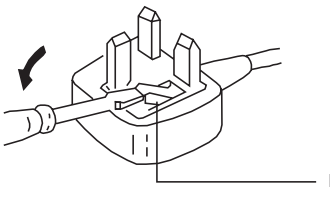

How to replace the fuse.
Open the fuse compartment with a screwdriver blade and replace the fuse.

21 pin connector

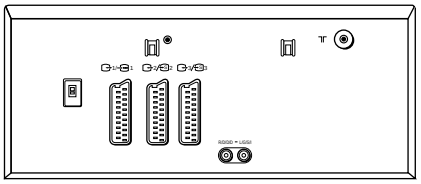

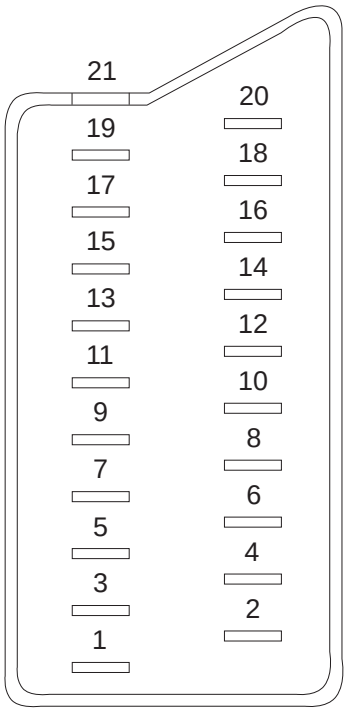

Pin No	1	2	4	Signal	Signal level
1	○	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedence : Less than 1kohm*
2	○	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedence : More than 10kohm*
3	○	○	○	Audio output A (left)	Standard level : 0.5V rms Output impedence : Less than 1kohm*
4	○	○	○	Ground (audio)	
5	○	○	○	Ground (blue)	
6	○	○	○	Audio input A (left)	Standard level : 0.5V rms Output impedence : More than 10kohm*
7	○	●	●	Blue input	0.7 +/- 3dB, 75 ohms positive
8	○	○	○	Function select (AV control)	High state (9.5-12V) : Part mode Low state (0-2V) : TV mode Input impedence : More than 10K ohms Input capacitance : Less than 2nF
9	○	○	○	Ground (green)	
10	○	○	○	Open	
11	○	●	●	Green	Green signal : 0.7 +/- 3dB, 75 ohms, positive
12	○	○	○	Open	
13	○	○	○	Ground (red)	
14	○	○	○	Ground (blanking)	
15	○	–	–	Red input	0.7 +/- 3dB, 75 ohms, positive
	–	○	○	(S signal Chroma input)	0.3 +/- 3dB, 75 ohms, positive
16	○	●	●	Blanking input (Ys signal)	High state (1-3V) Low state (0-0.4V) Input impedence : 75 ohms
17	○	○	○	Ground (video output)	
18	○	○	○	Ground (video input)	
19	○	○	○	Video output	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
20	○	–	–	Video input	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
	–	○	○	Video input Y (S signal)	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
21	○	○	○	Common ground (plug, shield)	

○ Connected ● Not Connected (open) * at 20Hz - 20kHz

Pin No.	Signal	Signal Level
1	Ground	
2	Ground	
3	Y (S signal) input	1V ± 3dB 75 ohm, positive Sync. 0.3V -3 + 10dB
4	C (S signal) input	0.3V ± 3dB 75 ohm, positive Sync.



AE-5 SELF DIAGNOSTIC SOFTWARE

The identification of errors within the AE-5 chassis is triggered in one of two ways :- 1: Busy or 2: Device failure to respond to IIC. In the event of one of these situations arising the software will first try to release the bus if busy (Failure to do so will report with continuous flashing LED) and then communicate with each device in turn to establish if a device is faulty. If a device is found to be faulty the relevant device number will be displayed through the LED (Series of flashes which must be counted) See table 1., non fatal errors are reported using this method.

Diagnostic Item Description	No of times Standby LED Flashes	Probable cause Location	Detected Symptoms
Power does not turn on	Does not light	Power cord is not plugged in Fuse is burned out	Power does not come on No power is supplied to the TV AC power supply is faulty
+B Overcurrent (OCP)	2 times	H.OUT (Q6803/6804) is shorted. (D Board) Linearity FET (Q6806) is shorted. (D Board) IC6604 Power IC is shorted. (D Board)	Power does not come on Load on power line has shorted
Vertical Deflection stopped	4 times	+15V is not supplied R6835 open (D Board) -15V is not supplied R6834 open (D Board) IC6700 is shorted (D Board)	Vertical deflection pulse has stopped Power line has shorted

ERROR	LED ERROR COUNT
No error	00
Not allowed (may be confused with Sircs response flash!)	01
Over Current Protection	02
Over Voltage Protection	03
Vertical Protection	04
AKB	05
H - Protection	06
Speaker Protection	07
General IIC Line 0 error	08
MEGATEXT	09
NVM	10
Main colour decoder	11
Feature Box	12
D/A converter	13
Backend	14
Multi sound processor	15
Auto Wide	16
External RAM	17

Flash Timing Example : e.g. error number 3

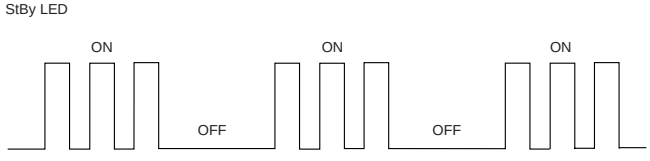

ERROR DETECTION MONITOR

Device acknowledge is used to check IIC errors. Device acknowledge is checked by sending an IIC start sequence during CRT power on. Each device is checked three times, if there is no acknowledge after every attempt, it will be regarded as an error.
There are three steps to check errors

1. IIC line 0
   If all devices except the NVM are errors, IIC line 0 error is displayed
2. Board check
   If all devices mounted on one board have errors, board error is displayed
3. Each device check
   If IIC line error and board error are not detected then the device with an error is displayed

The detected errors can be displayed as follows:

1. Error Monitor Menu
2. Error Reader

1. ERROR MONITOR MENU

The error monitor menu is displayed by selecting TT33. The following menu will be displayed:

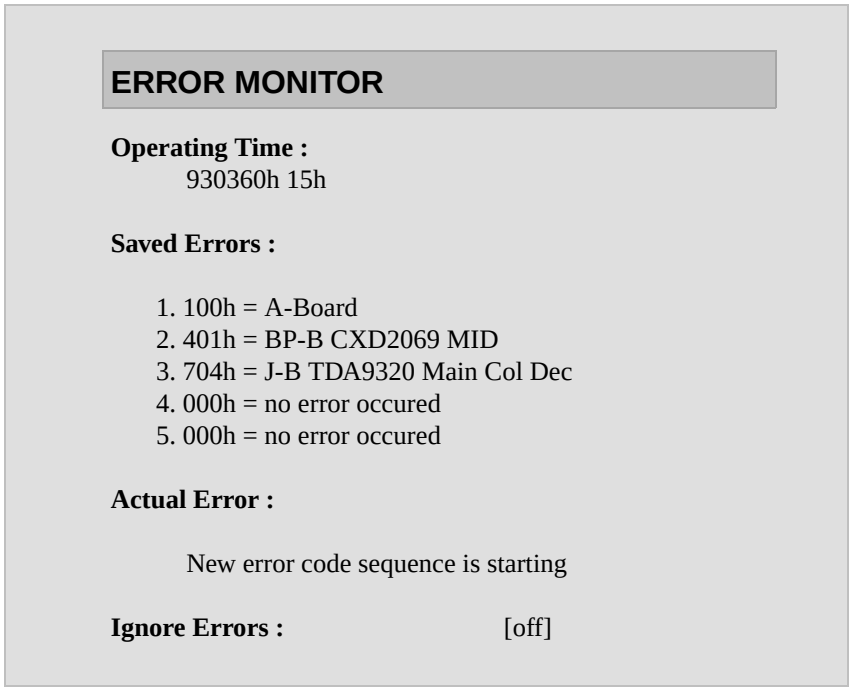

2. ERROR READER DISPLAY

The error reader display is connected to the service connector to read actual error codes. The part number for the error reader display is S-188-900-10. Once an error has been detected it will then be displayed on the two digit error reader. The errors displayed refer to the following table :

	Send Data to Error Reader			
Error Code	Data high	Data Low	Error type	Function
00 00h	-	f0h	no device	
Gen.IIC Error				
00 01h	f0h	01h	IIC 0 line	
00 02h	f0h	02h	IIC 1 line	not used
Board Error				
01 00h	f1h	00h	A Board	
02 00h	f2h	00h	B1 Board	
03 00h	f3h	00h	B2 Board	
04 00h	f4h	00h	BP Board	
05 00h	f5h	00h	D1 Board	
06 00h	f6h	00h	E Board	
07 00h	f7h	00h	J Board	
Device Error				
A Board				
01 01h	f1h	01h	CXA1875	Port Expander
01 02h	f1h	02h	TU1326	Main Tuner
01 03h	f1h	03h	TU1350	Sub Tuner
B1 Board				
02 01h	f2h	01h	P83C654	Feature Box
02 02h	f2h	02h	SDA9280	D/A Converter
B2 Board				
03 01h	f3h	01h	SAA4977	Basic
03 02h	f3h	02h	SAA4950	Memory
BP Board				
04 01h	f4h	01h	CXD2069	MID
D1 Board				
05 01h	f5h	01h	CXA8070	Dynamic Conv.
05 02h	f5h	02h	CXA1875	Port Expander
E Board				
06 01h	f6h	01h	CXD2100	Backend
J Board				
07 01h	f7h	01h	CXD2057	Auto Wide
07 02h	f7h	02h	SDA9288	PIP
07 03h	f7h	03h	TDA9320	Sub Colour
07 04h	f7h	04h	TDA9320	Main Colour
07 05h	f7h	05h	CXA1875	Sub Sound
07 06h	f7h	06h	TDA7309	HP Amp
07 07h	f7h	07h	TEA6422DT	Audio SW
07 08h	f7h	08h	MSP3410D	Sound Proc
07 09h	f7h	09h	TC9337F	Sound DSP

TABLE OF CONTENTS

Section	Title	Page
	Warning and Caution	3
	Self-Diagnostic Function	5
1. GENERAL		
	Overview	9
	First time operation	10
	Advanced Operations	11
	Teletext	16
2. DISASSEMBLY		
2-1.	Rear Cover Removal	17
2-2.	Chassis Assy Removal	17
2-3.	Service Position	17
2-4.	U Board Removal	17
2-5.	J Board Removal	18
2-6.	J Shield Removal	18
2-7.	B1 Board Removal	18
2-8.	Picture Tube Removal	19
	Removal and Replacement of the Main-Bracket bottom plates	20
3. SET-UP ADJUSTMENTS		
3-1.	Beam Landing	21
3-2.	Convergence	22
3-3.	Focus	24
3-4.	Screen [G2] White Balance	24
4. CIRCUIT ADJUSTMENTS		
4-1.	Electrical Adjustments	26
4-2.	Volume Electrical Adjustments	32
4-3.	Test Mode 2	33

Section	Title	Page
5. DIAGRAMS		
5-1.	Block Diagram (1)	35
	Block Diagram (2)	40
	Block Diagram (3)	45
	Block Diagram (4)	50
5-2.	Circuit Board Location	53
5-3.	Schematic Diagrams and Printed Wiring Boards	53
	* C Board	55
	* J Board	63
	* U Board	73
	* A Board	79
	* B1 Board	83
	* VM Board	88
	* D1 Board	93
	* M Board	97
	* E Board	101
	* D Board	109
	* F1 Board	113
	* H1 Board	114
	* F Board	115
5-4.	Semiconductors	117
5-5.	IC Blocks	120
6. EXPLODED VIEWS		
6-1.	Chassis	121
6-2.	Picture Tube	123
7. ELECTRICAL PARTS LIST		125

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR THE CARBON PAINTED ON THE CRT, AFTER REMOVAL OF THE ANODE CAP

WARNING !!

AN ISOLATING TRANSFORMER SHOULD BE USED DURING ANY SERVICE WORK TO AVOID POSSIBLE SHOCK HAZARD DUE TO LIVE CHASSIS. THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARKED ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION

APRES AVOIR DECONNECTE LE CAP DE'LANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION !!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHÁSSIS SOUS TENTION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÈ LORS DE TOUT DÈPANNAGE. LE CHÁSSIS DE CE RÈCEPTEUR EST DIRECTMENT RACCORDÈ Á L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS Á LA SÈCURITÈ !!

LES COMPOSANTS IDENTIFIÈS PAR UNE TRAME ET PAR UNE MARQUE ⚠ SUR LES SCHÈMAS DE PRINCIPE, LES VUES EXPLOSÈES ET LES LISTES DE PIECES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SÈCURITÈ DU FONCTIONNEMENT, NE LES REMPLACER QUE PAR DES COMPSANTS SONY DONT LE NUMÈRO DE PIÈCE EST INDIQUÈ DANS LE PRÈSENT MANUEL OU DANS DES SUPPLÈMENTS PUBLIÈS PAR SONY.

SECTION 1
GENERAL

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

Overview

This section briefly describes the buttons and controls on the TV set and the Remote Control.
Open the flaps at the front and back of his Instruction Manual for detailed illustrations.
For more information refer to the page numbers given in the overview.

Remote Control

Symbol	Description	See page
❶ TV I/⏻	TV: standby mode on / off	32
❷	TV: on-screen display	32
	Teletext: index page	42
❸	Selecting of input source	44
	Teletext: Freezing a subpage	42
❹	PIP: Swapping the screens	41
❺	PIP: Selecting the source	41
❻	PIP: Switching on and off	41
❼ 1, 2, ... 9, 0	Number buttons	32
❽	Back to the channel last selected	32
❾	Selecting of screen format	32
❿	No function on this set	
⓫	Joystick for menu selection	31
	Press OK to confirm	
⓬ MENU	Switching on and off of Menu system	31
⓭ PROGR +/–	TV: Channel selection up- and downwards	32
	Teletext: Page selection up-and downwards	42
⓮ +/–	Volume control	32
⓯	Picture mode	32
⓰	Equaliser mode	32
⓱ -/--	Selection of double digit channel numbers	32
⓲	Freezing of TV picture	32
⓳	No function on this set	
⓴	Teletext: Switching on	42
㉑	TV: Selecting of TV mode	32
	Teletext: Switching off	42
㉒	Muting of sound on / off	32
㉓ VIDEO I/⏻	VCR: Standby mode	45
Buttons under cover		
㉔	Displaying of the time	32
㉕ CH +/–	VCR operation	45
VTR 1 2 3 4 MDP	Video equipment selector	
◀◀ ▶ ▶▶ ■ ❚❚ ●	Buttons for VCR operation	
㉖	Resetting of picture setting	32

TV-set – front and top

Symbol	Description	See page
A	Headphone jack	46
B 3	S-video input jack	44
C 3, 3	Phono video / audio inputs	44
D ⏻	Indicator for Standby mode	32
E ⏻	Power switch	32
F	Selecting of input source	44
G +/–	Volume control	32
H PROGR +/–	Channel selection up- and downwards	32
I CONTROL	Control panel: Switching on / off	32

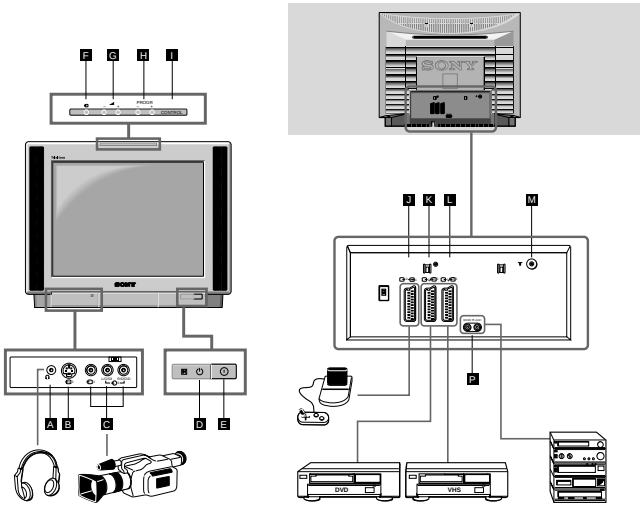

TV-set – rear

Symbol	Description	See page
J 1/ 1	21-pin Euro connector (Scart)	44
K 2/ 2	21-pin Euro connector (Scart)	44
L 3/ 3	21-pin Euro connector (Scart)	44
M	Aerial socket	30
N L/G/S/I R/D/D/D	Audio phono jacks	46

First Time Operation

The following chapter contains all the steps necessary when first installing your TV and the basic TV functions.

Step 1 Installation

A Connecting the TV Set

1 Connect the TV set to the mains socket (220-240 V. AC, 50 Hz).
2a Connect a conventional aerial cable to the socket marked ⅂ M on the rear of the TV set.
or
2b Connect your Satellite Receiver to one of the Scart connectors J K L of the TV set.

When connecting a VCR to your TV set:
We recommend that you use the preset function Manual Programme Preset (page 33) to tune in the VCR signal to programme position 0.

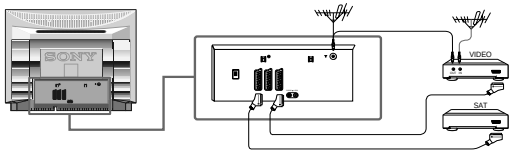

B Inserting the Batteries into the Remote Control

Make sure to insert the batteries using the correct polarities.
Dispose of exhausted batteries according to your local regulations.

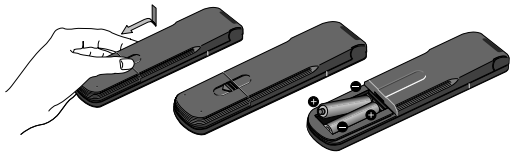

C Switching on the TV Set

- Press the switch ⏻ E at the front of the TV set.

If the standby mode indicator ⏻ D on the TV is lit, press TV I / ⏻ ❶ on the Remote Control to switch on the TV set.

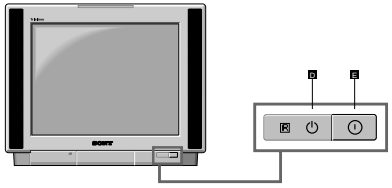

Step 2 Basic Presetting

A The Menu System

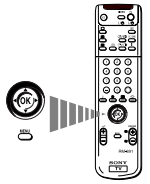

Your TV uses an on-screen menu system to guide you through the operations.
Use the following buttons on the Remote Control to operate the menu system:

- Press MENU ⓬ to switch the menu on and off.
- Use ◄, ►, ▲, ▼ of the joystick ⓫ to select within the menu system.
- Press OK to store.
- When menu is switched off:
  Press ◄ to return to the last menu screen.

B Selecting Language and Country

1 Press the MENU ⓬ button.
The menu Language / Country appears on the screen.
2 Push the joystick ⓫ to ►. Push the joystick ⓫ to ▼ to select the language. Press OK ⓫.
The menus appear in the selected language.
3 Push the joystick ⓫ to ▼ to select Country. Push the joystick ⓫ to ►.
4 Select the country in which you will operate the TV set using ▼ or ▲. Confirm by pressing OK ⓫.
The menu Auto Tuning appears.

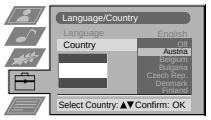

C Automatic Tuning In of Channels

- Push the joystick ⓫ to ►.
After all available channels are stored, the TV goes back to the programme position with which you started the automatic tuning. Your TV is now ready for use.

- To stop the automatic tuning: Press OK ⓫.
- If you wish to change the sequence of the stored channels, go to Sorting Programme Positions in Advanced Presetting.
- If you need to change or repeat the tuning afterwards (e.g. when you move house) : select the menu Auto Tuning in the Set Up menu.

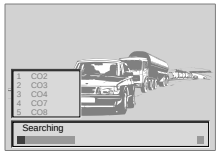

Advanced Operation

Advanced Presetting

Sorting of Programme Positions



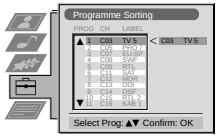

After having used Automatic Tuning of channels you may wish to rearrange the order of the channels.

1 Press MENU. Select the symbol using ▼. Push to ►.

2 Select Programme Sorting using ▼. Push to ► to enter.

3 Select the programme position of the channel you wish to sort using ▲ or ▼. Push to ► to enter.

4 Move the channel to the new programme position using ▲ or ▼. Store by pressing OK.
The channel is now at the new position. The other programme positions move accordingly.

5 To sort other programme positions repeat steps 3 to 4.

6 Press MENU to return to the normal TV screen.

Manual Tuning In of Channels

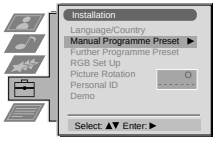

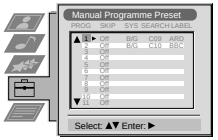

Use this function to preset channels or a video input source one by one to programme positions of your choice.

1 Press MENU. Select the symbol using ▼. Push to ►.

2 Select Installation using ▼. Push to ► to enter.
Select Manual Programme Preset using ▼. Push to ► to enter.

3 Select the programme position by pushing to ▲ or ▼. Push twice to ►.
The column SYS is highlighted.

4 Select the TV system using ▲ or ▼. Push to ► to enter.
Available TV systems are B/G for western European countries, D/K for eastern European countries, EXT for a video input source (please go to step 5c after selecting EXT)
The column SEARCH is highlighted.

5 Select your method for the channel tuning using ▲ or ▼. Push to ► to enter.
You have the choice between **C** for a terrestrial channel, **S** for a cable channel, **F** for direct frequency input.

a Direct Channel Input - S, C or F

For channel numbers input a two digit number, for the channel frequency a three digit number.

- Select the two or three digits by using the number buttons 0 to 9.
- To start the search and to store the channel, press OK.
- To preset other channels repeat steps 3 to 5a.

b Channel search (SEARCH)

Use Search if you do not know the channel number or frequency

- Start the search for the next available channel by pushing to ▼.
- Store the channel by pressing OK or continue the search by pushing again to ▼.
- To search for other channels repeat steps 3 to 5b.

c For video input sources (EXT)

- Select the Video Input source using ▲ or ▼.
- Store your selection by pressing OK.
- To allocate other sources repeat steps 3 to 5c.

6 Press MENU to return to the normal TV screen.

Advanced Operation

Advanced Presetting

Sorting of Programme Positions



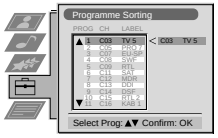

After having used Automatic Tuning of channels you may wish to rearrange the order of the channels.

1 Press MENU. Select the symbol using ▼. Push to ►.

2 Select Programme Sorting using ▼. Push to ► to enter.

3 Select the programme position of the channel you wish to sort using ▲ or ▼. Push to ► to enter.

4 Move the channel to the new programme position using ▲ or ▼. Store by pressing OK.
The channel is now at the new position. The other programme positions move accordingly.

5 To sort other programme positions repeat steps 3 to 4.

6 Press MENU to return to the normal TV screen.

Manual Tuning In of Channels

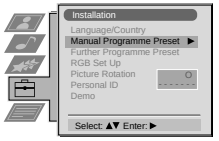

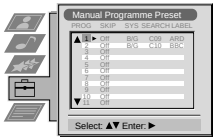

Use this function to preset channels or a video input source one by one to programme positions of your choice.

1 Press MENU. Select the symbol using ▼. Push to ►.

2 Select Installation using ▼. Push to ► to enter.
Select Manual Programme Preset using ▼. Push to ► to enter.

3 Select the programme position by pushing to ▲ or ▼. Push twice to ►.
The column SYS is highlighted.

4 Select the TV system using ▲ or ▼. Push to ► to enter.
Available TV systems are B/G for western European countries, D/K for eastern European countries, EXT for a video input source (please go to step 5c after selecting EXT)
The column SEARCH is highlighted.

5 Select your method for the channel tuning using ▲ or ▼. Push to ► to enter.
You have the choice between **C** for a terrestrial channel, **S** for a cable channel, **F** for direct frequency input.

a Direct Channel Input - S, C or F

For channel numbers input a two digit number, for the channel frequency a three digit number.

- Select the two or three digits by using the number buttons 0 to 9.
- To start the search and to store the channel, press OK.
- To preset other channels repeat steps 3 to 5a.

b Channel search (SEARCH)

Use Search if you do not know the channel number or frequency

- Start the search for the next available channel by pushing to ▼.
- Store the channel by pressing OK or continue the search by pushing again to ▼.
- To search for other channels repeat steps 3 to 5b.

c For video input sources (EXT)

- Select the Video Input source using ▲ or ▼.
- Store your selection by pressing OK.
- To allocate other sources repeat steps 3 to 5c.

6 Press MENU to return to the normal TV screen.

Captioning a Station Name

During presetting the channels are usually labelled automatically.
You can, however, individually name a channel or a video input source.

1 Press MENU. Select the symbol using ▼. Push to ►.

2 Select Installation using ▼. Push to ► to enter.
Select Manual Programme Preset using ▼. Push to ► to enter.

3 Select the programme position of the channel or the video source you wish to label by pushing to ▼ or ▲. Push repeatedly to ► until the first element of the position LABEL is highlighted.

4 Select a number, a letter, + or a blank using ▲ or ▼. Push to ► to confirm.
Select the other four characters in the same way.

5 Store your selection by pressing OK.

6 To label other channels or video sources repeat steps 3 to 5.

7 Press MENU to return to the normal TV screen.

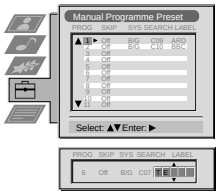

Skipping of Programme Positions

In case of 100 programme positions there may be unused positions, which you can skip in the menu Manual Programme Preset. When changing channels with the PROGR + / – buttons they do then not appear.
You can, however, still select them using the number buttons.

1 Press MENU. Select the symbol using ▼. Push to ►.

2 Select Installation using ▼. Push to ► to enter.
Select Manual Programme Preset using ▼. Push to ► to enter.

3 Select the programme position you wish to skip by pushing to ▲ or ▼.
Push to ► to enter.
The column SKIP is highlighted.

4 Select ON using ▼.

5 Store by pressing OK.

6 To skip other programme positions repeat steps 3 to 5.

7 Press MENU to return to the normal TV screen.

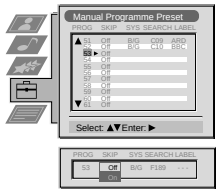

Using of Further Programme Preset

Using the menu Further Programme Preset you can

a) individually adjust the volume level of each channel.

b) improve the quality of a weak channel (picture or sound distortions) with manual fine tuning.

c) preset the AV output for programme positions of those channels with scrambled signals (e.g. from a Pay TV decoder). In this way a connected VCR records the unscrambled signal.

1 Press MENU. Select the symbol using ▼. Push to ►.

2 Select Installation using ▼. Push to ► to enter. Select Further Programme Preset using ▼. Push to ► to enter.

3 Select the programme position of the desired channel by pushing to ▲ or ▼.
Push repeatedly to ► to select:
VOL (Volume Offset), AFT (Automatic Fine Tuning) or DECODER.
The selected item changes colour.

4a VOL
Push to ▲ or ▼ to adjust the volume level (range -7 to +7) of the channel.
Store by pressing OK.
Repeat steps 3 and 4a if you wish to adjust the volume level of other channels.

b AFT
Push to ▼ to select OFF. Push to ► to enter Manual Fine Tuning. Push to ▲ or ▼ to fine tune the channel (range -15 to +15). Store by pressing OK.
Repeat steps 3 and 4b if you wish to fine tune other channels.

c DECODER
Push to ▲ or ▼ to select AV1 (Euro AV socket 1) or AV2 (Euro AV socket 2) as output for the video source on this programme position. Store by pressing OK.
Repeat steps 3 and 4c if you wish to preset the AV output of other video sources.

Should you use Auto Tuning afterwards, this setting will be cancelled.

5 Press MENU to return to the normal TV screen.

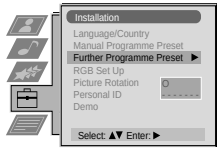

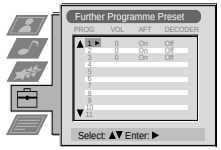

Adjusting the Picture Geometry for an RGB Source

When connecting an RGB source such as a Sony playstation you may need to readjust the picture geometry.

1 Select the connected RGB source by pressing repeatedly.
2 Press MENU. Select the symbol using ▼. Push to ►.
3 Select Installation using ▼. Push to ► to enter. Select RGB Set Up using ▼. Push to ► to enter.
4 Select H Centre by pushing to ►. Adjust the centre of the picture (range from -5 to +5) using ▲ or ▼. Store by pressing OK.
5 Select H Size using ▼. Push to ► to enter. Adjust the horizontal coordinates (range from -5 to +5) using ▲ or ▼. Store by pressing OK.
6 Press MENU to return to the normal TV screen.

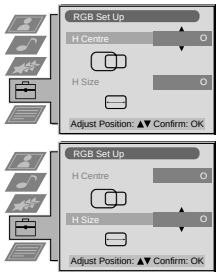

Adjusting the Picture Rotation

Because of the earth magnetism the picture might slant. In this case you can readjust the picture.

1 Press MENU. Select the symbol using ▼. Push to ►.
2 Select Installation using ▼. Push to ► to enter. Select Picture Rotation using ▼. Push to ► to enter.
3 Adjust the Picture Rotation (adjusting range -4 to +4) by pushing to ▲ or ▼. Store by pressing OK.
4 Press MENU to return to the normal TV picture.

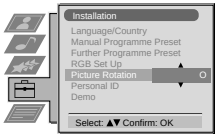

Inputting Your Personal ID

You can programme your TV with a safety code, so that you can be traced if your TV is stolen and recovered. This code can only be input once!
Make sure to write it down in this Instruction Manual.

1 Press MENU. Select the symbol using ▼. Push to ►.
2 Select Installation using ▼. Push to ► to enter. Select Personal ID using ▼. Push to ► to enter.
3a Select the first of a total of 11 characters (letter, number, + or a blank) by using ▲ or ▼.
b Push to ► to go to the next character.
c Repeat a and b for all characters.
4 Store by pressing OK.
5 Press MENU to return to the normal TV screen.

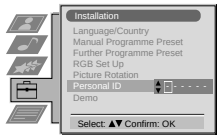

Presetting and Labelling of Input Sources

Using AV Preset you can select the automatic format function and label an input source.

1 Press MENU. Select the symbol using ▼. Push to ►.
2 Select AV Preset using ▼. Push to ► to enter.
3 Select the desired AV input (AV 1, 2 or 3) using ▲ or ▼. Push to ► enter.

After each step you have the choice between memorizing (press OK) or going to the next item (push to ►).

4 **For automatic format selection of the AV input**:
a Push to ► to select Auto Format.
b Select On or Off using ▲ or ▼.
5 **To label the source**:
a Push to ► to select Label.
b Select the first character using ▲ or ▼. Push to ► to confirm.
c Repeat step b to select the other 4 characters.
d Store by pressing OK.
6 Repeat steps 3 to 5 for the other AV inputs.
7 **Selecting the AV3 Input Source:**

In case of AV3 you have the choice between the front AV3 sockets B C or the rear Scart 3 L connector.

a Push to ▼ to select AV3 Input. Push to ► to enter.
b Select Front or Rear using ▲ or ▼.
c Store by pressing OK.
8 Press MENU to return to the normal TV screen.

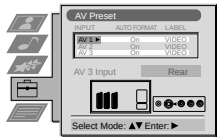

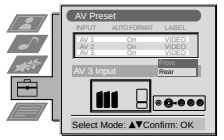

Advanced TV operation

Adjusting Picture and Sound

Picture and sound are adjusted at the factory. You can, however, adjust them individually.

1 Press MENU.
Select the symbol for Picture or for Sound using ▲ or ▼.
Push to ► to enter.
The menu Picture or Sound Control is displayed.

2 Select the desired item using ▲ or ▼. Push to ► to enter.

3 Adjust the selected item using ▲, ▼, ► and ◄. Press OK to store.

Refer to the tables on this and the following page for more information.

4 Repeat steps 2 and 3 to adjust other items.

5 Press MENU to return to the normal TV screen.

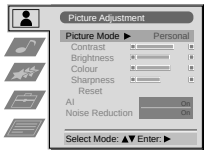

Picture Control

Item	Effect/Operation
Picture Mode	▼ Personal (for individual settings) Movie (for movie broadcasts) ▲ Live (for live broadcasts)
Contrast	Less ◄ ► More
Brightness*	Darker ◄ ► Brighter
Colour*	Less ◄ ► More
Hue**	Greenish ◄ ► Reddish
Sharpness*	Softer ◄ ► Sharper
Reset	Resets picture to the factory preset levels
AI (Artificial Intelligence)	▼ Off: normal ▲ On: Automatic optimization of contrast level according to the TV signal
Noise Reduction	▼ Off: Normal ▲ On: Reduces picture noise in case of a weak broadcasting signal

* Only if Personal is selected in Picture Mode
** Only available for NTSC colour signal (e.g. US video tapes)



Sound Control

Item	Effect/Operation
Equaliser Mode	Select between the following sound settings ▲ Personal Vocal Jazz Rock Pop ▼ Flat (fixed setting, cannot be adjusted)
Equaliser adjustment	You can adjust the mode selected in Equaliser mode by cutting and boosting of 5 selected frequency bands. Only the changes made in Personal can be stored, the others return to factory setting. Select the desired bar using ► or ◄, adjust using ▲ and ▼. Press OK to store.
Balance	▲ More left ▼ More right
Loudness	▲ Off: Normal ▼ On: For music broadcasts
Space	▲ Off: Normal ▼ On: Special accoustic effect
Auto Volume Control	▼ On: volume level of the channels will stay the same independent of the broadcast signal (e.g. in case of advertisements) ▲ Off: volume level changes according to the broadcast signal
Dual Sound	• For a bilingual broadcast: A for channel 1◄ ►B for channel 2 • For a stereo broadcast: Stereo◄ ►Mono For a Nicam broadcast: When receiving a Nicam broadcast »NICAM« appears briefly on the screen.
Headphones Volume Dual Sound	Less ◄ ►More • For a bilingual broadcast: A for channel 1◄ ►B for channel 2 • For a stereo broadcast: Stereo◄ ►Mono • PIP When PIP is switched on, you can additionally select the PIP sound for the headphones

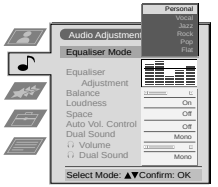

Using the Features Menu

1 Press MENU. Select the symbol using ▼. Push to ►.
2 Select the desired menu item using ▼. Push to ► to enter.
3 Select the desired setting using ▲ or ▼.
4 Store by pressing OK.
5 Press MENU to return to the normal TV screen.

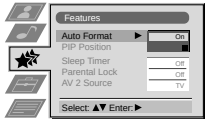

Features

Item	Effect/Operation
Auto Format	▼ On: Automatic selection of the screen format ▲ Off: Normal mode
PIP Position	See next page for details
Sleep Timer	You can select a time period after which the TV switches itself into standby mode ▼ Off 10 min. 20 min. ⋮ ▲ 90 min.
Parental Lock	▼ Off: Normal mode ▲ On: TV can only be switched on out of standby-mode using the Remote Commander, the buttons on the TV do not work.
AV2 Source	You can select the source to be output from the Scart connector 2 / 2. In this way you can record from this socket while watching another source. ▼ TV audio / video signal from the aerial AV1 audio / video signal from Scart 1 AV2 audio / video signal from Scart 2 ▲ AV3 audio / video signal from front or rear connectors

Using Picture-in-Picture

Picture-in-Picture (PIP) lets you display a second, small screen within the main TV picture. In this way you can watch the video output from any connected equipment, e.g., from a VCR, while watching TV.



Switching PIP on and off

- Press / 6.

The small screen is displayed.

The source of the small screen is the one last used when the TV was on.

- Press / 6 again to switch PIP off.

Selecting a PIP source

1 Press 5.
The symbol is displayed in the bottom left-hand corner of the screen.



2 Press 3 repeatedly until the desired source appears.

You can select between
TV, AV1, AV2, YC2, AV3 and YC3.

- If no video source (e.g. VCR or Camera) is connected, the PIP will be noisy.
- You cannot display an RGB source in the PIP.



Swapping the screens

- Press / 4.

The two screens are swapped.

Changing channels if the TV picture is in the PIP

- First press , then the respective number buttons.

Changing the PIP position

There are four different positions of the small screen within the main screen. Select the PIP position in the Features menu.

1 Press MENU. Select the symbol using ▼. Push to ► to enter.
2 Select PIP position by pushing to ▼. Push to ► to enter.
3 Select the desired position using ▼ or ▲. Press OK to select.
4 Press MENU to return to the normal TV screen.

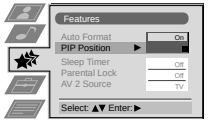

Teletext

Most TV channels broadcast information via teletext. The index page of the teletext service (usually page 100) gives you information on how to use their service.

! Make sure to use a TV channel with a strong signal, otherwise there may be Teletext errors.

Direct Access Functions

Switching Teletext on and off

1 Select the TV channel which carries the teletext service you want to view.

2a Press ☰ ⓴ once to switch teletext on.
The teletext menu is displayed.
b Press ☰ twice for Mix mode.
The TV broadcast and the Teletext display are overlapped.

3 Press ▢ ㉑ or press ☰ a third time to switch teletext off.

Selecting a Teletext Page

Direct Page Selection

- Input the three digits of the page number using the number buttons ❼.

If you have made a mistake:
Type in any three digits, then reenter the correct page number.

Page Catching

1 Select a teletext page which has several page numbers on it (e.g., the index page).

2 Press OK ⓫.
Page Catching is displayed at the top of the page

3 Select the desired page number using ▲ or ▼ ⓫ and press OK.
The requested page is displayed after some seconds.

Selecting the next or the preceding page

- Press P▲ ⓭ (Page +) or P▼ (Page -).

Selecting the index page

- Press i⁺ ❷.

Selecting a subpage

A teletext page may consist out of several subpages. In this case an information line is displayed, showing the number of the subpages.

- Select the mode by pushing to ▲. Select the subpage by using ▲ or ▼.

Freezing a Teletext subpage

1 Press ⏭ ❸ or ⦿
The symbol ⦿ ❸ is displayed and the subpage is not updated.

2 Press ☰ ⓴ to resume normal teletext reception.

Using Fastext*

*depending on availability of service

Fastext lets you access pages with one button stroke. When Fastext is broadcast, a colour-coded menu appears at the bottom of the screen. The colours of this menu correspond to the red, green, yellow and blue buttons on the Remote Control ❾, ❿, ⓮, ⓯.

- Press the coloured button which corresponds to the colour in the colour-coded menu.

Using the Teletext Menu

This TV set has a menu-guided teletext system. When teletext is switched on you can use the joystick buttons to operate the teletext menu.

Select the menu functions as follows:

1 Press MENU ⓬.
The Teletext menu is superimposed on the teletext display.

2 Select the teletext function using ▲ or ▼ ⓫. Push to ▶ to enter.

Top/Bottom/Full

For convenient reading of a Teletext page you can enlarge it.
After having selected the function, a sub menu Top ▲ Bottom ▼ Full OK is displayed.

- Push to ▲ to enlarge the upper half of the screen, push to ▼ to enlarge the lower half. Press OK to resume the normal size.

Text Clear

After having selected the function, you can watch a TV channel while waiting for a requested Teletext page. As soon as the page is available, the symbol ☰ changes colour.

- Press ☰ to view the page.

Reveal

Some teletext pages contain hidden information (e.g., for a quiz), which you can reveal.
After having selected the function, the hidden information appears.

- Press ☰ to resume the normal Teletext operation.

Time Page*

*depending on availability of service

You can call up a time-coded page - such as an alarm page - at a time specified by you.

After having selected the function a sub menu is displayed.

1 Select On using ▲ or ▼. Push to ▶ to enter.

2 Enter the three digits of the desired page using the number buttons ❼.
Push to ▶ after each digit.

3 Enter the four digits of the desired time using the number buttons ❼.
Push to ▶ after each digit.

4 Press OK to store.
The time is displayed in the top left-handed corner of the screen.
At the requested time the page is displayed.

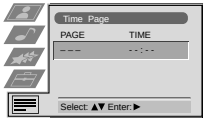

SECTION 2
DISASSEMBLY

2-1. REAR COVER REMOVAL

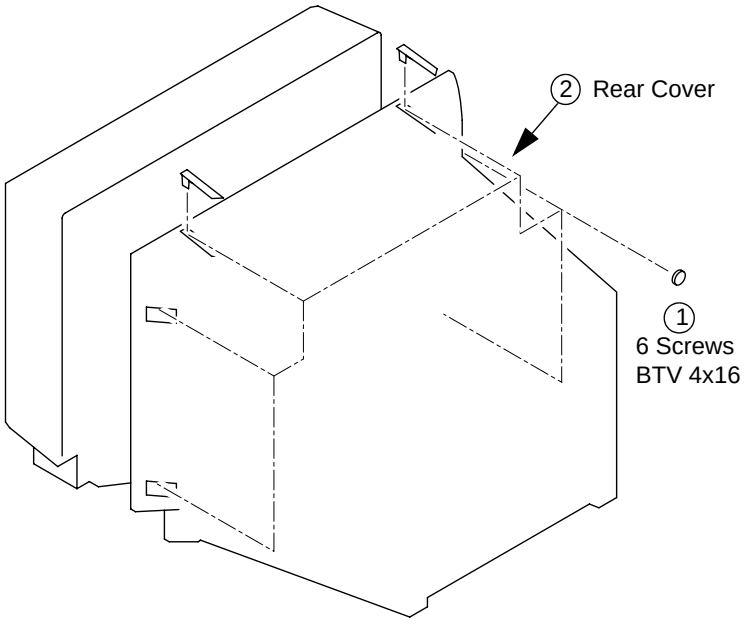

2-2. CHASSIS ASSY REMOVAL

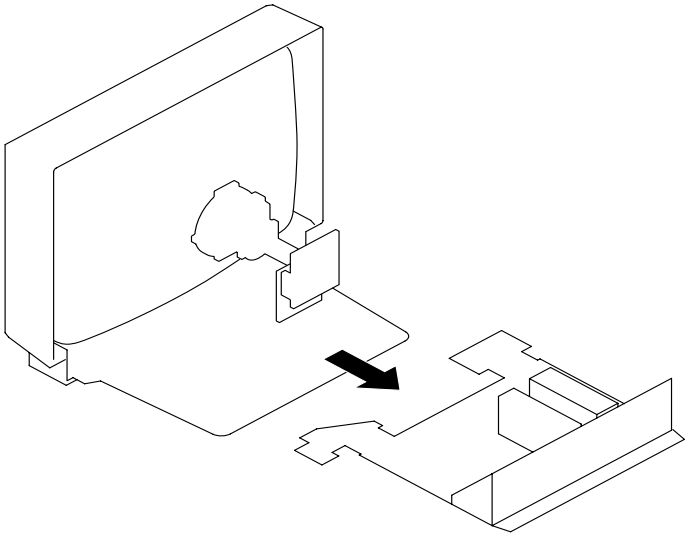

2-3. SERVICE POSITION

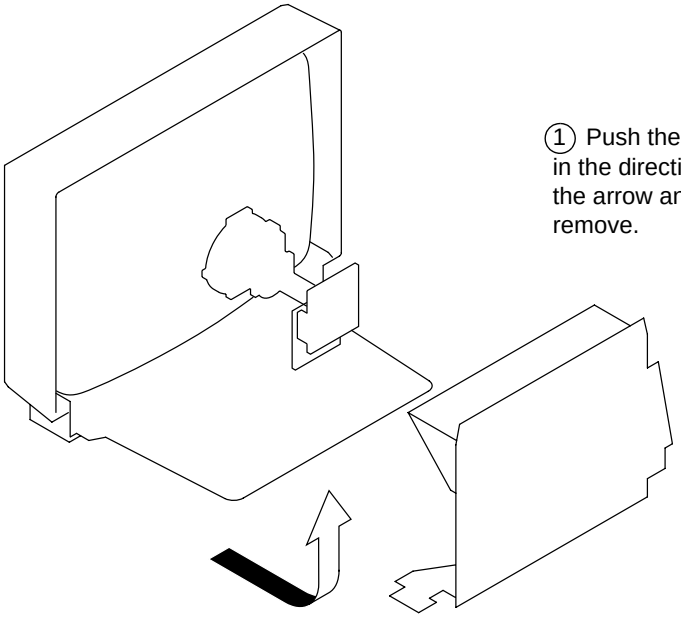

2-4. U BOARD REMOVAL

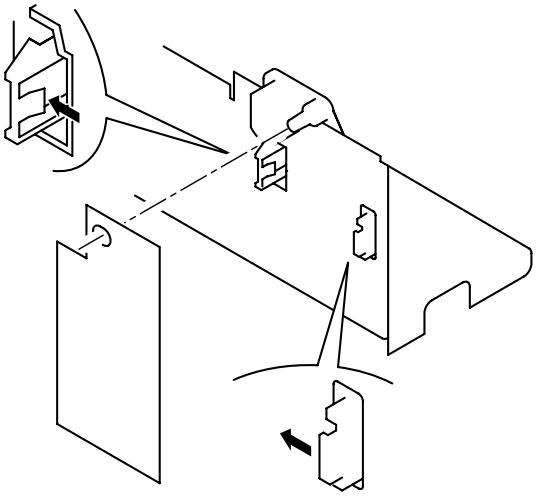

2-5. J BOARD REMOVAL

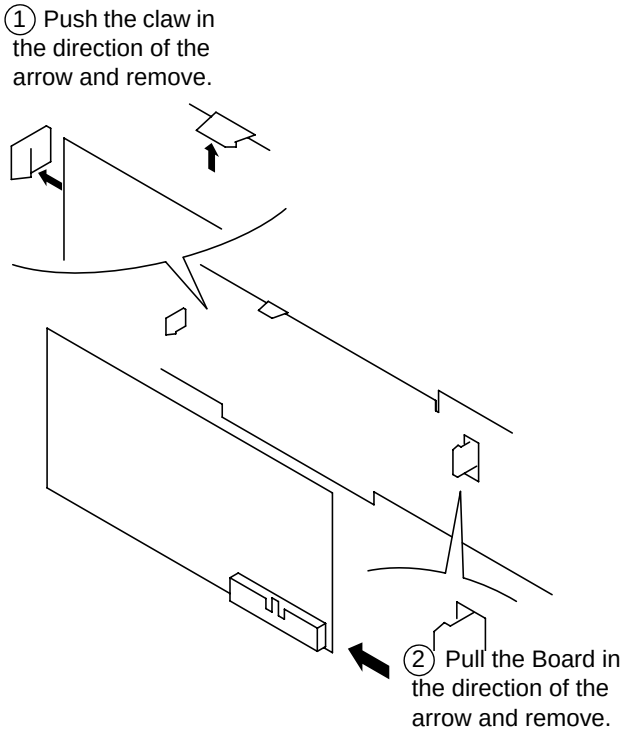

2-6. J SHIELD REMOVAL

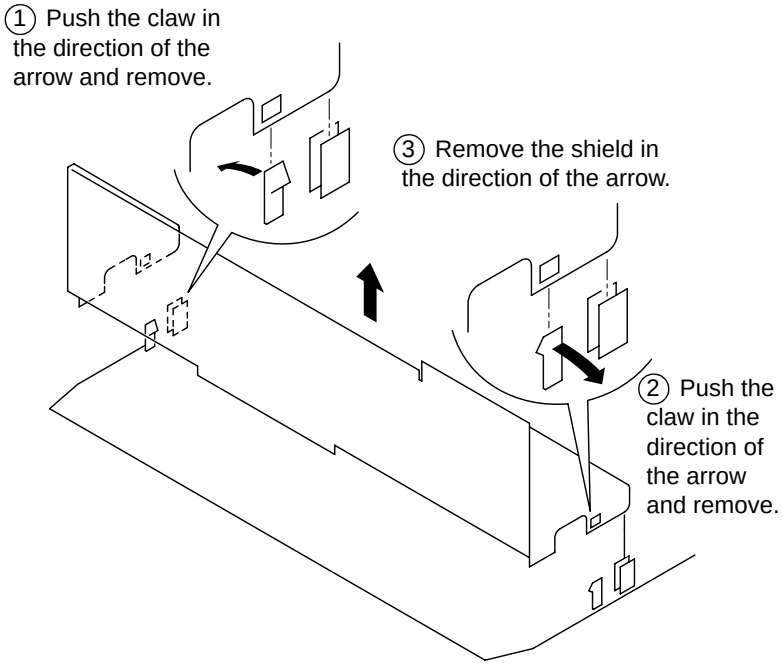

2-7. B1 BOARD REMOVAL

NOTE

All other boards are removed in a similar manner to those shown

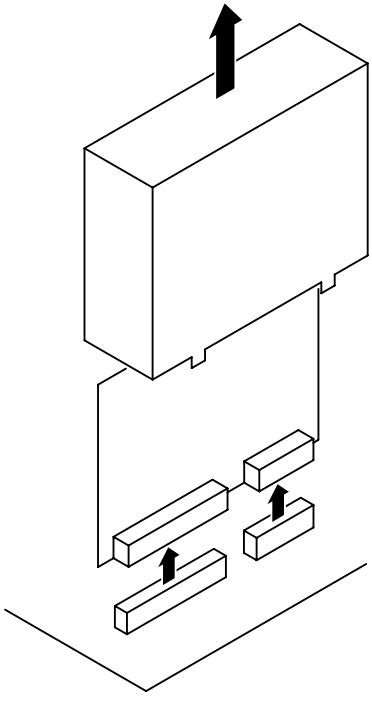

2-8. PICTURE TUBE REMOVAL

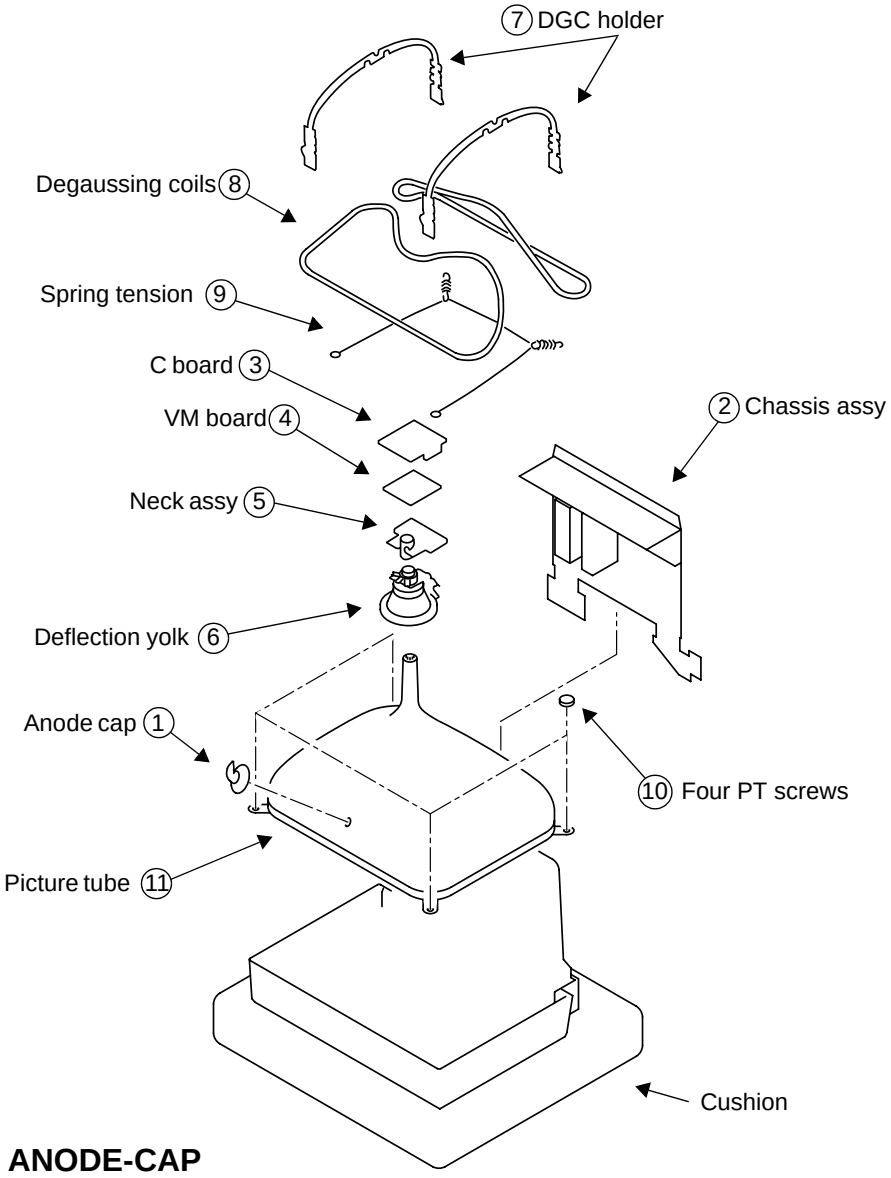

• REMOVAL OF ANODE-CAP

Note : Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT, after removing the anode.

*** REMOVING PROCEDURES.**

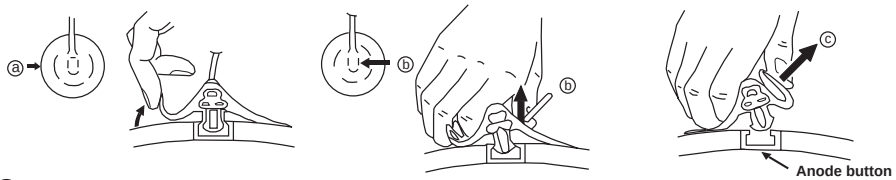

① Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⓑ

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow ⓒ

• HOW TO HANDLE THE ANODE-CAP

① To prevent damaging the surface of the anode-cap do not use sharp materials.
② Do not apply too great a pressure on the rubber, as this may cause damage to the anode connector.
③ A metal fitting called a shatter hook terminal is fitted inside the rubber cap. Do not turn the rubber foot over excessively this may cause damage if the shatter hook sticks out.

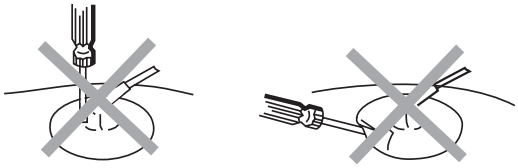

REMOVAL AND REPLACEMENT OF THE MAIN-BRACKET BOTTOM PLATES.

⚠ For safety reasons, on no account should the plates be removed and not refitted after servicing.

(1) REMOVING THE PLATES

In the event of servicing being required to the solder side of the D Board printed wiring board, the bottom plates fitted to the main chassis bracket require to be removed.
This is performed by cutting the gates with a sharp wire cutter at the locations indicated by arrows.

Note : There are 4 plates fitted to the main bracket and secured by 4 gates.
Only remove the necessary plate to gain access to the printed wiring board.

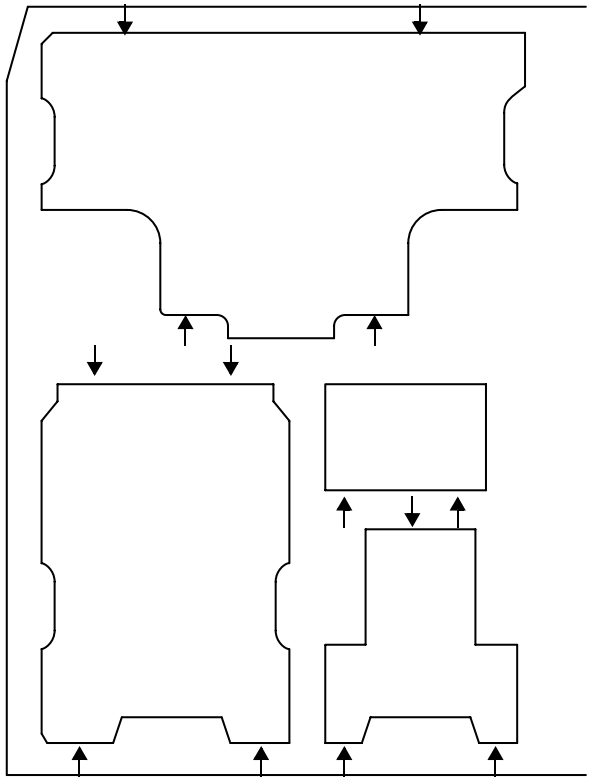

(2) REFITTING THE PLATES

Because the plates differ in size it is important that the correct plates are refitted in their original location.

Please note that the plates need to be rotated 180 degrees from the cut position to allow the tabs to be fitted in the catch positions.

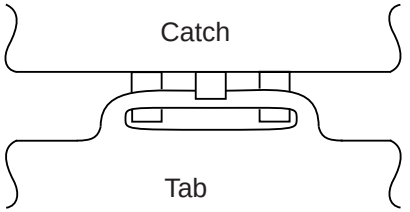

SECTION 3
SET-UP ADJUSTMENTS

- When complete readjustment is necessary or a new picture tube is installed, carry out the following adjustments.
- Unless there are specific instructions to the contrary, carry out these adjustments with the rated power supply.
- Unless there are specific instructions to the contrary, set the controls and switches to the following settings:

Contrast ..... normal

Brightness ..... normal

Carry out the following adjustments in this order:

3-1. Beam Landing
3-2. Convergence
3-3. Focus
3-4. White balance

Note: Test equipment required
1. Color bar/pattern generator.
2. Degausser.
3. Digital multimeter.
4. Oscilloscope.

3-1. BEAM LANDING

Preparation:

1. In order to reduce the influence of geomagnetism on the set's picture tube, face it in an easterly or westerly direction.
2. Switch on the set's power and degauss with the degausser.

(1) Adjustment of Correction Magnet for Y-Splitting Axis

1. Input a crosshatch signal from the pattern generator.
2. Set the Picture control to minimum and confirm that the Brightness control is set to normal.
3. Position the neck assembly as indicated in Fig.3-2.
4. Move the deflection yolk as far forward as is possible.
5. Adjust the upper and lower pin symmetrically by opening or closing the Y-splitting axis correction magnets located on the neck assembly.
6. Return the deflection yolk to its original position.

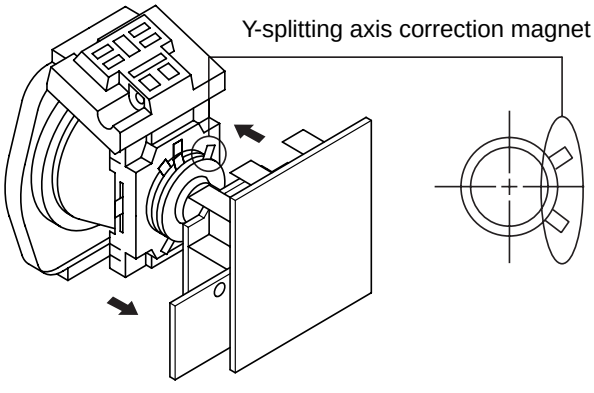

Caution :

High voltages are present on the Deflection yolk terminals - take care when handling the Deflection yolk whilst carrying out adjustments.

(2) Landing

Note : Before carrying out the following adjustments adjust the magnets as indicated below [See Fig.3-3].

1. Input an all-white signal from the pattern generator. Maximize the picture setting and adjust the Brightness setting.
2. Rough-adjust the focus and horizontal convergence.
3. Loosen the deflection yolk screws and align the purity adjustment knob to its central position. [See Fig.3-1].
4. Switch from the all-white pattern to an all-green pattern.
5. Move the deflection yolk backwards and adjust with the purity magnet so that the green is at the centre and it aligns symmetrically. [See Fig.3-4].
6. Move the deflection yolk forward and adjust so that the entire screen becomes green.
7. Switch the raster signal to red, then to blue and verify the landing condition.
8. When the position of the deflection yolk has been determined, fasten the deflection yolk with the screw.
9. If the beam does not land correctly in all the corners of the screen, use magnets to correct it. [See Fig.3-5].

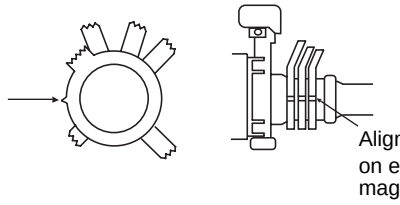

Fig.3-3

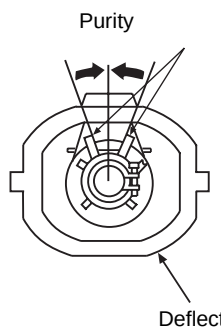

Fig.3-1

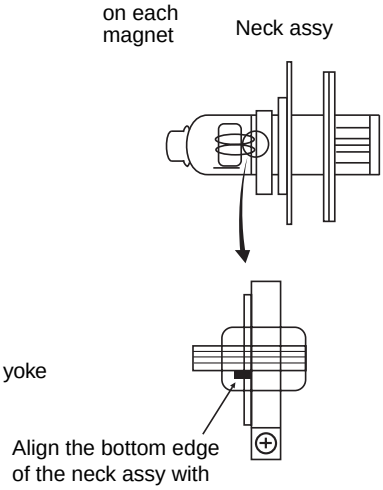

Fig.3-2

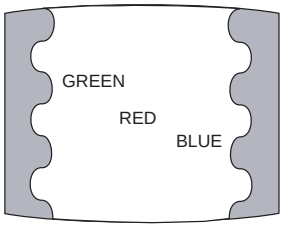

Fig.3-4

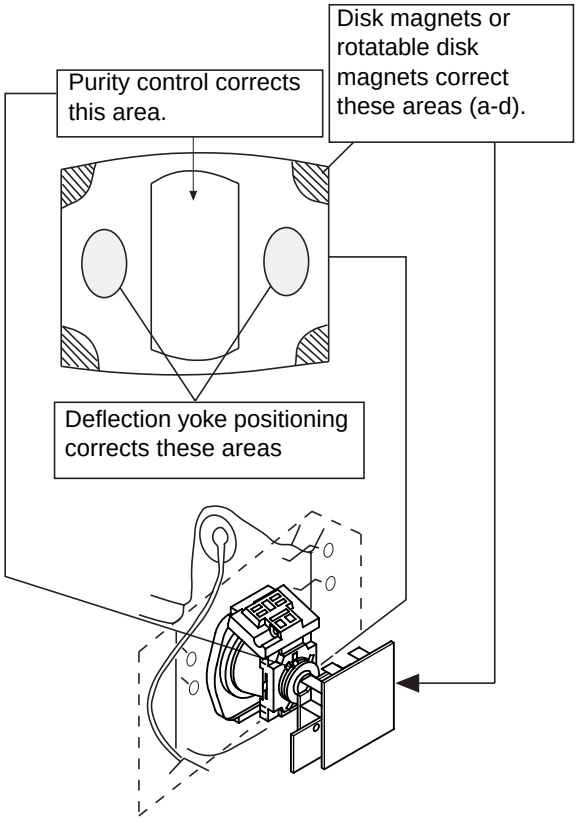

Fig. 3-5

3-2. CONVERGENCE

(1) Screen centre convergence [Static convergence]

1. Input a dot signal from the pattern generator. Normalize the picture setting.
2. [Moving horizontally], adjust the H.STAT control so that the horizontal red, green and blue dots coincide at the centre of the screen.
3. [Moving vertically], adjust the V.STAT magnet so that the vertical red, green and blue dots coincide at the centre of the screen.

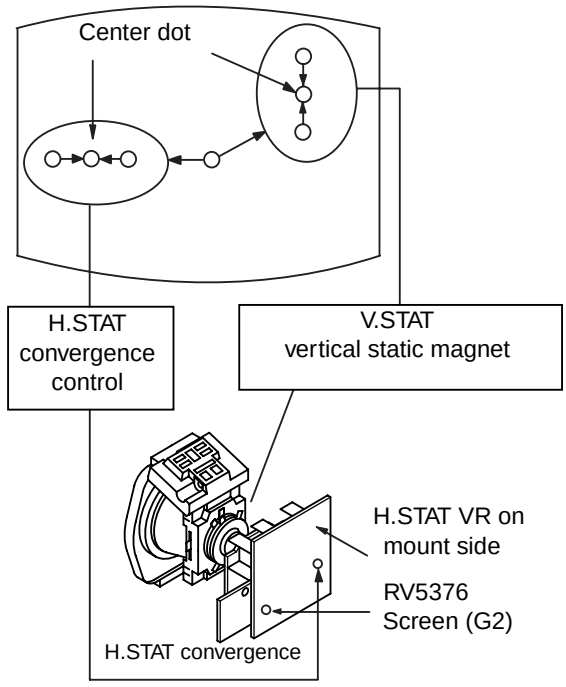

- If the horizontal dots are unable to coincide with the variable range of the H.STAT convergence, adjust together with the V.STAT convergence while tracking.
  [Adjust the convergence by tilting the V.STAT convergence or by opening and closing the V.STAT convergence.]

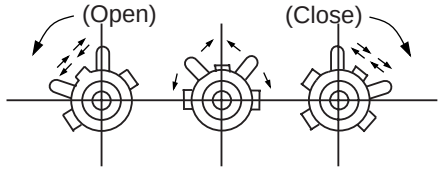

4. Movement of the red, green and blue dots by tilting the V.STAT magnet and by opening or closing the V.STAT magnet.

a). By opening or closing the V.STAT magnet, the red, green and blue dots move as indicated below.

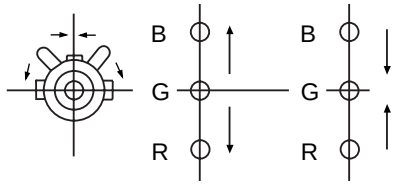

b). By rotating the V.STAT magnet counter clockwise, the red, green and blue dots move as indicated below.

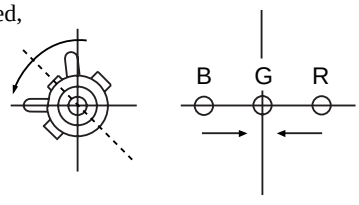

c). By rotating the V.STAT magnet clockwise, the red, green and blue dots move in the direction indicated below.

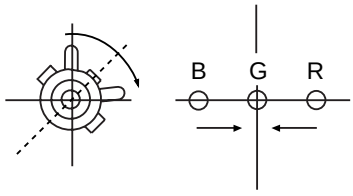

d). By opening or closing the V.STAT magnet, the red, green and blue dots move in the direction indicated below.

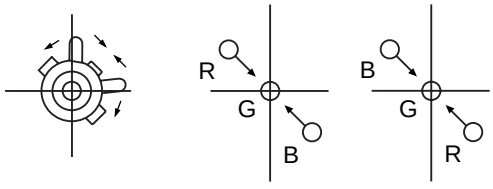

Note : If the blue dot does not coincide with the red and green points correct the points by using the BMC [Hexapole] magnet.

5. Correction for HMC [horizontal mis-convergence] and VMC [vertical mis-convergence] by using the BMC [Hexapole] magnet.

a). HMC correction by BMC [Hexapole] magnet and movement of the electron beam.

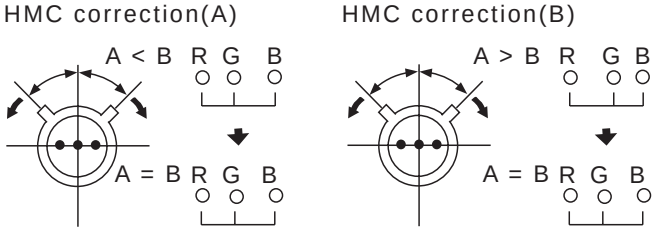

b). VMC correction by BMC [Hexapole] magnet and movement of the electron beam.

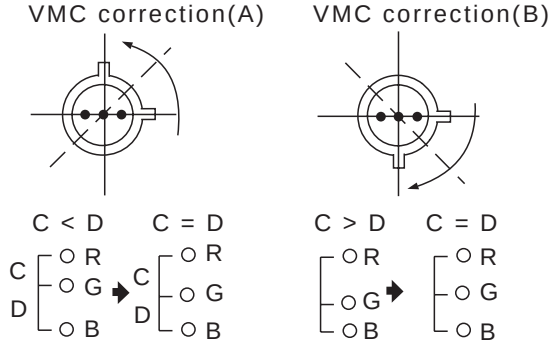

HAMP

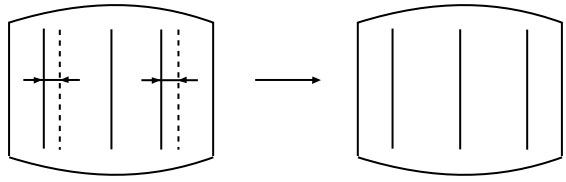

7. HTIL correction can be performed by adding a THL correction ASSY to the DY.

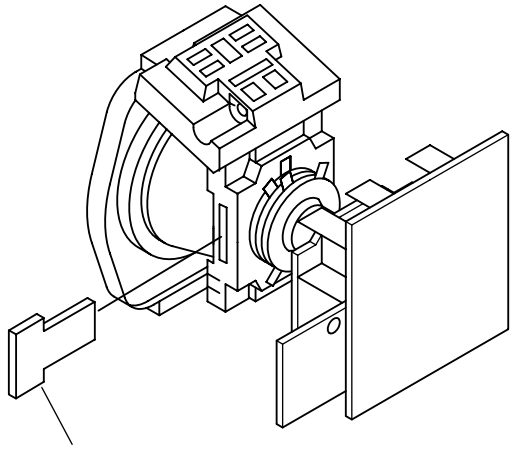

HTIL

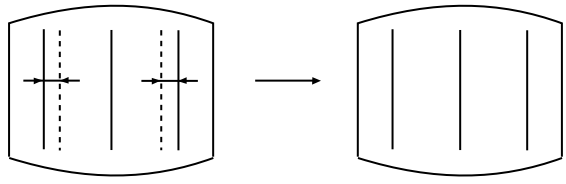

Layout of each control

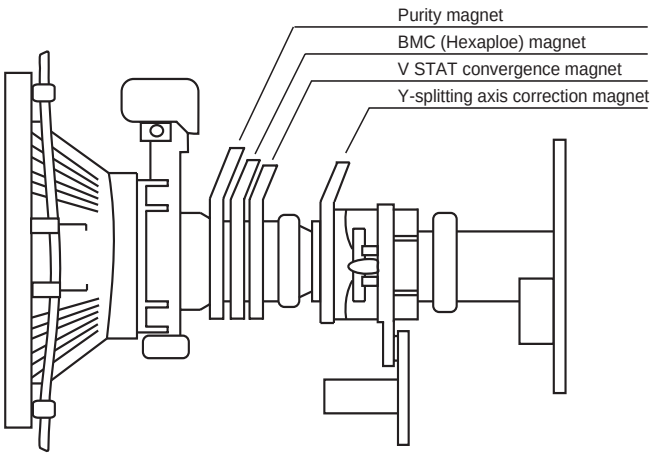

Fig 3-5

Note : If you are unable to adjust the corner convergence properly, this can be corrected with the use of permalloys.

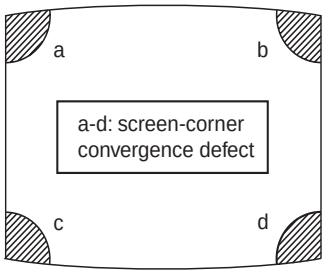

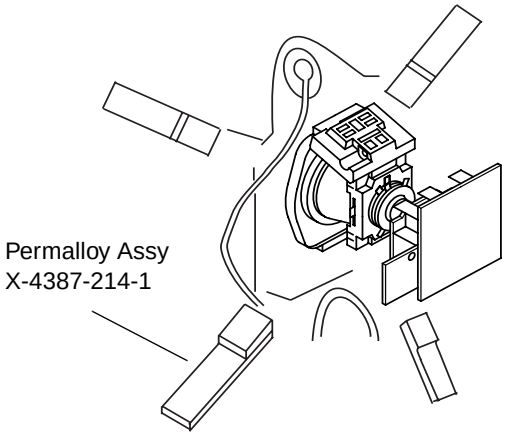

Convergence adjustment with permalloy

3-3. FOCUS

1. Receive a television broadcast signal.
2. Normalize the picture setting.
3. Adjust the focus control located on the flyback transformer to obtain the best focus at the centre of the screen.
   Bring only the centre area of the screen into focus, the magenta-ring appears on the screen. In this case, adjust the focus to optimize the screen uniformly.

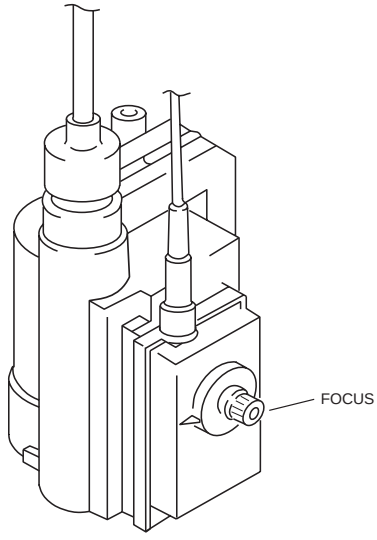

3-4. SCREEN (G2), WHITE BALANCE

[Adjustment in the service mode using the remote commander]

G2 adjustment (RV5376)

1. Input a dot signal from the pattern generator.
2. Set the Picture, Brightness and Colour to minimum.
3. Apply 175V DC from an external power supply to the R, G and B cathodes of the CRT.
4. Whilst watching the picture, adjust the G2 control RV5376 [SCREEN] located on the C Board to the point just before the flyback return lines disappear.

White balance adjustment for TV mode

1. Input an all-white signal.
2. Enter into the Service Mode by pressing ‘TEST’, ‘TEST’ and ‘MENU’ ‘MENU’on the Service Commander.
3. Select ‘Backend’ from the on screen menu display and press ‘OK’.
4. The ‘Backend’ menu will appear on the screen.
5. Set the contrast to MAX.
6. Set the ‘R DRIVE’ to 41.
7. Adjust the ‘G DRIVE’ and ‘B DRIVE’ so that the white balance becomes optimum.
8. Press the ‘OK’ button to write the data for each item.
9. Set the contrast to MIN.
10. Set the ‘R CUT-OFF’ to 31.
11. Adjust the ‘G CUT-OFF’, and ‘B CUT-OFF’ with the left and right buttons on the remote commander so that the white balance becomes optimum.
12. Press the ‘OK’ button to write the data for each item.

Backend

No	Descr.	Def	Min	Max	Data
1	R-on	ON	OFF	ON	ON
2	G-on	ON	OFF	ON	ON
3	B-on	ON	OFF	ON	ON
4	D-col	OFF	OFF	ON	ON
5	Color-axis	2	0	3	2
6	Contrast	63	0	63	63
7	Limit-Luv	3	0	3	3
8	Hue	31	0	63	31
9	Colour	31	0	63	28
10	CTI -Level	2	0	3	2
11	Brightness	31	0	63	31
12	Gamma	2	0	3	2
13	Sharpness	31	0	63	44
14	LTI-Level	0	0	3	0
15	R-Drive	41	0	63	40
16	BLK-Bottom	0	0	3	0
17	G-Drive	41	0	63	38
18	ABL-TH	0	0	3	0
19	B-Drive	41	0	63	21
20	ABL-Mode	2	0	3	2
21	Sub Bright	31	0	63	32
22	VM-Level	2	0	3	2
23	R-Cutoff	31	0	63	41
24	Preover	2	0	3	2
25	G-Cutoff	31	0	63	45
26	DPIC-Level	2	0	3	2
27	B-Cutoff	31	0	63	48
28	DC-Tran	1	0	3	1
29	Sub-Cont	7	0	15	7
30	LRGB2-Lvl	12	0	15	12
31	P-Abl	15	0	15	15
32	DL-Pass	OFF	OFF	ON	OFF
33	Sharp.Fo	ON	OFF	ON	ON
34	Aging-W	OFF	OFF	ON	OFF
35	Aging-B	OFF	OFF	ON	OFF
36	CB-offset1	7	0	15	7
37	CR-offset1	7	0	15	7
38	CB-offset2	7	0	15	7
39	CR-offset2	7	0	15	7
40	Sub Colour	0	-8	8	-1

SECTION 4
CIRCUIT ADJUSTMENTS

4-1. ELECTRICAL ADJUSTMENTS

Service adjustments to this model can be performed using the supplied Remote Commander RM-891.

HOW TO ENTER INTO SERVICE MODE

1. Turn on the main power switch of the set while pressing PROG + (plus) and PROG - (minus) buttons on the top panel.



2. "TT" will appear in the upper right corner of the screen.
3. Press the ‘MENU’ button twice on the remote commander to obtain the service menu on the screen.

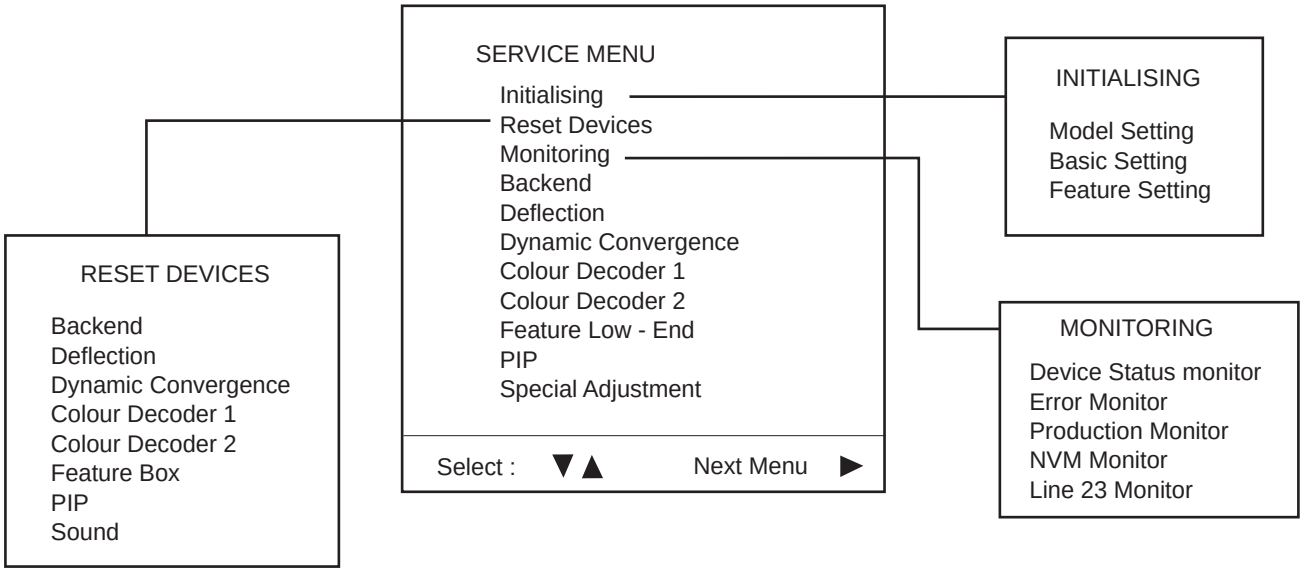

4. Push the joystick up or down on the remote commander to select the adjustment item.
5. Push the right button to proceed to the next menu.
6. If the required adjustment item is ‘Deflection’, push the down button to move to ‘Deflection’.
7. Push the joystick to the right to enter into ‘Deflection’.
8. Change the data in order to comply with each standard.

NOTE:
- Before performing any adjustments assure that the correct model has been selected in the Model Setting menu.
- After carrying out the service adjustments, to prevent the customer accessing the Service Menu switch the TV set OFF and then ON.

Model Setting

1	KV-29FX60A/D/E
2	KV-29FX60B
3	KV-29FX60U
4	KV-29FC60A/D/E
5	KV-29FC60B
6	KV-29FC60K
7	KV-29FC60R
8	KV-29FS60A/D/E
9	KV-29FS60B
10	KV-29FS60K
11	KV-29FS60R
12	KV-28/32FX60A/D/E
13	KV-28/32FX60B
14	KV-28/32FX60K
15	KV-28/32FX60R
16	KV-28/32FX60U
17	KV-29FS60A/D/E
18	KV-29FS60B

Fig.4-1

Basic setting

No	Descr.	Min	Max	Data
1	Sys.B/G	OFF	ON	ON
2	Sys.D/K	OFF	ON	ON
3	Sys.L	OFF	ON	ON
4	Sys I (UK)	OFF	ON	OFF
5	Sys I (IRL)	OFF	ON	OFF
6	Russian sound	OFF	ON	OFF
7	TXT Nod.option	1	4	3
8	simple PAT	OFF	ON	OFF
9	16:9 CRT	OFF	ON	OFF
10	Sub-woofer	OFF	ON	ON
11	Auto stand-by	OFF	ON	ON
12	comb-filter	OFF	ON	OFF
13	Auto YC det	OFF	ON	ON
14	Auto comb det	OFF	ON	OFF
15	AV2 Available	OFF	ON	ON
16	AV3 Available	OFF	ON	ON
17	AV4 Available	OFF	ON	OFF
18	AV3 Front & rear	OFF	ON	ON
19	SECAM Tape	OFF	ON	OFF

Fig.4-2

NOTE:
The above table is dependant on model, destination & size.

Backend

No	Descr.	Def	Min	Max	Data
1	R-on	ON	OFF	ON	ON
2	G-on	ON	OFF	ON	ON
3	B-on	ON	OFF	ON	ON
4	D-col	OFF	OFF	ON	ON
5	Color-axis	2	0	3	2
6	Contrast	63	0	63	63
7	Limit-Luv	3	0	3	3
8	Hue	31	0	63	31
9	Colour	31	0	63	28
10	CTI -Level	2	0	3	2
11	Brightness	31	0	63	31
12	Gamma	2	0	3	2
13	Sharpness	31	0	63	44
14	LTI-Level	0	0	3	0
15	R-Drive	41	0	63	40
16	BLK-Bottom	0	0	3	0
17	G-Drive	41	0	63	38
18	ABL-TH	0	0	3	0
19	B-Drive	41	0	63	21
20	ABL-Mode	2	0	3	2
21	Sub Bright	31	0	63	32
22	VM-Level	2	0	3	2
23	R-Cutoff	31	0	63	41
24	Preover	2	0	3	2
25	G-Cutoff	31	0	63	45
26	DPIC-Level	2	0	3	2
27	B-Cutoff	31	0	63	48
28	DC-Tran	1	0	3	1
29	Sub-Cont	7	0	15	7
30	LRGB2-Lvl	12	0	15	12
31	P-Abl	15	0	15	15
32	DL-Pass	OFF	OFF	ON	OFF
33	Sharp.Fo	ON	OFF	ON	ON
34	Aging-W	OFF	OFF	ON	OFF
35	Aging-B	OFF	OFF	ON	OFF
36	CB-offset1	7	0	15	7
37	CR-offset1	7	0	15	7
38	CB-offset2	7	0	15	7
39	CR-offset2	7	0	15	7
40	Sub Colour	0	-8	8	-1

Fig.4-3

Feature setting

No	Descr.	Min	Max	Data
1	PIP	OFF	ON	ON

Fig.4-4

Colour Decoder 1

No	Descr.	Def	Min	Max	Data
1	DelayLinMd	OFF	OFF	ON	OFF
2	Gain set	1	0	3	1
3	Y-Delay	7	0	15	7
4	Phase Time	0	0	3	0
5	Vid Ident Md	OFF	OFF	ON	OFF
6	Sync Mode	OFF	OFF	ON	OFF
7	Vid Ident Sw	ON	OFF	ON	ON
8	H-Output	OFF	OFF	ON	OFF
9	Enagating	OFF	OFF	ON	OFF
10	IF Circuit	ON	OFF	ON	ON
11	GP Delay	OFF	OFF	ON	OFF

Fig.4-5

Colour Decoder 2

No	Descr.	Def	Min	Max	Data
1	DelayLinMd	OFF	OFF	ON	OFF
2	Gain set	1	0	3	1
3	Y-Delay	7	0	15	7
4	Phase Time	0	0	3	0
5	Vid Ident Md	OFF	OFF	ON	OFF
6	Sync Mode	OFF	OFF	ON	OFF
7	Vid Ident Sw	ON	OFF	ON	ON
8	H-Output	OFF	OFF	ON	OFF
9	Enagating	OFF	OFF	ON	OFF
10	IF Circuit	ON	OFF	ON	ON
11	GP Delay	OFF	OFF	ON	OFF

Fig.4-6

Deflection

No	Descr.	Def	Min	Max	Data
1	V-Size	31	0	63	34
2	V-Position	31	0	63	21
3	V-Comp	1	0	3	1
4	V-Linear	7	0	15	7
5	S-Corr	7	0	15	8
6	H-Size	31	0	63	29
7	EW-DC	OFF	OFF	ON	OFF
8	Pin-Amp	31	0	63	36
9	Up-Cpin	31	0	63	35
10	M-Pin	2	0	3	2
11	Lo-Cpin	31	0	63	37
12	Trapezium	7	0	15	7
13	H-Position	31	0	63	25
14	AFC-Bow	7	0	15	7
15	AFC-Angle	7	0	15	9
16	Up-Vlin	0	0	15	0
17	Lo-Vlin	0	0	15	0

Fig.4-7

Dynamic Convergence

No	Descr.	Def	Min	Max	Data
1	Range	63	0	63	32
2	H Stat	33	0	63	33
3	H amp L	37	0	63	37
4	H amp R	36	0	63	36
5	Up Y	31	0	63	31
6	Low Y	33	0	63	33
7	Y Up L	30	0	63	30
8	Y Up R	30	0	63	30
9	Y Low L	31	0	63	31
10	Y Low R	30	0	63	30
11	Mbow Up L	31	0	63	31
12	Mbow Up R	32	0	63	32
13	Mbow Low L	32	0	63	32
14	Mbow Low R	32	0	63	32
15	V Stat	32	0	63	32
16	Linearity	128	0	255	104
17	H Centre	32	0	63	32
18	H Trap	32	0	63	32
19	Rotation	0	0	255	0
20	Focus Phase	128	0	255	128

Fig.4-8

Feature Low-End

No	Descr.	Def	Min	Max	Data
1	F.S.F.M	OFF	OFF	ON	OFF
2	G-Mode	OFF	OFF	ON	OFF
3	Picture Pos	0	0	3	0
4	Comp Mode	OFF	OFF	ON	OFF
5	CompSW	OFF	OFF	ON	OFF
6	Acqu.freq	OFF	OFF	ON	OFF
7	Still Pic	OFF	OFF	ON	OFF
8	Init	OFF	OFF	ON	OFF
9	Dis Feature	ON	OFF	ON	ON
10	Dis Vlimit	ON	OFF	ON	ON
11	Scr Fade	0	0	3	0
12	Hwe Delay	20	0	255	20
13	Auto Vshift	OFF	OFF	ON	OFF
14	Vwe Delay	0	0	127	0
15	SFR sw	OFF	OFF	ON	OFF
16	IPQ	0	0	3	0
17	D.Col Dec	OFF	OFF	ON	OFF
18	Blankfield	0	0	15	0
19	P1.5	OFF	OFF	ON	OFF
20	P1.4	OFF	OFF	ON	OFF
21	P1.3	OFF	OFF	ON	OFF
22	P1.2	OFF	OFF	ON	OFF
23	P1.1	OFF	OFF	ON	OFF
24	Set Vdba	OFF	OFF	ON	OFF
25	Set Sidep	ON	OFF	ON	ON
26	Set Hwe	OFF	OFF	ON	OFF
27	Set Clv	OFF	OFF	ON	OFF
28	Set Hddel	OFF	OFF	ON	OFFF
29	Set Hblnd	OFF	OFF	ON	OFF
30	Set Hre	ON	OFF	ON	ON
31	Set Hbda	ON	OFF	ON	ON
32	Set Hdav	ON	OFF	ON	ON
33	Vbdasta	0	0	255	0
34	Vsdasto	0	0	255	0
35	Msbhwesto	OFF	OFF	ON	OFF
36	Msbhwesta	OFF	OFF	ON	OFF
37	Msbvbdasto	OFF	OFF	ON	OFF
38	Msbvbdasta	OFF	OFF	ON	OFF
39	Hdavsta	40	0	255	40
40	Hdavsto	255	0	255	255

Feature Low-End(Cont.)

No	Descr.	Def	Min	Max	Data
41	Hbdasta	223	0	255	223
42	Hbdasto	222	0	255	222
43	Hresta	38	0	255	38
44	Hresto	202	0	255	202
45	Hblndsta	31	0	255	31
46	Hblndsto	30	0	255	30
47	MsbHblndsta	OFF	OFF	ON	OFF
48	MsbHblndsto	OFF	OFF	ON	OFF
49	Msb Hresto	ON	OFF	ON	ON
50	Msb Hresta	OFF	OFF	ON	OFF
51	Msbhbdasta	ON	OFF	ON	ON
52	Msbhbdasto	ON	OFF	ON	ON
53	Msbhdavsto	ON	OFF	ON	ON
54	Msbhdavsta	OFF	OFF	ON	OFF
55	Hddel	0	0	15	0
56	Clvsta	0	0	255	0
57	Clvsto	9	0	255	9
58	Hwesta	44	0	255	44
59	Hwesto	208	0	255	208
60	Ex-Thres	OFF	OFF	ON	OFF
61	Wes	ON	OFF	ON	OFF
62	Demo mode	ON	OFF	ON	OFF
63	Limerick NR	0	0	4	0
64	Nthr	0	0	255	2
65	Wval	200	0	255	200
66	Agc Ych	203	0	255	203
67	Agc Uvch	209	0	255	209
68	Aal-Bypass	OFF	OFF	ON	OFF
69	Stby Fr	OFF	OFF	ON	OFF
70	Lsb Agc-Uv	OFF	OFF	ON	OFF
71	Lsb Agc-Y	OFF	OFF	ON	OFF
72	Vcl cor	0	0	3	0
73	Ucl cor	0	0	3	0
74	Uv cor mode	0	0	3	0
75	Uvcl tau	3	0	3	3
76	Uvcol Lvl	0	0	3	0
77	Fil Mem	OFF	OFF	ON	OFF
78	Overl Thr	1	0	3	1
79	Y delay f	4	0	7	4
80	Dcti pdxsel	ON	OFF	ON	ON

Fig.4-9

Feature Low-End (Cont.)

No	Descr.	Def	Min	Max	Data
81	Dcti Thres	0	0	15	0
82	Dcti Gain	0	0	7	0
83	Dcti Super	ON	OFF	ON	ON
84	Dcti Fil	ON	OFF	ON	ON
85	Dcti Prot	ON	OFF	ON	ON
86	Dcti Sep	ON	OFF	ON	ON
87	Dcti Limit	2	0	3	2
88	Peak Beta	0	0	7	0
89	Peak Alpha	2	0	7	2
90	Peak Neg g	0	0	3	0
91	Peak Delta	0	0	3	0
92	Peak Tau	0	0	7	0
93	Peak Corth	0	0	15	0
94	Overlay V	0	0	15	0
95	Overlay U	0	0	15	0
96	Overlay Y	10	0	255	10
97	Sidep sta	240	0	255	240
98	Sidep sto	36	0	255	36
99	Y delay B	7	0	7	7
100	Invert UV	ON	OFF	ON	ON
101	Output Range	ON	OFF	ON	ON
102	Sidep Fdel	0	0	3	0

PIP

No	Descr.	Def	Min	Max	Data
1	Freeze	OFF	OFF	ON	OFF
2	Frame	ON	OFF	ON	ON
3	Pipon	ON	OFF	ON	OFF
4	Seldel	1	0	15	1
5	Mixdis	ON	OFF	ON	ON
6	H-Poshi	0	0	3	0
7	H-Pos	137	0	255	137
8	V-Pos	59	0	255	59
9	Y-Delay	0	0	7	0
10	V-Dec	OFF	OFF	ON	OFF
11	H-Dec	OFF	OFF	ON	OFF
12	Insvh	ON	OFF	ON	ON
13	Chrins	ON	OFF	ON	ON
14	Pmod	0	0	3	0
15	Imod	0	0	3	0
16	Clisw	ON	OFF	ON	ON
17	H side	4	0	15	4
18	Vsiisq	OFF	OFF	ON	OFF
19	Vsidel	0	0	31	0
20	Parasynd	ON	OFF	ON	ON
21	Vspisq	OFF	OFF	ON	OFF
22	Vspdel	10	0	31	10
23	Con	1	0	15	1
24	Fry	8	0	15	8
25	Frv	3	0	15	3
26	Fru	4	0	15	4
27	Sel Down	OFF	OFF	ON	OFF
28	Frwidv	1	0	3	1
29	Frwidh	2	0	7	2
30	Mat	4	0	7	4
31	Daconst	OFF	OFF	ON	OFF
32	Plltc	1	0	3	1
33	Dacontle	OFF	OFF	ON	OFF
34	Left	83	0	255	83
35	RightHi	1	0	3	1
36	Right	192	0	255	192
37	Up	46	0	255	46
38	Down	189	0	255	189

Fig.4-10

Sound

No	Descr.	Def	Min	Max	Data
1	Ref.Level	40	0	20	40
2	Auto-gain	ON	OFF	ON	ON
3	Ana-in	0	0	1	0
4	Corr-mute	ON	OFF	ON	ON
5	Clock out	ON	OFF	ON	ON
6	AM-gain	ON	OFF	ON	ON
7	Clip mode	0	0	2	0
8	SCART1 Vol	79	0	127	79
9	SCART2 Vol	79	0	127	79
10	SCART Pr	27	0	127	27
11	Izs1-pr	16	0	127	16
12	Izs2-pr	16	0	127	16
13	FM pr	27	0	127	27
14	BG Nic-pr	53	0	127	53
15	L Nic-pr	59	0	127	59
16	DK Nic-pr	53	0	127	53
17	I Nic-pr	97	0	127	97
18	Irl Nic-pr	97	0	127	97
19	AVC-Decay	2	0	8	2
20	Subw-vol	0	0	-127	0
21	Subw-freq	20	5	40	20
22	Subw-Hpuss	OFF	OFF	ON	OFF
23	Spat-stre	127	0	-1	127
24	Spat-Coeff	0	0	8	0
25	Bass offs	0	-3	3	0
26	Treble offs	0	-3	3	0
27	Loudn offs	0	0	9	0
28	Hp-voloffs	-2	-5	5	-2
29	M-S Limit	30	-128	127	30
30	M-B Limit	-30	-128	127	-30
31	S-M Limit	12	-128	127	12
32	S-B Limit	-20	-128	127	-20
33	B-M Limit	-12	-128	127	-12
34	B-S Limit	20	-128	127	20
35	Err.Max	40	0	255	40
36	Err.Min	14	0	255	18

Fig.4-11

Special Adjustment

No	Descr.	Min	Max	Data
1	RGB Level	0	7	0
2	RGB Gain	0	31	9
3	RGB PatLevel	0	7	7
4	RGB Patgain	0	31	31
5	RGB H-position	-10	10	-1
6	Extra Fw	0	255	255
7	EPG Chks Check	OFF	ON	ON
8	Slicer High	OFF	ON	ON
9	FCW Wide	OFF	ON	ON
10	High Pll	OFF	ON	OFF
11	Panic offset	0	2	0
12	Wide Mute	OFF	ON	ON

Fig.4-12

DEFLECTION SYSTEM ADJUSTMENT

1. Enter into the service mode and select ‘Deflection ’. The ‘Deflect ’ adjustment menu will be displayed.
2. Select and adjust each item to obtain the optimum image.

4-2.VOLUME ELECTRICAL ADJUSTMENTS

Sub Colour Adjustment

1. Input a PAL colour bar signal.
2. Connect an oscilloscope to CN5400 pin 5 on the C board.
3. Enter into the ‘SERVICE MODE’.
4. Choose ‘Backend’.
5. Adjust Sub Colour data so that the right sides of the waveforms are of equal height.

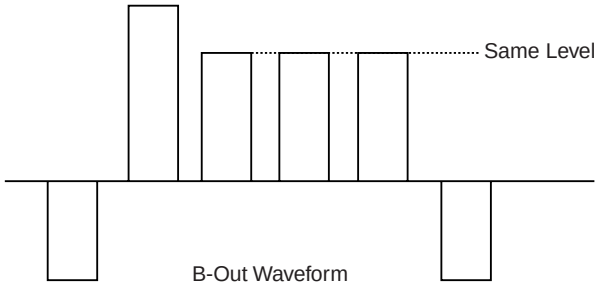

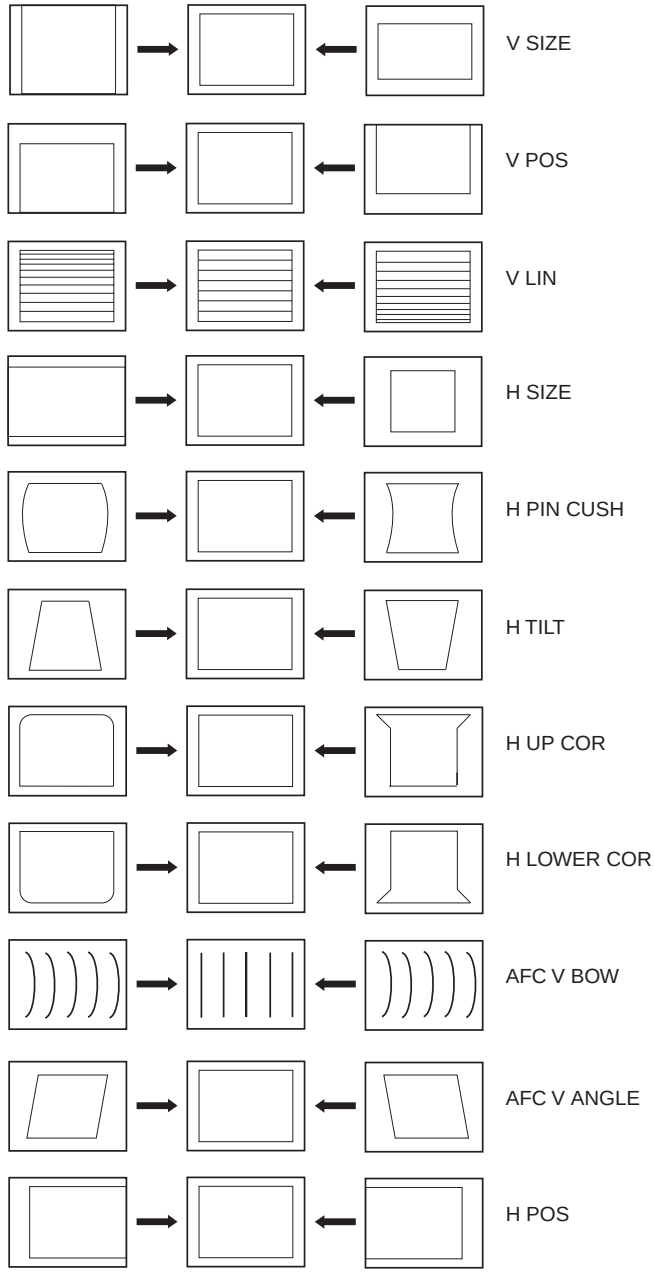

4-3. TEST MODE 2:

Is available by pressing ‘TEST’ button twice, OSD ‘TT’ appears. The functions described below are available by pressing the two numbers. To release the Test mode 2, press 0, 10, 20 ... twice or switch the TV set into Stand-by Mode. Pressing the two Local Control buttons (+ and -) during Power ON will also switch into ‘TT’ mode.
In ‘TT’ mode, it is possible to remove the Menu from the screen by pressing the Speaker Off button once. Pressing the Speaker OFF button a second time will cause the menu to reappear. The Function is kept even when the menu is not displayed !!.

00	Switch back to normal mode - ‘TT’ mode off
01	Set picture maximum
02	Set picture minimum
03	Set speaker/headphone Volume to 30%
04	Set speaker/headphone Volume to 50%
05	Set speaker/headphone Volume to 65%
06	Set speaker/headphone Volume to 80%
07	Ageing Mode
08	Shipping Condition
09	Language Reset
10	No function
11	Sub picture adjustment
12	Sub colour adjustment
13	Display software version and TV set configuration
14	Production Info Display
15	Picture Rotation
16	Picture level 50%
17	Audio mute on
18	No function
19	Sub brightness adjustment
20	See ‘TT10’
21	Destination A includes text settings, display TV status
22	Destination L includes text settings, display TV status
23	Destination E includes text settings, display TV status
24	Destination U includes text settings, display TV status
25	Destination D includes text settings, display TV status
26	Destination B includes text settings, display TV status
27	Destination K includes text settings, display TV status
28	Destination R includes text settings, display TV status
30	See ‘TT10’
31	Geometry Adjustment 1
32	Geometry Adjustment 2
33	Error monitor
34	No function
35	CRT 4:3 < > 16:9 ; Display TV status
36	Line 23 detection switch
37	Velocity Modulation (VM) test
38	No function
39	No function
40	See ‘TT10’

41	Screen mode check
42	Re initialise geometry
43	No function
44	No function
45	No function
46	Reserved for dealer commander
47	Re initialise NVM
48	Set NVM as non virgin
49	Set NVM as virgin
50	See ‘TT10’
51	Set Dolby volume to 90%
52	Dolby on left speaker only
53	Dolby on right speaker only
54	Dolby on left centre only
55	Dolby on surround speaker only
56 - 59	No function
60	See ‘TT10’
61	Service mode
62	Production mode
65	Reset error codes
68	Ignore errors on
69	Ignore errors off
70	See ‘TT10’
71 - 72	No function
73	Clear programs
74 - 79	No function
80	See ‘TT10’
81	PAP H adjustment left image
82	PAP H adjustment right image
83 - 86	No function
87	Personal ID reset
88	Parental Lock off
89	No function
90	See ‘TT10’

5-1 BLOCK DIAGRAMS (1)

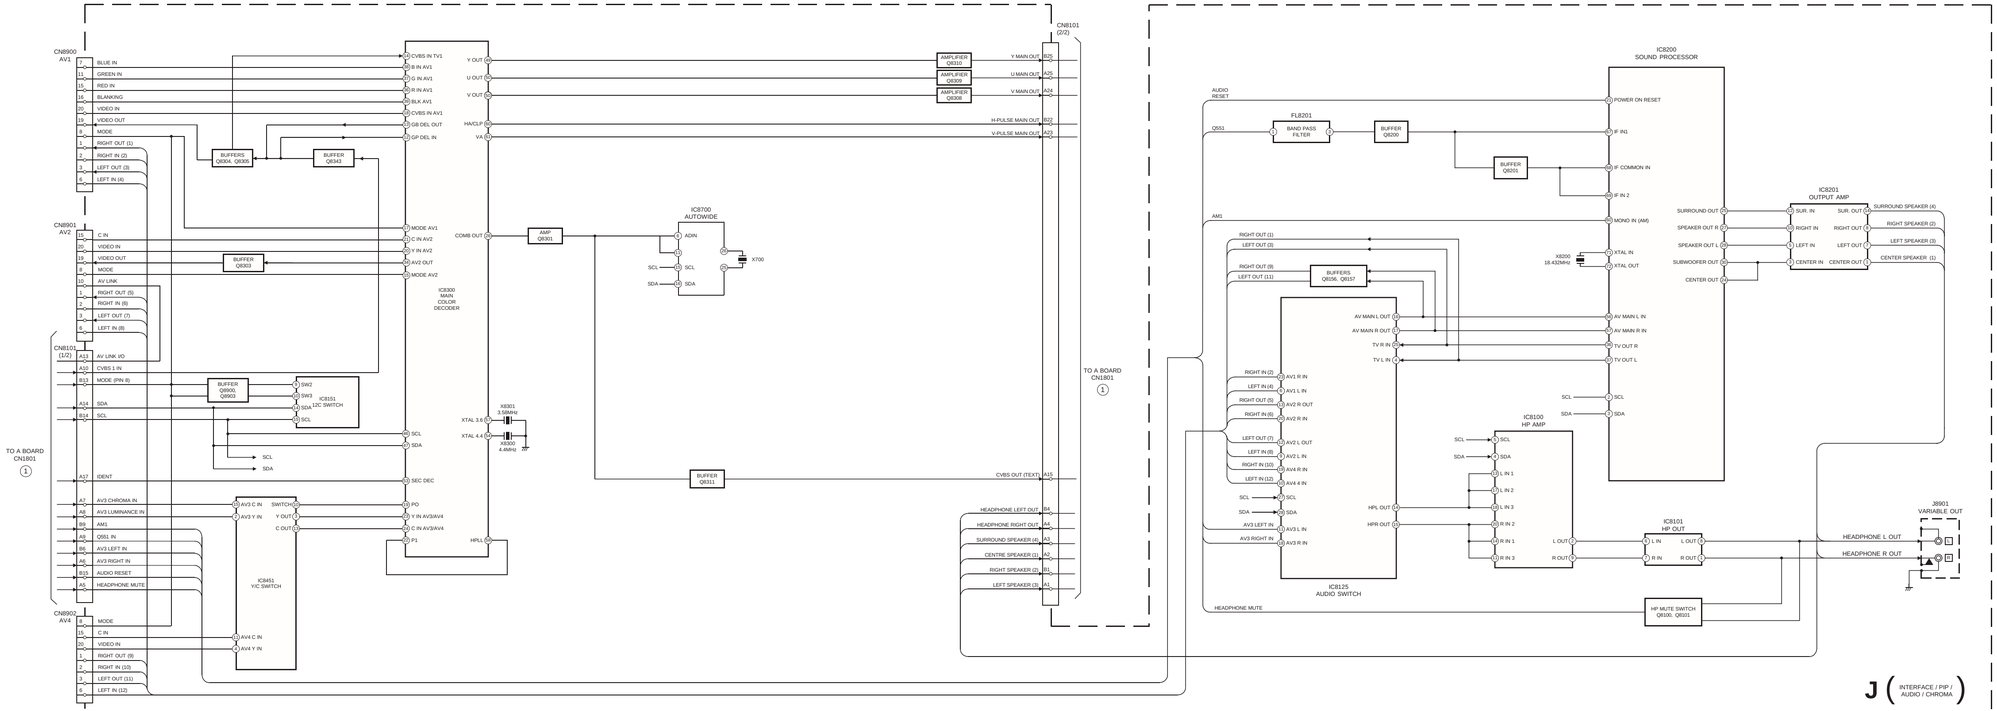

5-1 BLOCK DIAGRAMS (2)

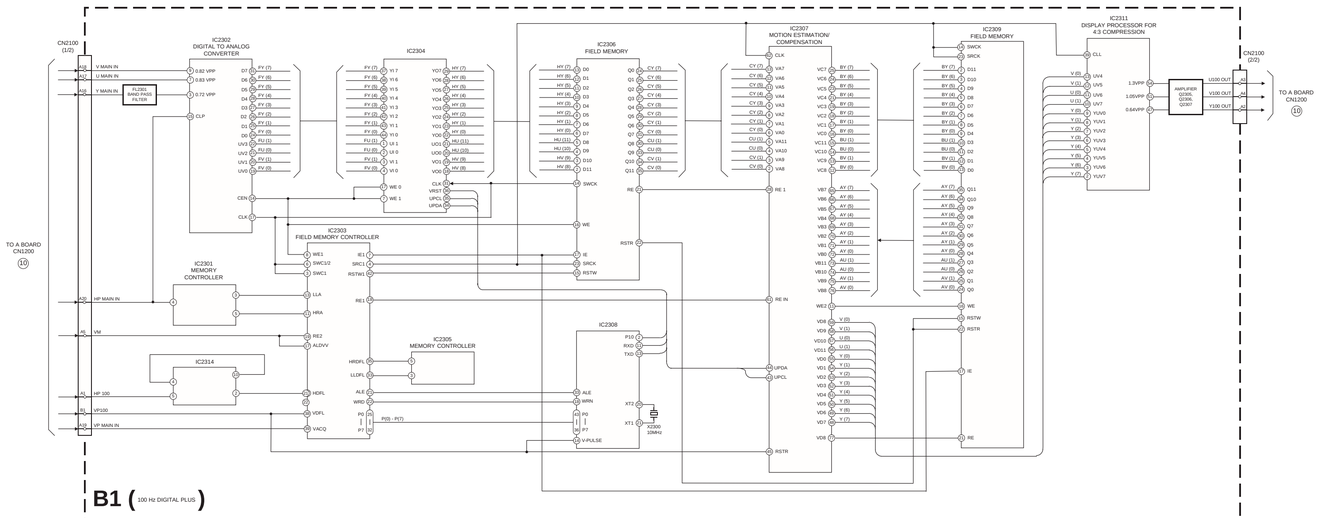

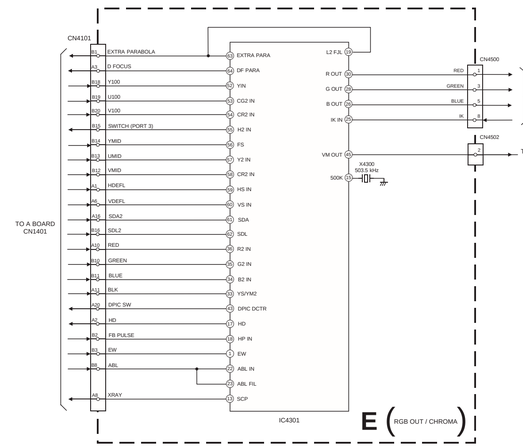

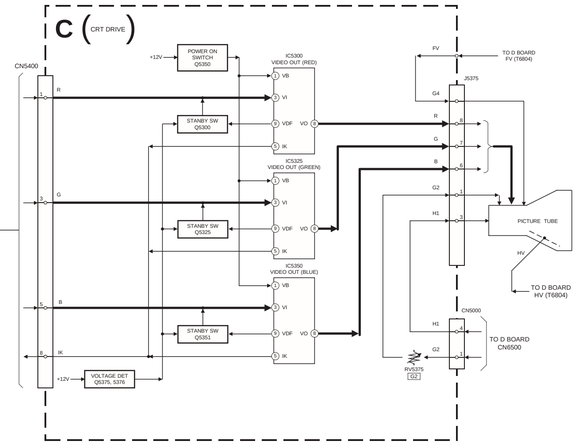

BLOCK DIAGRAMS (3)

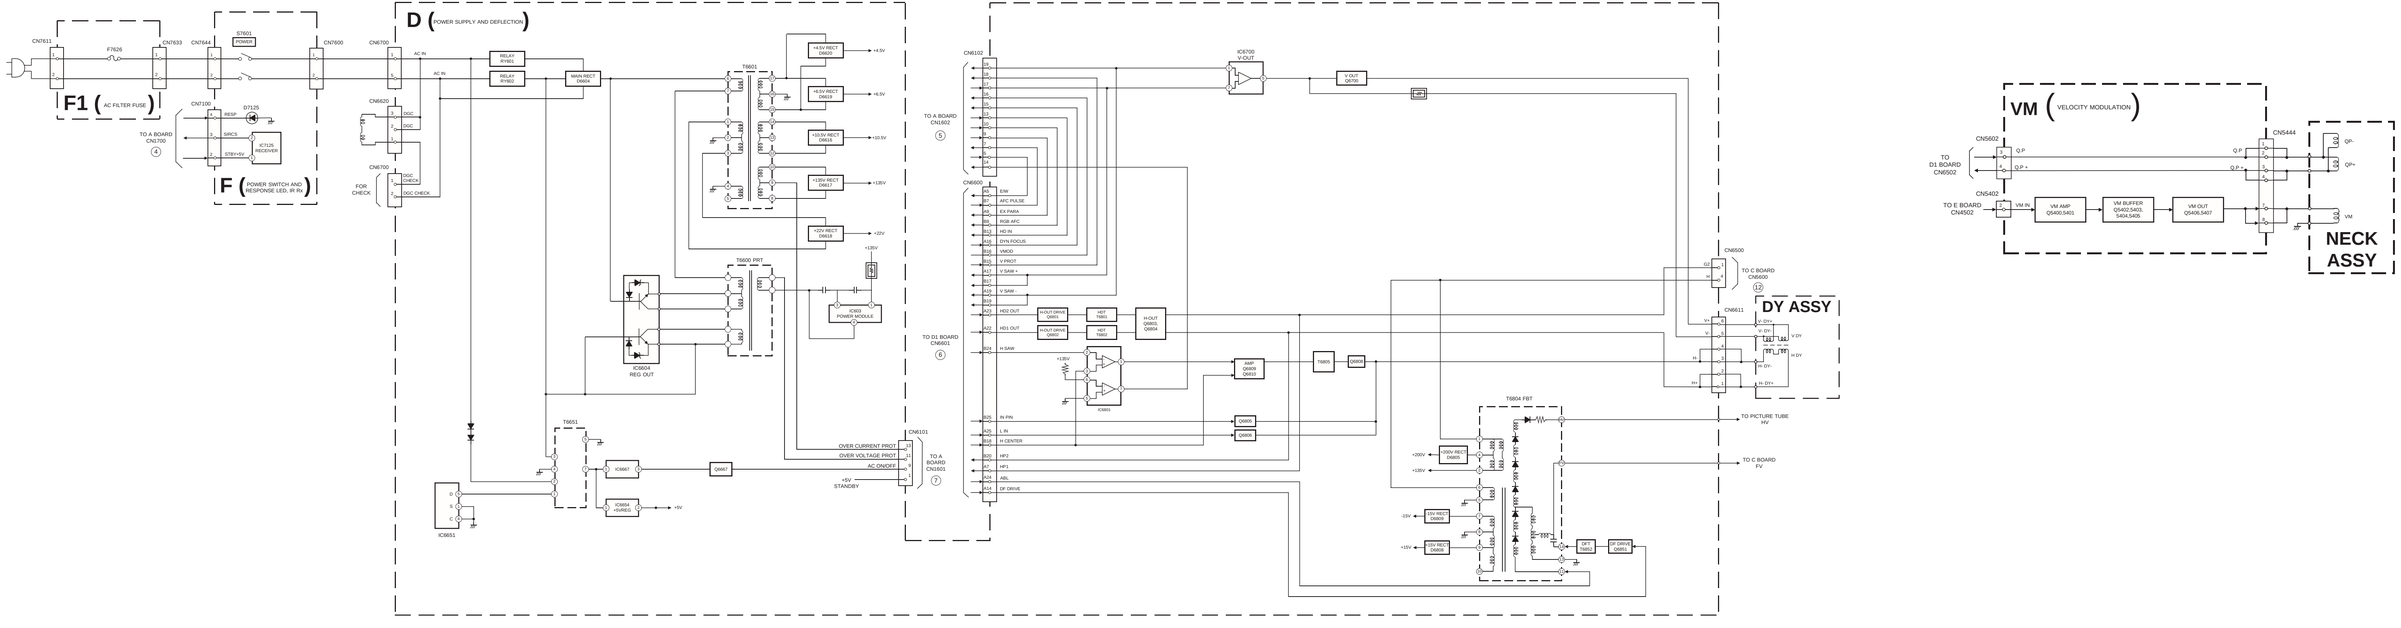

BLOCK DIAGRAMS (4)

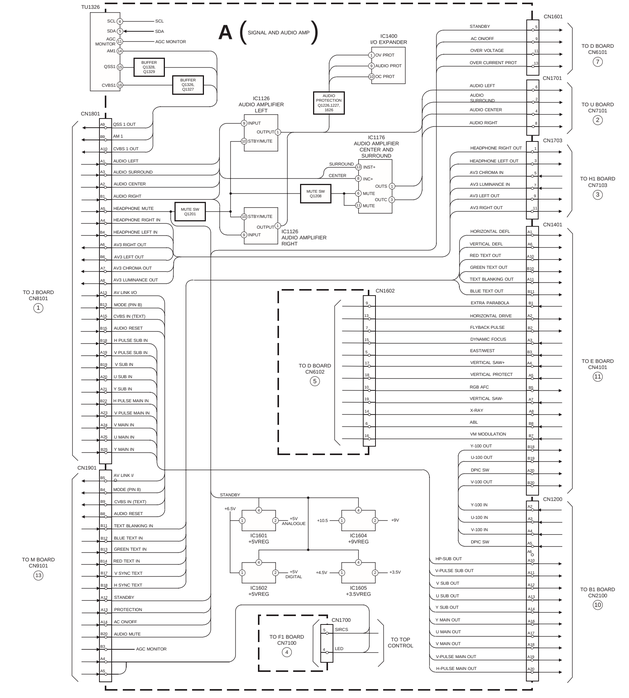

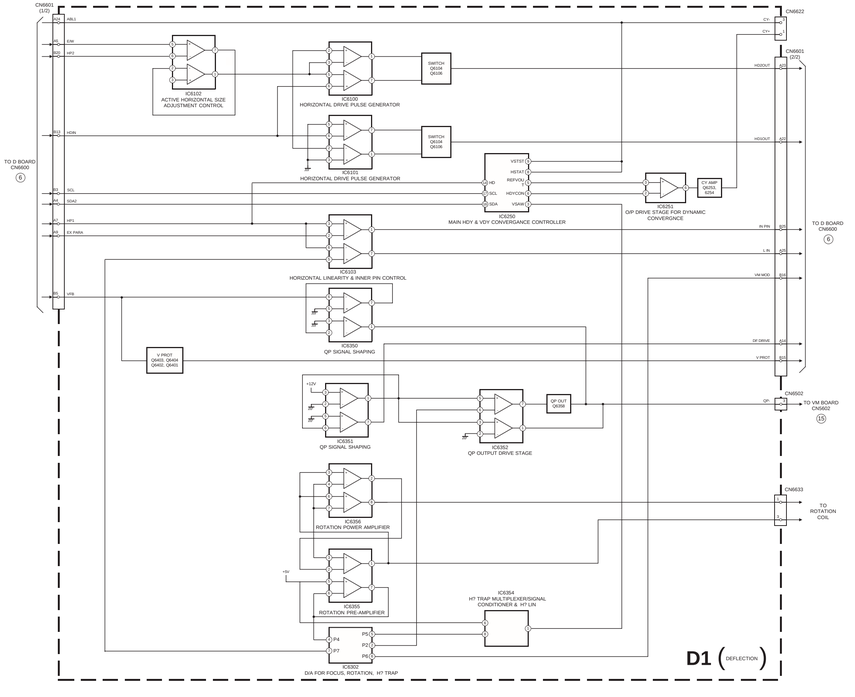

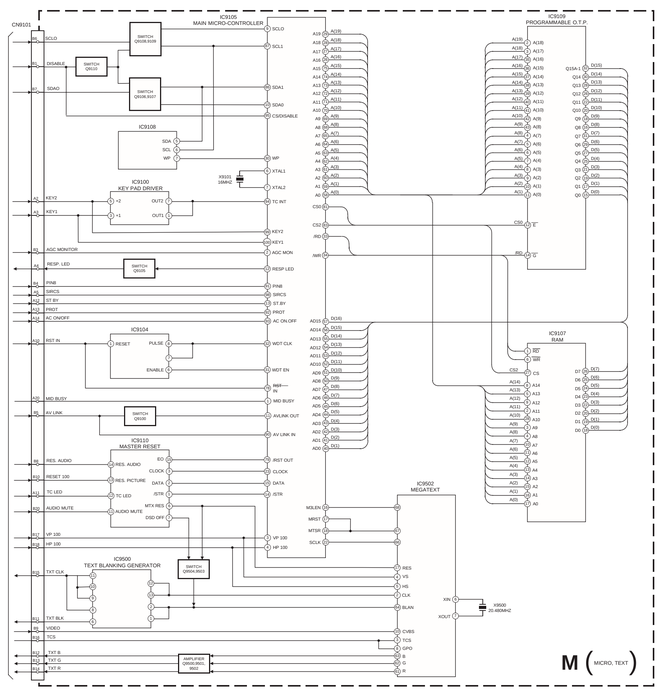

5-2. CIRCUIT BOARD LOCATION

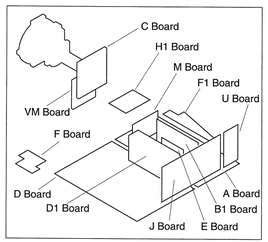

5-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note :

- All capacitors are in µF unless otherwise noted.
- pF : µµF 50WV or less are not indicated except for electrolytic types.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch : 5mm Electrical power rating : 1/4W

- Chip resistors are 1/10W
- All resistors are in ohms.
  k = 1000 ohms, M = 1000,000 ohms
- : nonflammable resistor.
- : fusible resistor.
- : internal component.
- : panel designation or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All voltages are in Volts.
- Readings are taken with a 10Mohm digital mutimeter.
- Readings are taken with a color bar input signal.
- Voltage variations may be noted due to normal production tolerences.
- : B + bus.
- : B - bus.
- : RF signal path.
- : earth - ground.
- : earth - chassis.

Reference Information

RESISTOR	**RN**	: METAL FILM
	RC	: SOLID
	FPRD	: NON FLAMMABLE CARBON
	FUSE	: NON FLAMMABLE FUSIBLE
	RS	: NON FLAMMABLE METAL OXIDE
	RB	: NON FLAMMABLE CEMENT
	RW	: NON FLAMMABLE WIREWOUND
	※	: ADJUSTMENT RESISTOR
COIL	**LF-BL**	: MICRO INDUCTOR
CAPACITOR	**TA**	: TANTALUM
	PS	: STYROL
	PP	: POLYPROPYLENE
	PT	: MYLAR
	MPS	: METALIZED POLYESTER
	MPP	: METALIZED POLYPROPYLENE
	ALB	: BIPOLAR
	ALT	: HIGH TEMPERATURE
	ALR	: HIGH RIPPLE

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

Note : Les composants identifiés par une trame et par une marque ⚠ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces de numéro spécifié. specified.

C [RGB OUT]

C Board

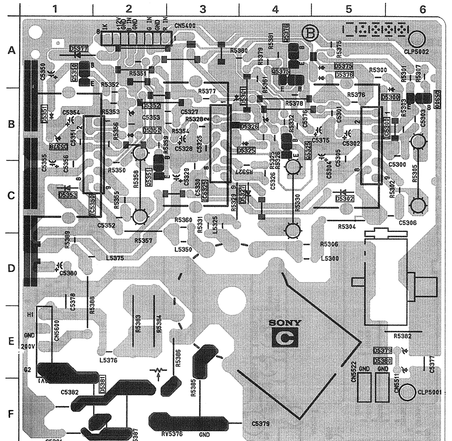

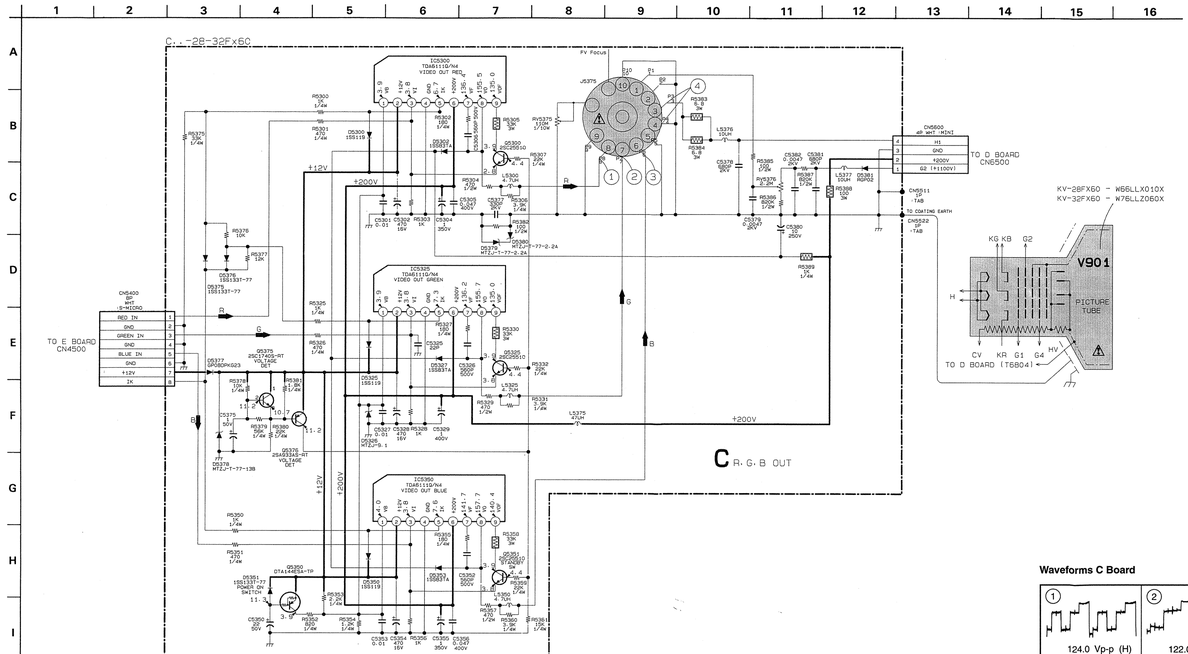

C BOARD

IC	
IC5300	B - 6
IC5325	C - 3
IC5350	C - 1
TRANSISTOR	
Q5300	B - 6
Q5325	B - 5
Q5350	A - 1
Q5351	C - 2
Q5375	A - 4
Q5376	A - 4
DIODE	
D5300	B - 6
D5302	C - 5
D5325	B - 4
D5326	B - 4
D5327	C - 4
D5350	B - 2
D5351	B - 1
D5353	C - 1
D5375	A - 5
D5376	A - 5
D5377	A - 1
D5378	B - 1
D5379	E - 5
D5380	E - 5
D5381	F - 2

Waveforms C Board



J BOARD

IC	
IC8100	F - 15
IC8101	F - 15
IC8125	F - 14
IC8151	D - 22
IC8201	E - 24
IC8202	D - 23
IC8300	E - 19
IC8400	C - 22
IC8451	A - 15
IC8550	B - 19
IC8601	D - 20
IC8602	E - 20
IC8603	A - 23
IC8604	A - 21
TRANSISTOR	
Q8200	E - 23
Q8201	E - 24
Q8202	E - 23
Q8303	C - 19
Q8304	C - 20
Q8305	D - 20
Q8307	D - 18
Q8308	E - 18
Q8309	E - 18
Q8310	D - 18
Q8311	C - 20
Q8343	F - 19
Q8400	B - 22
Q8401	C - 20
Q8403	C - 22
Q8404	C - 22
Q8405	C - 20
Q8406	C - 20
Q8407	C - 20
Q8425	A - 22
Q8450	A - 15
Q8453	A - 15
Q8456	A - 15
Q8459	B - 15
Q8461	B - 15
Q8900	D - 16
Q8901	C - 17
Q8903	D - 16
DIODE	
D8125	F - 12
D8126	F - 12
D8127	F - 11
D8128	F - 11
D8129	E - 12
D8130	E - 12
D8131	E - 11
D8200	D - 2
D8201	D - 2
D8202	E - 10
D8203	D - 10
D8432	B - 4
D8450	F - 1
D8451	F - 1
D8550	C - 20
D8900	C - 12
D8902	C - 11
D8903	C - 11
D8904	B - 11
D8905	B - 12
D8906	B - 12
D8907	C - 10
D8908	C - 10
D8909	C - 11
D8910	B - 11
D8911	C - 10
D8912	C - 9
D8913	C - 10
D8914	B - 10
D8915	C - 9
D8922	D - 16
D8923	D - 16

J [INTERFACE / PIP / AUDIO / CHROMA]

J Board <Conductor Side>

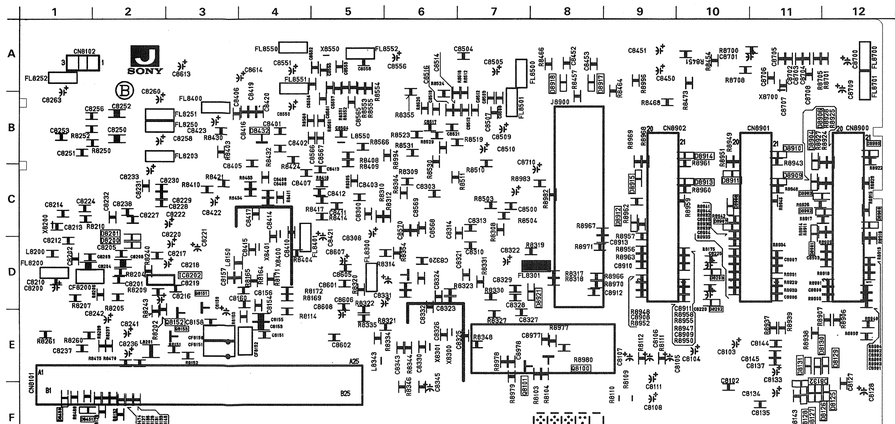

J Board <Component Side>

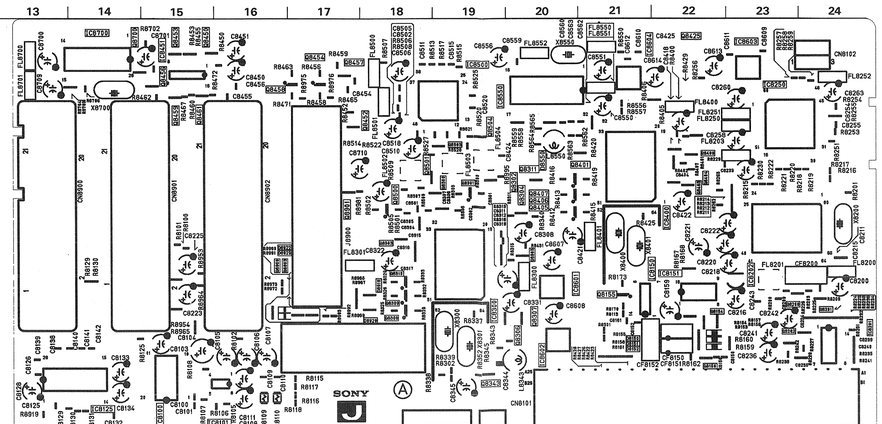

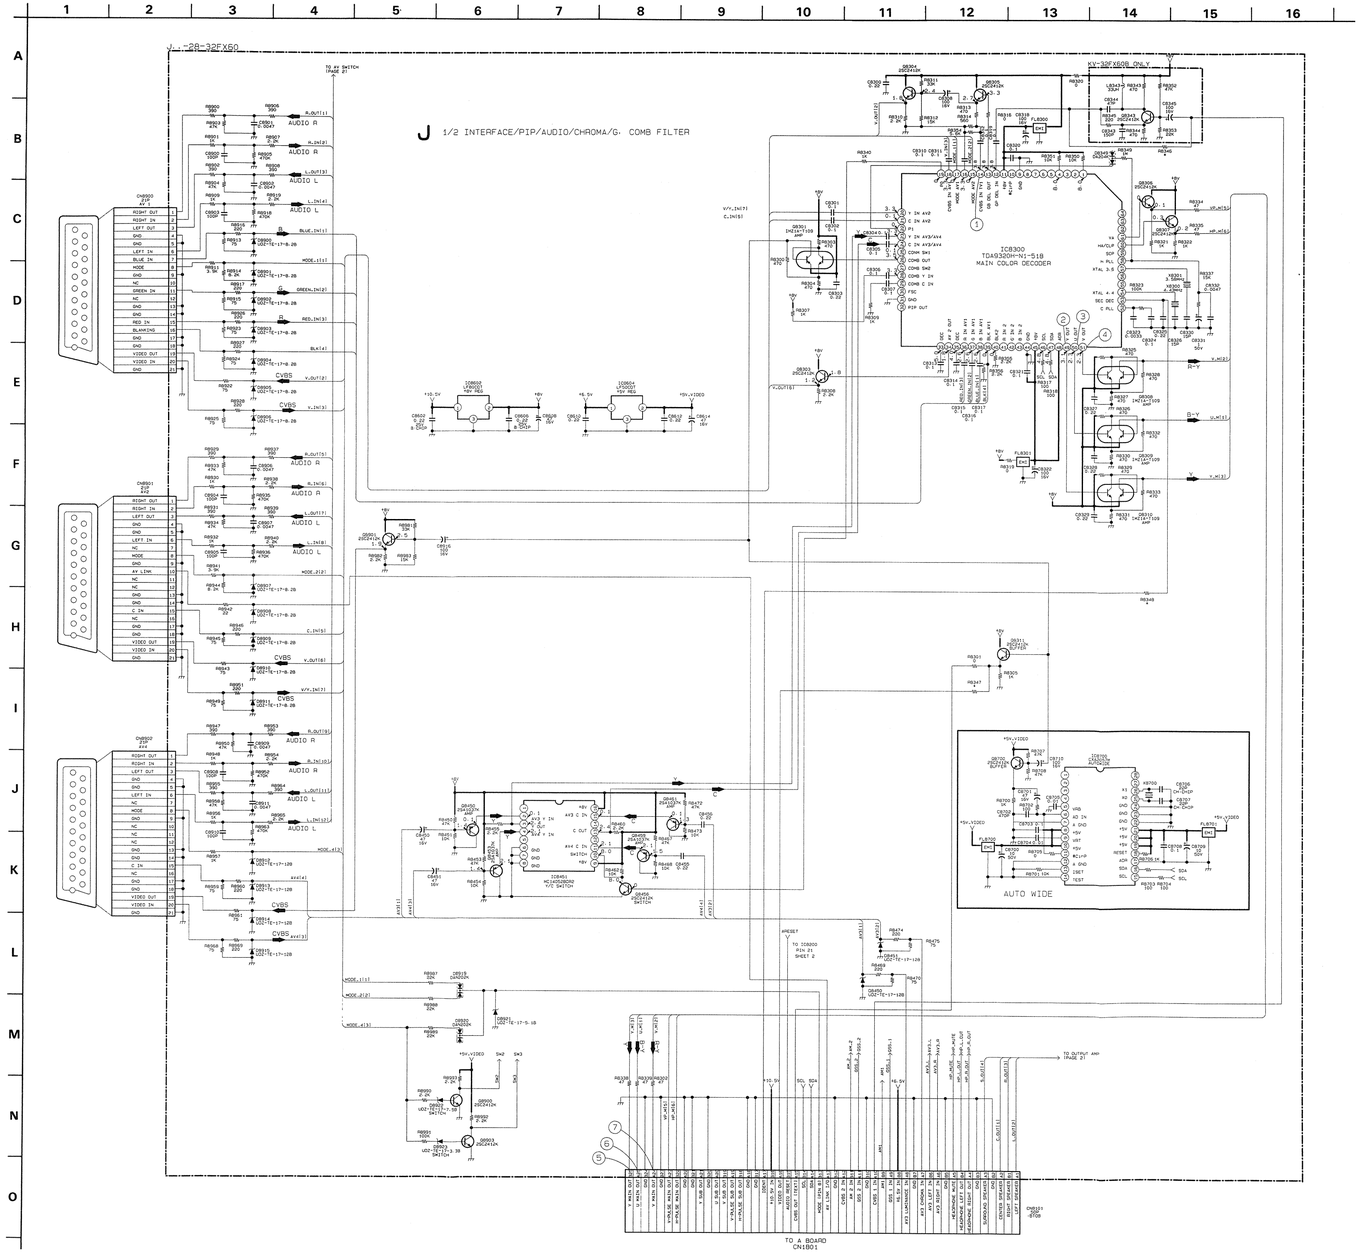

63

64

J BOARD * MARK

Ref	28FX60A	28FX60B	28FX60D	28FX60E	28FX60K	28FX60R	28FX60U	32FX60A	32FX60B	32FX60D	32FX60E	32FX60K	32FX60R	32FX60U
R8347	-	-	-	-	-	-	-	-	100	-	-			
R8348	-	-	-	-	-	-	-	-	SHORT 0	-	-			

Waveforms J1(1/2) Board

① 0.4 Vp-p (H)	② 0.2 Vp-p (H)	③ 1.2 Vp-p (H)	④ 1.0 Vp-p (H)
⑤ 0.2 Vp-p (H)	⑥ 1.2 Vp-p (H)	⑦ 1.0 Vp-p (H)	

65

66

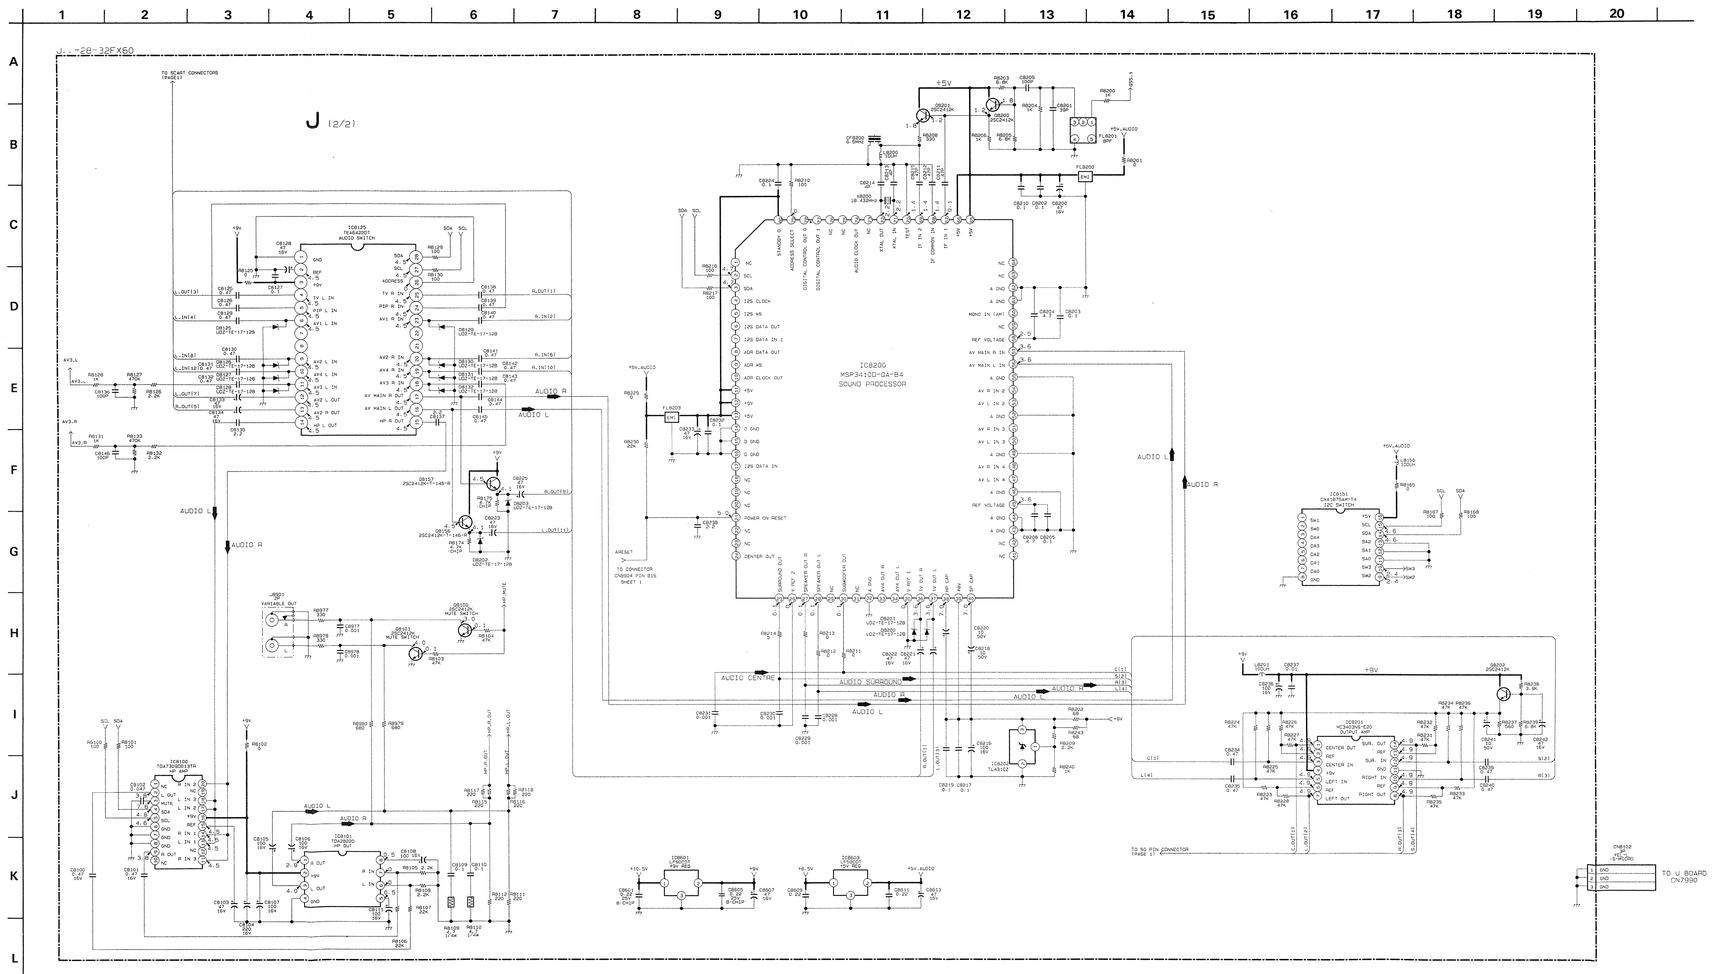
J (2/2)
J..-28-32FX60
TO SCART CONNECTORS
CN*211
IC8125
TEA6415CSTR
AUDIO SWITCH
IC8200
MSP3410D-QA-B4
SOUND PROCESSOR
IC8201
CXA1870AM-T4
DECIMATION
IC8151
CXA1870AM-T4
DECIMATION
IC8100
TDA7850D013TR
IC8101
TDA7850D013TR
IC8901
HCS4206-CDD
OUTPUT AMP
IC8801
TDF 8532
IC8802
TDF 8532
IC8803
TDF 8532
Q8157
2SC4126CY-145-R
Q8158
2SC4126CY-145-R
Q8202
TL431CZ
Q8200
2SC4126
Q8201
2SC4126
Q8900
2SC4126
Q8901
2SC4126
AUDIO L
AUDIO R
AUDIO CENTRE
AUDIO SURROUND
+5V
+9V
+5V_AUDIO
+10.5V
+8.5V
SDA
SCL
TO CONNECTOR
CN8904 PCN B15
SHEET 1
TO 90 PIN CONNECTOR
TRADE 1?
CN8102
TO U BOARD
CN73930

U [AUDIO INTERFACE / OUTPUT]

E Board <Component Side>

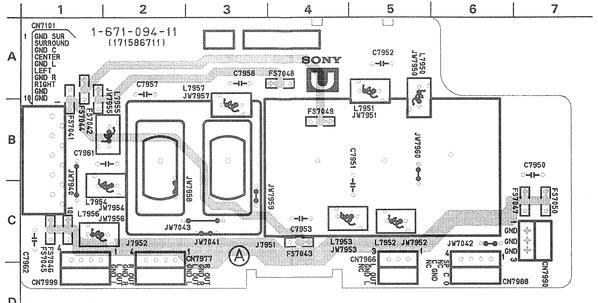

U Board <Conductor Side>

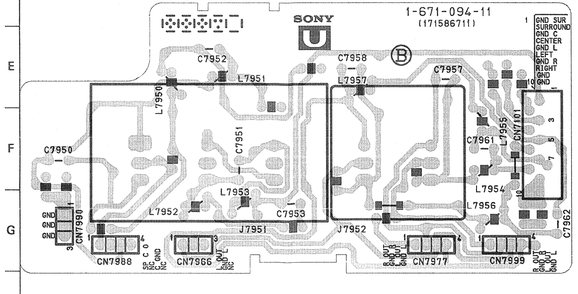

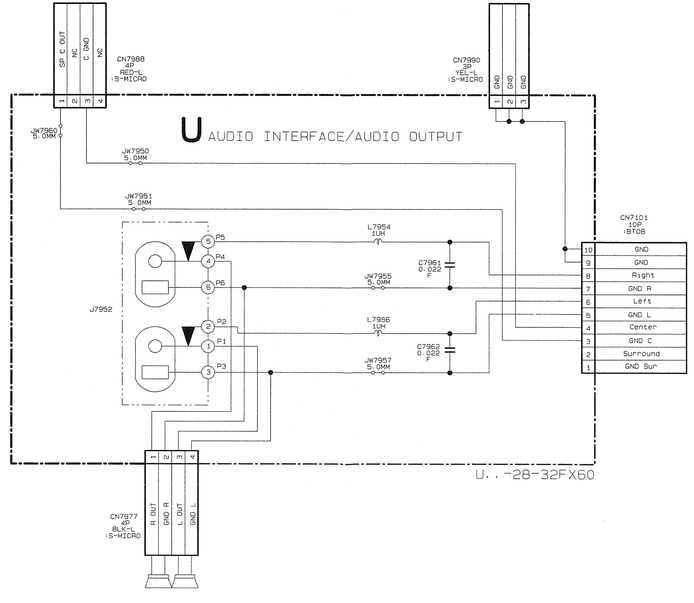

A [SIGNAL AND AUDIO AMP]

A BOARD

IC	
IC1126	F - 6
IC1151	F - 5
IC1176	G - 15
IC1400	B - 5
IC1601	C - 3
IC1602	B - 3
IC1603	A - 11
IC1604	D - 3
IC1605	F - 3

TRANSISTOR	
Q1100	A - 2
Q1201	D - 6
Q1202	E - 6
Q1203	F - 9
Q1204	F - 9
Q1226	G - 9
Q1227	G - 9
Q1326	E - 11
Q1327	E - 11
Q1328	E - 10
Q1329	E - 10
Q1400	D - 4
Q1626	B - 5

DIODE	
D1100	A - 2
D1101	B - 2
D1102	B - 2
D1103	B - 4
D1401	E - 4
D1402	D - 5
D1403	D - 4
D1404	D - 5
D1626	B - 6
D1627	C - 5
D1629	E - 1

A Board <Conductor Side>

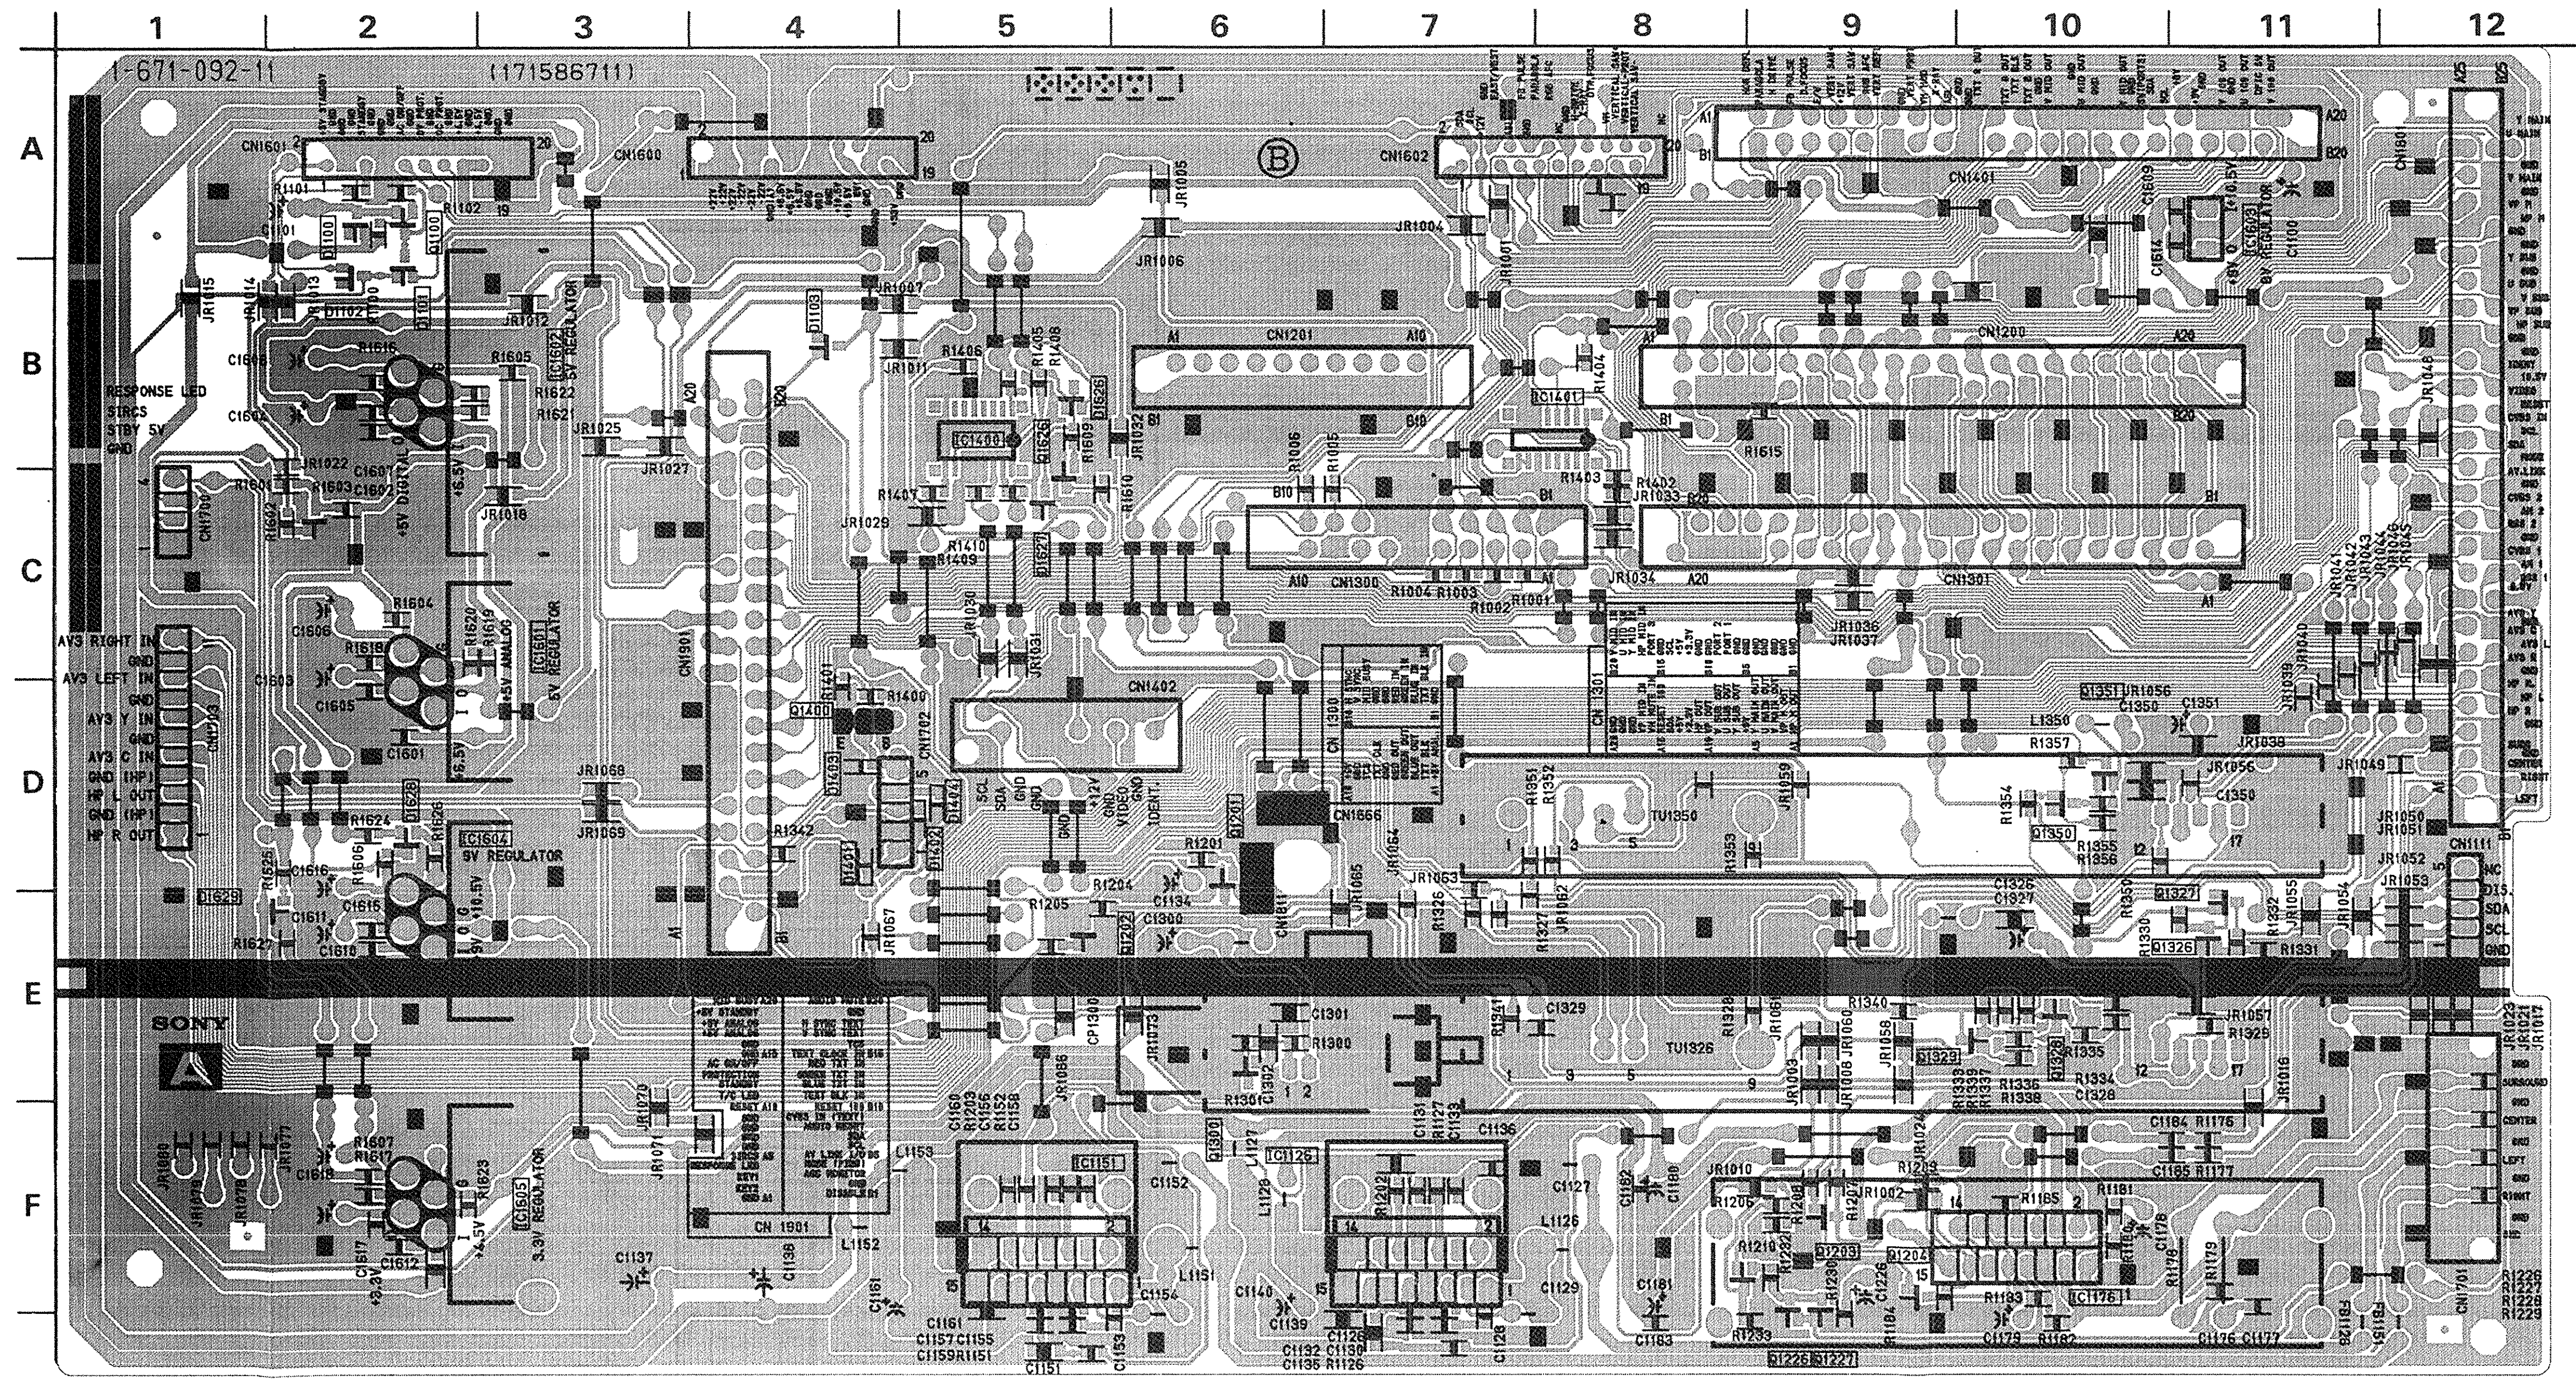

A Board <Component Side>

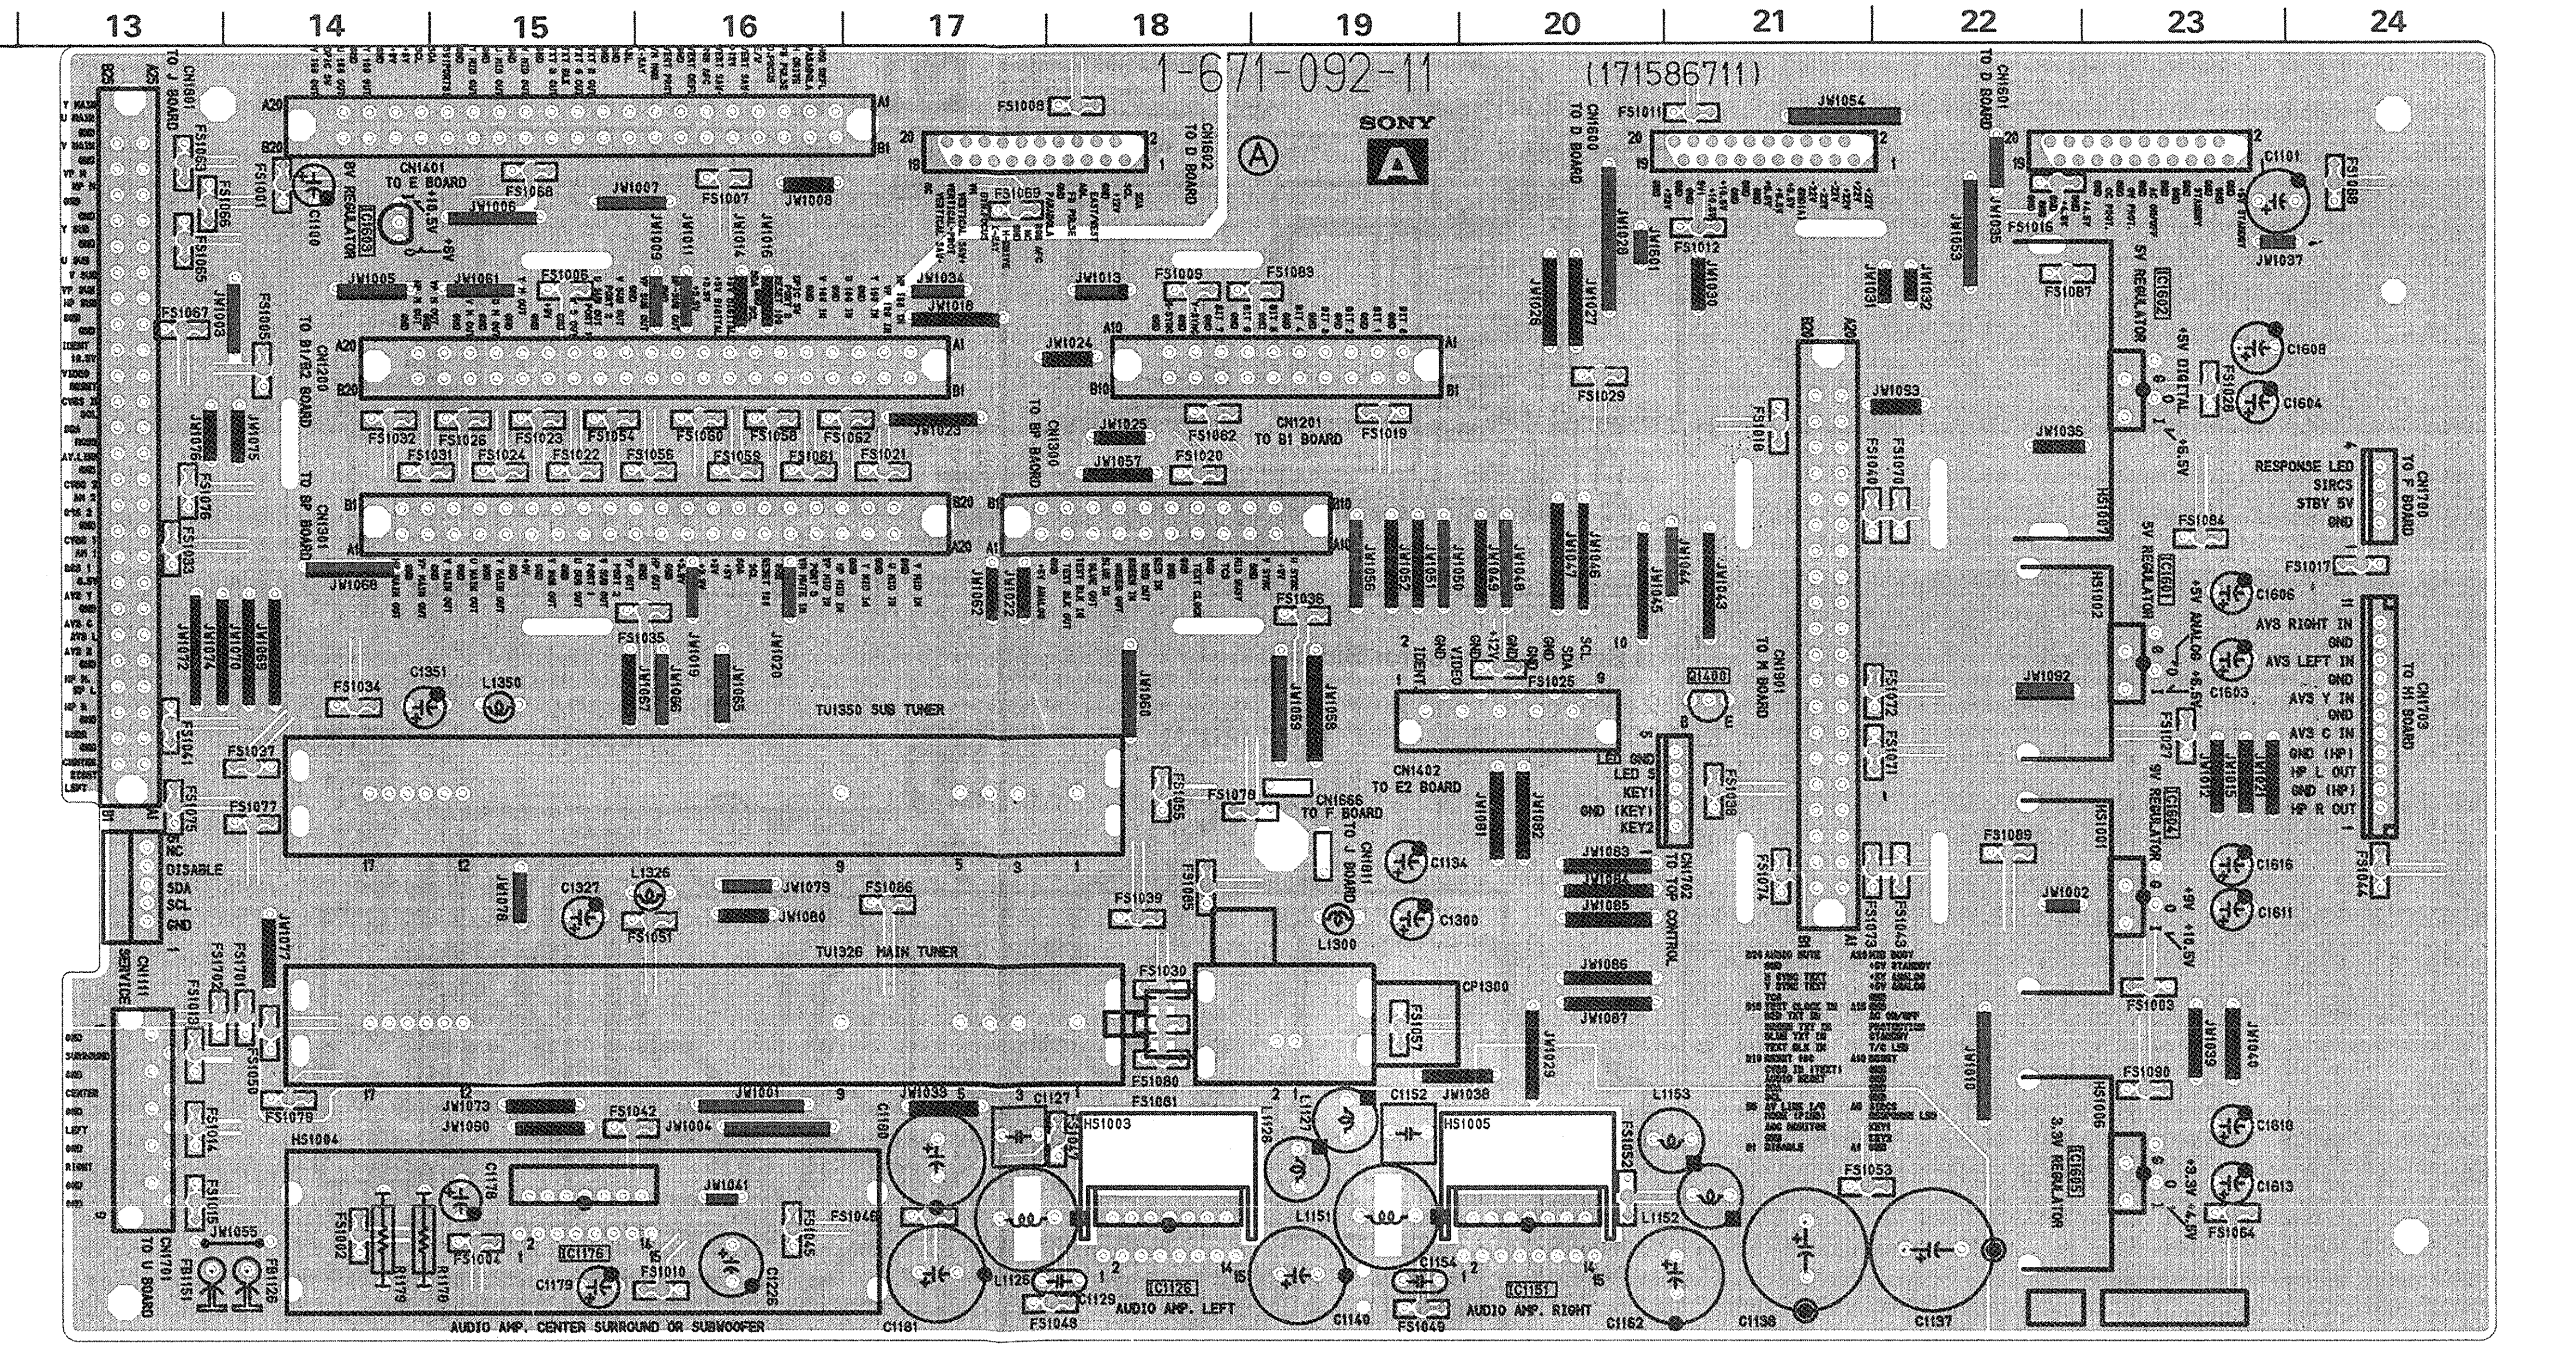

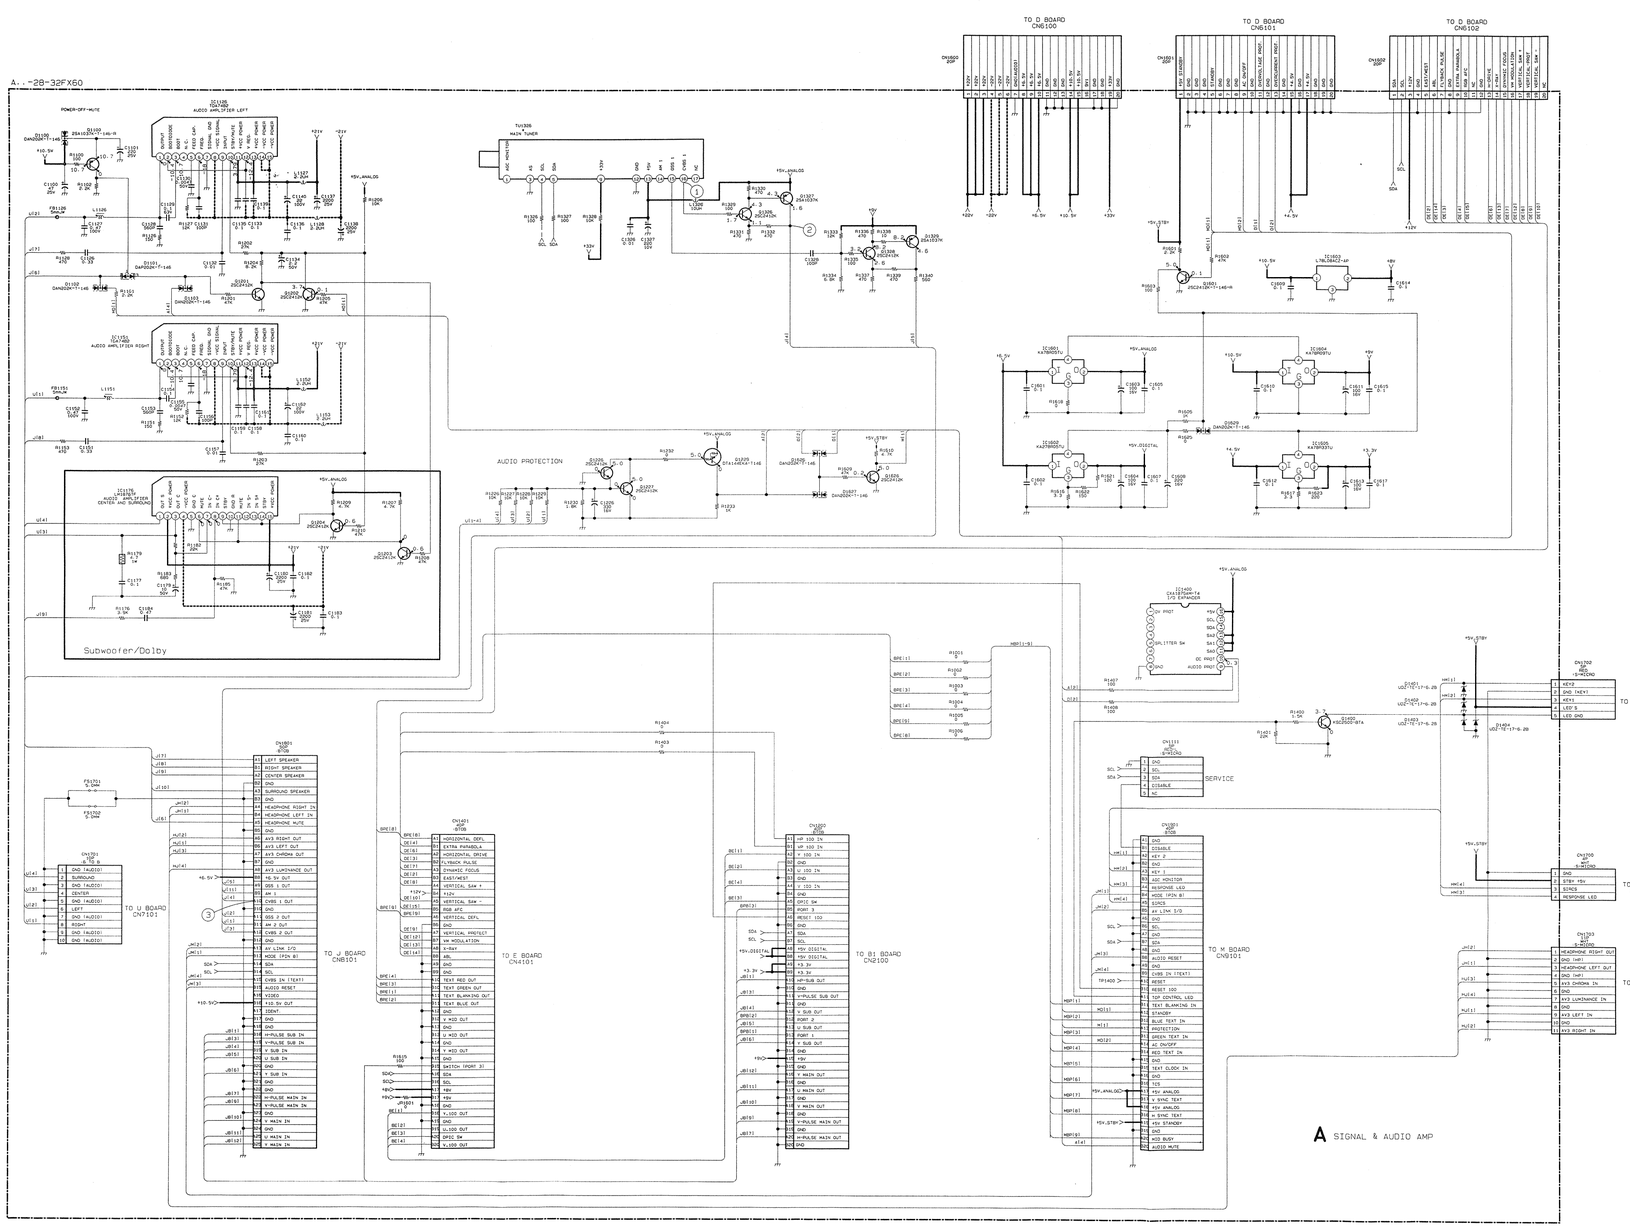

A BOARD * MARK

Ref	28FX60A	28FX60B	28FX60D	28FX60E	28FX60K	28FX60R	28FX60U	32FX60A	32FX60B	32FX60D	32FX60E	32FX60K	32FX60R	32FX60U
TU1326	TUNER/VIF (AEP)	TUNER/VIF (FR)	TUNER/VIF (AEP)	TUNER/VIF (AEP)	TUNER/VIF (AEP)	TUNER/VIF (AEP)	TUNER/VIF (UK)	TUNER/VIF (AEP)	TUNER/VIF (FR)	TUNER/VIF (AEP)	TUNER/VIF (AEP)	TUNER/VIF (AEP)	TUNER/VIF (AEP)	TUNER/VIF (AEP)

Waveforms A Board



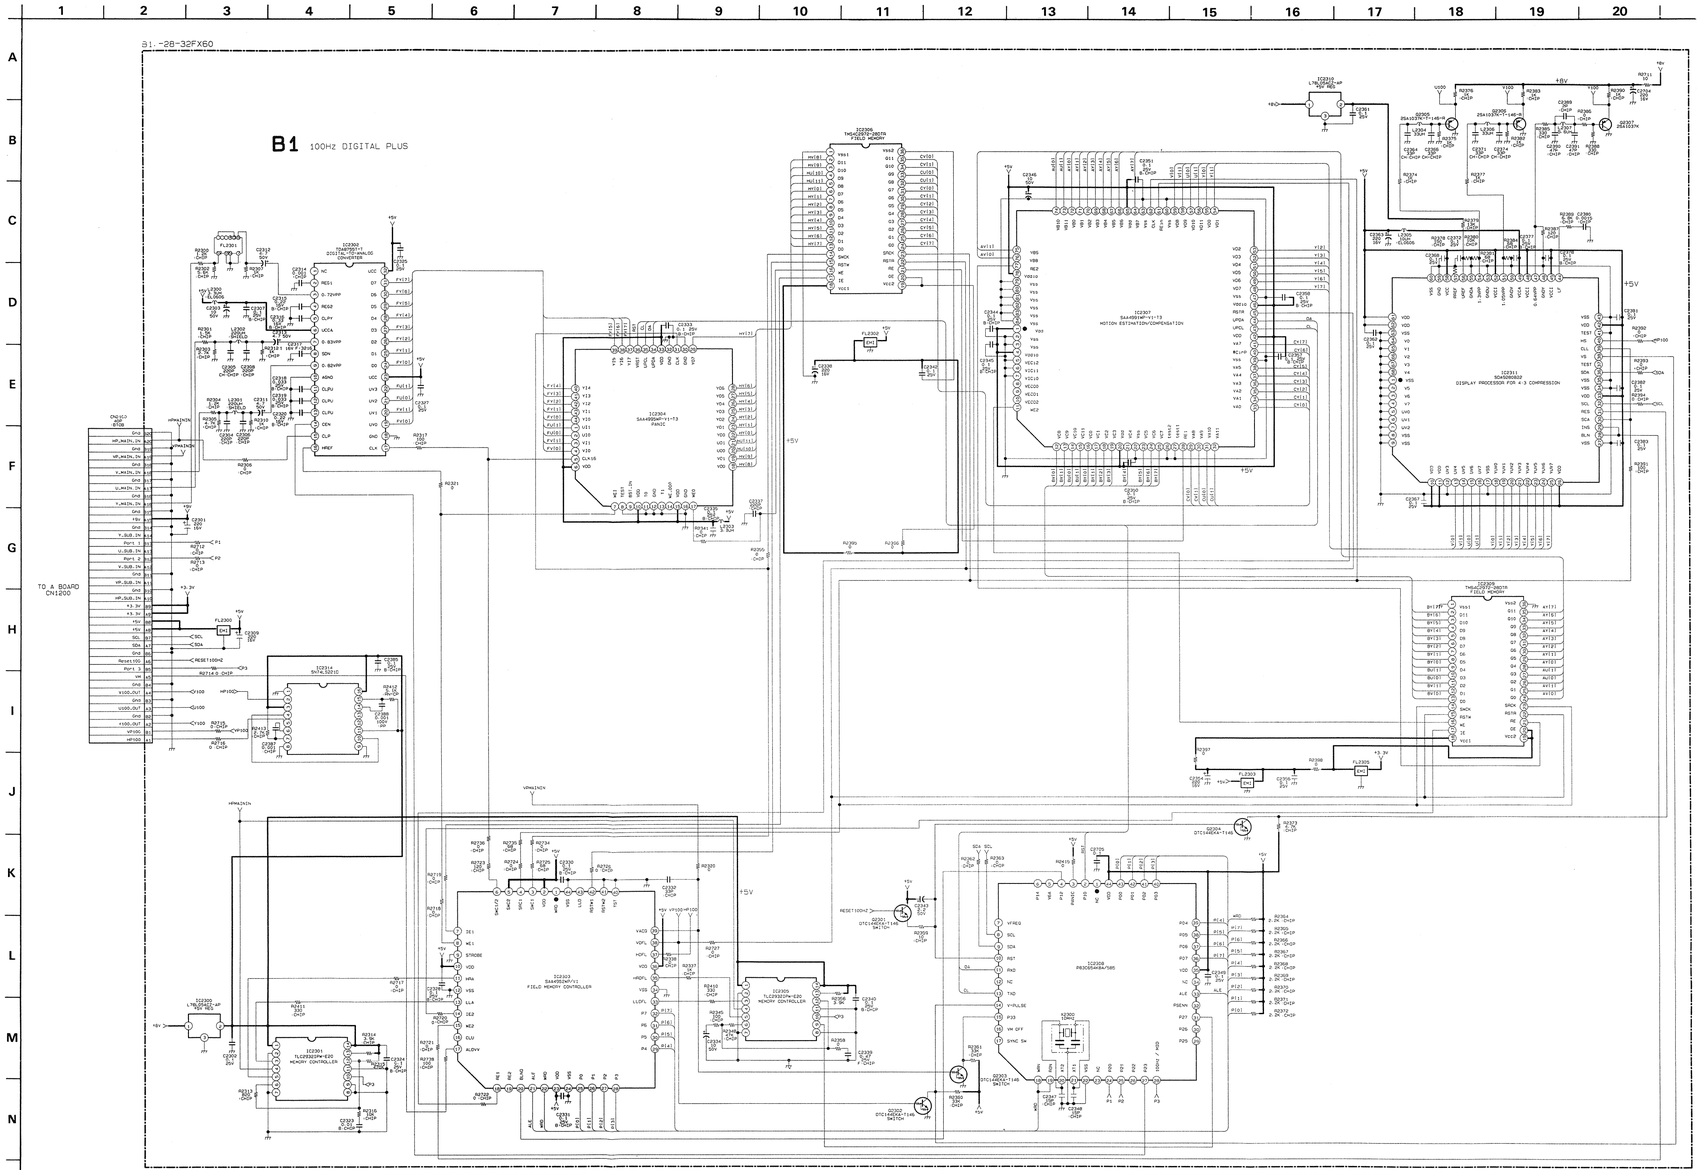

B1 [100Hz DIGITAL PLUS]

B1 BOARD

IC		TRANSISTOR	
IC2300	E - 4	Q2301	F - 7
IC2301	E - 7	Q2302	F - 7
IC2302	A - 8	Q2303	F - 7
IC2304	A - 10	Q2304	F - 7
IC2305	D - 9	Q2305	C - 6
IC2306	B - 10	Q2306	C - 6
IC2307	D - 10	Q2307	C - 6
IC2309	E - 10		
IC2310	D - 7		
IC2311	C - 8		
IC2314	F - 7		

B1 Board <Conductor Side>

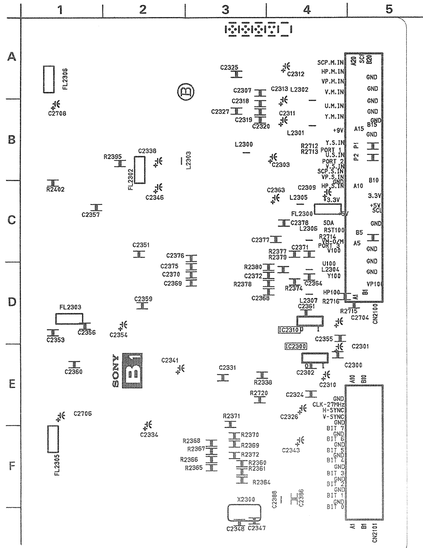

B1 Board <Component Side>

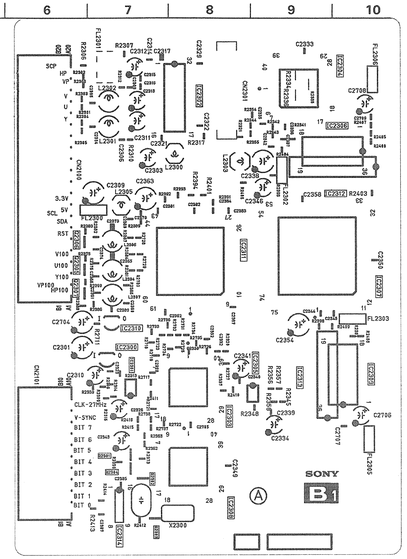

VM [VELOCITY MODULATION]

VM Board

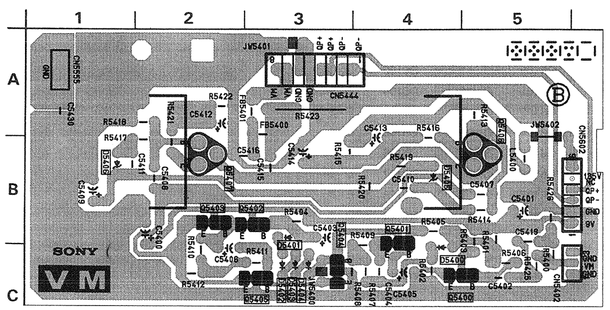

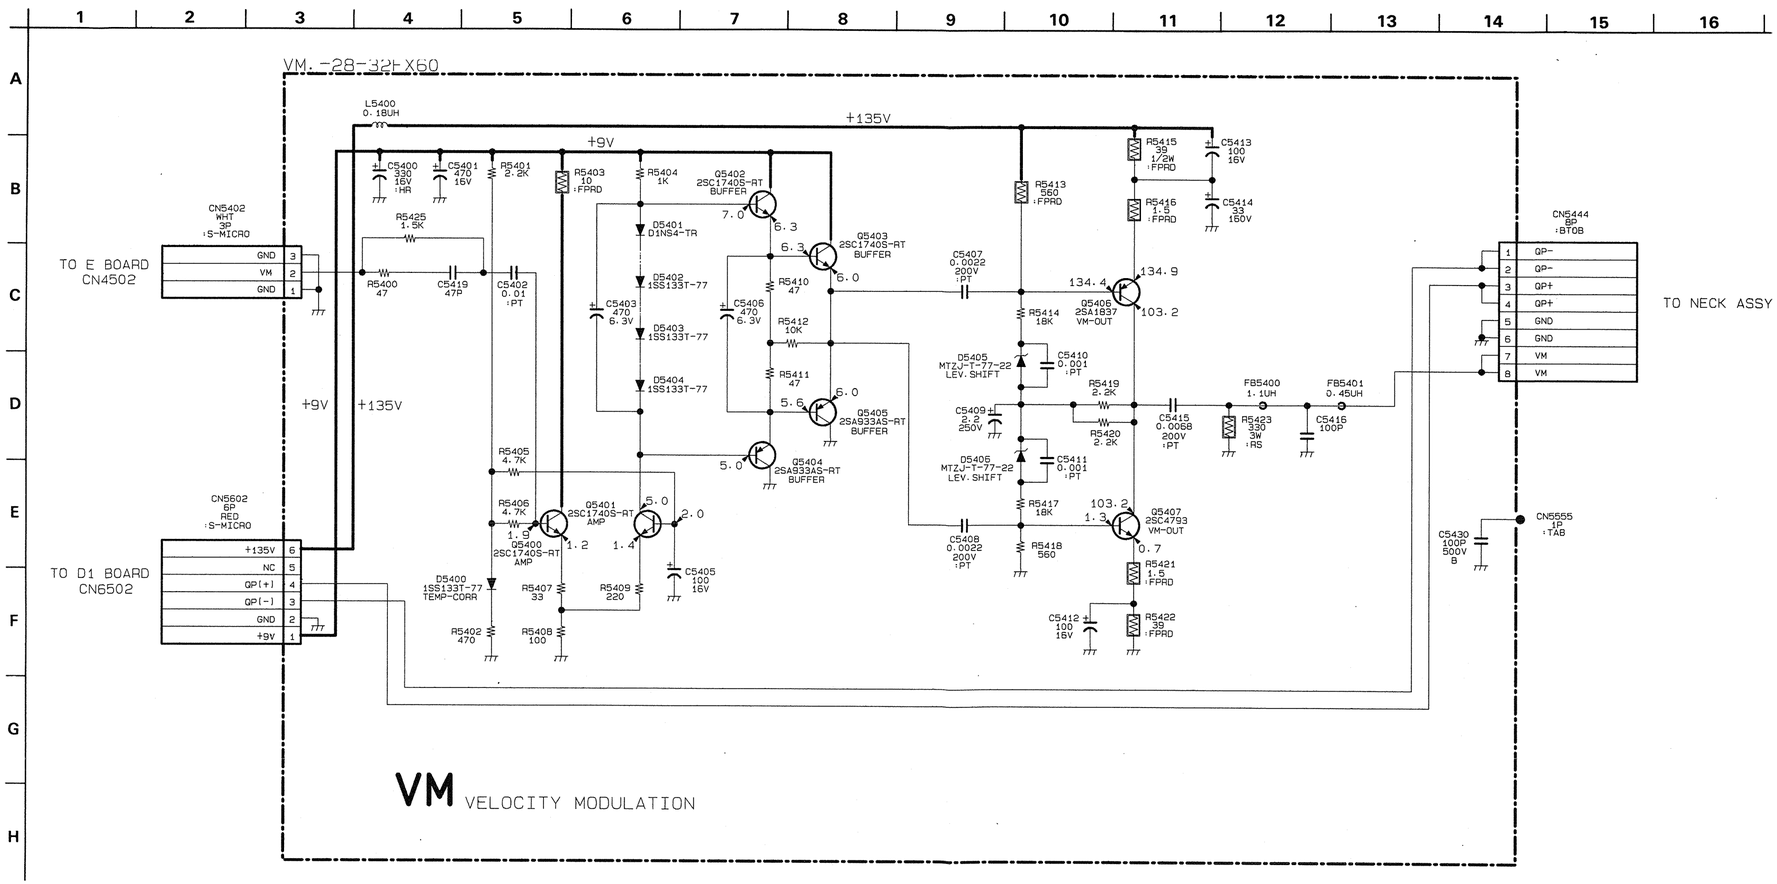

D1 [DEFLECTION]

D1 Board

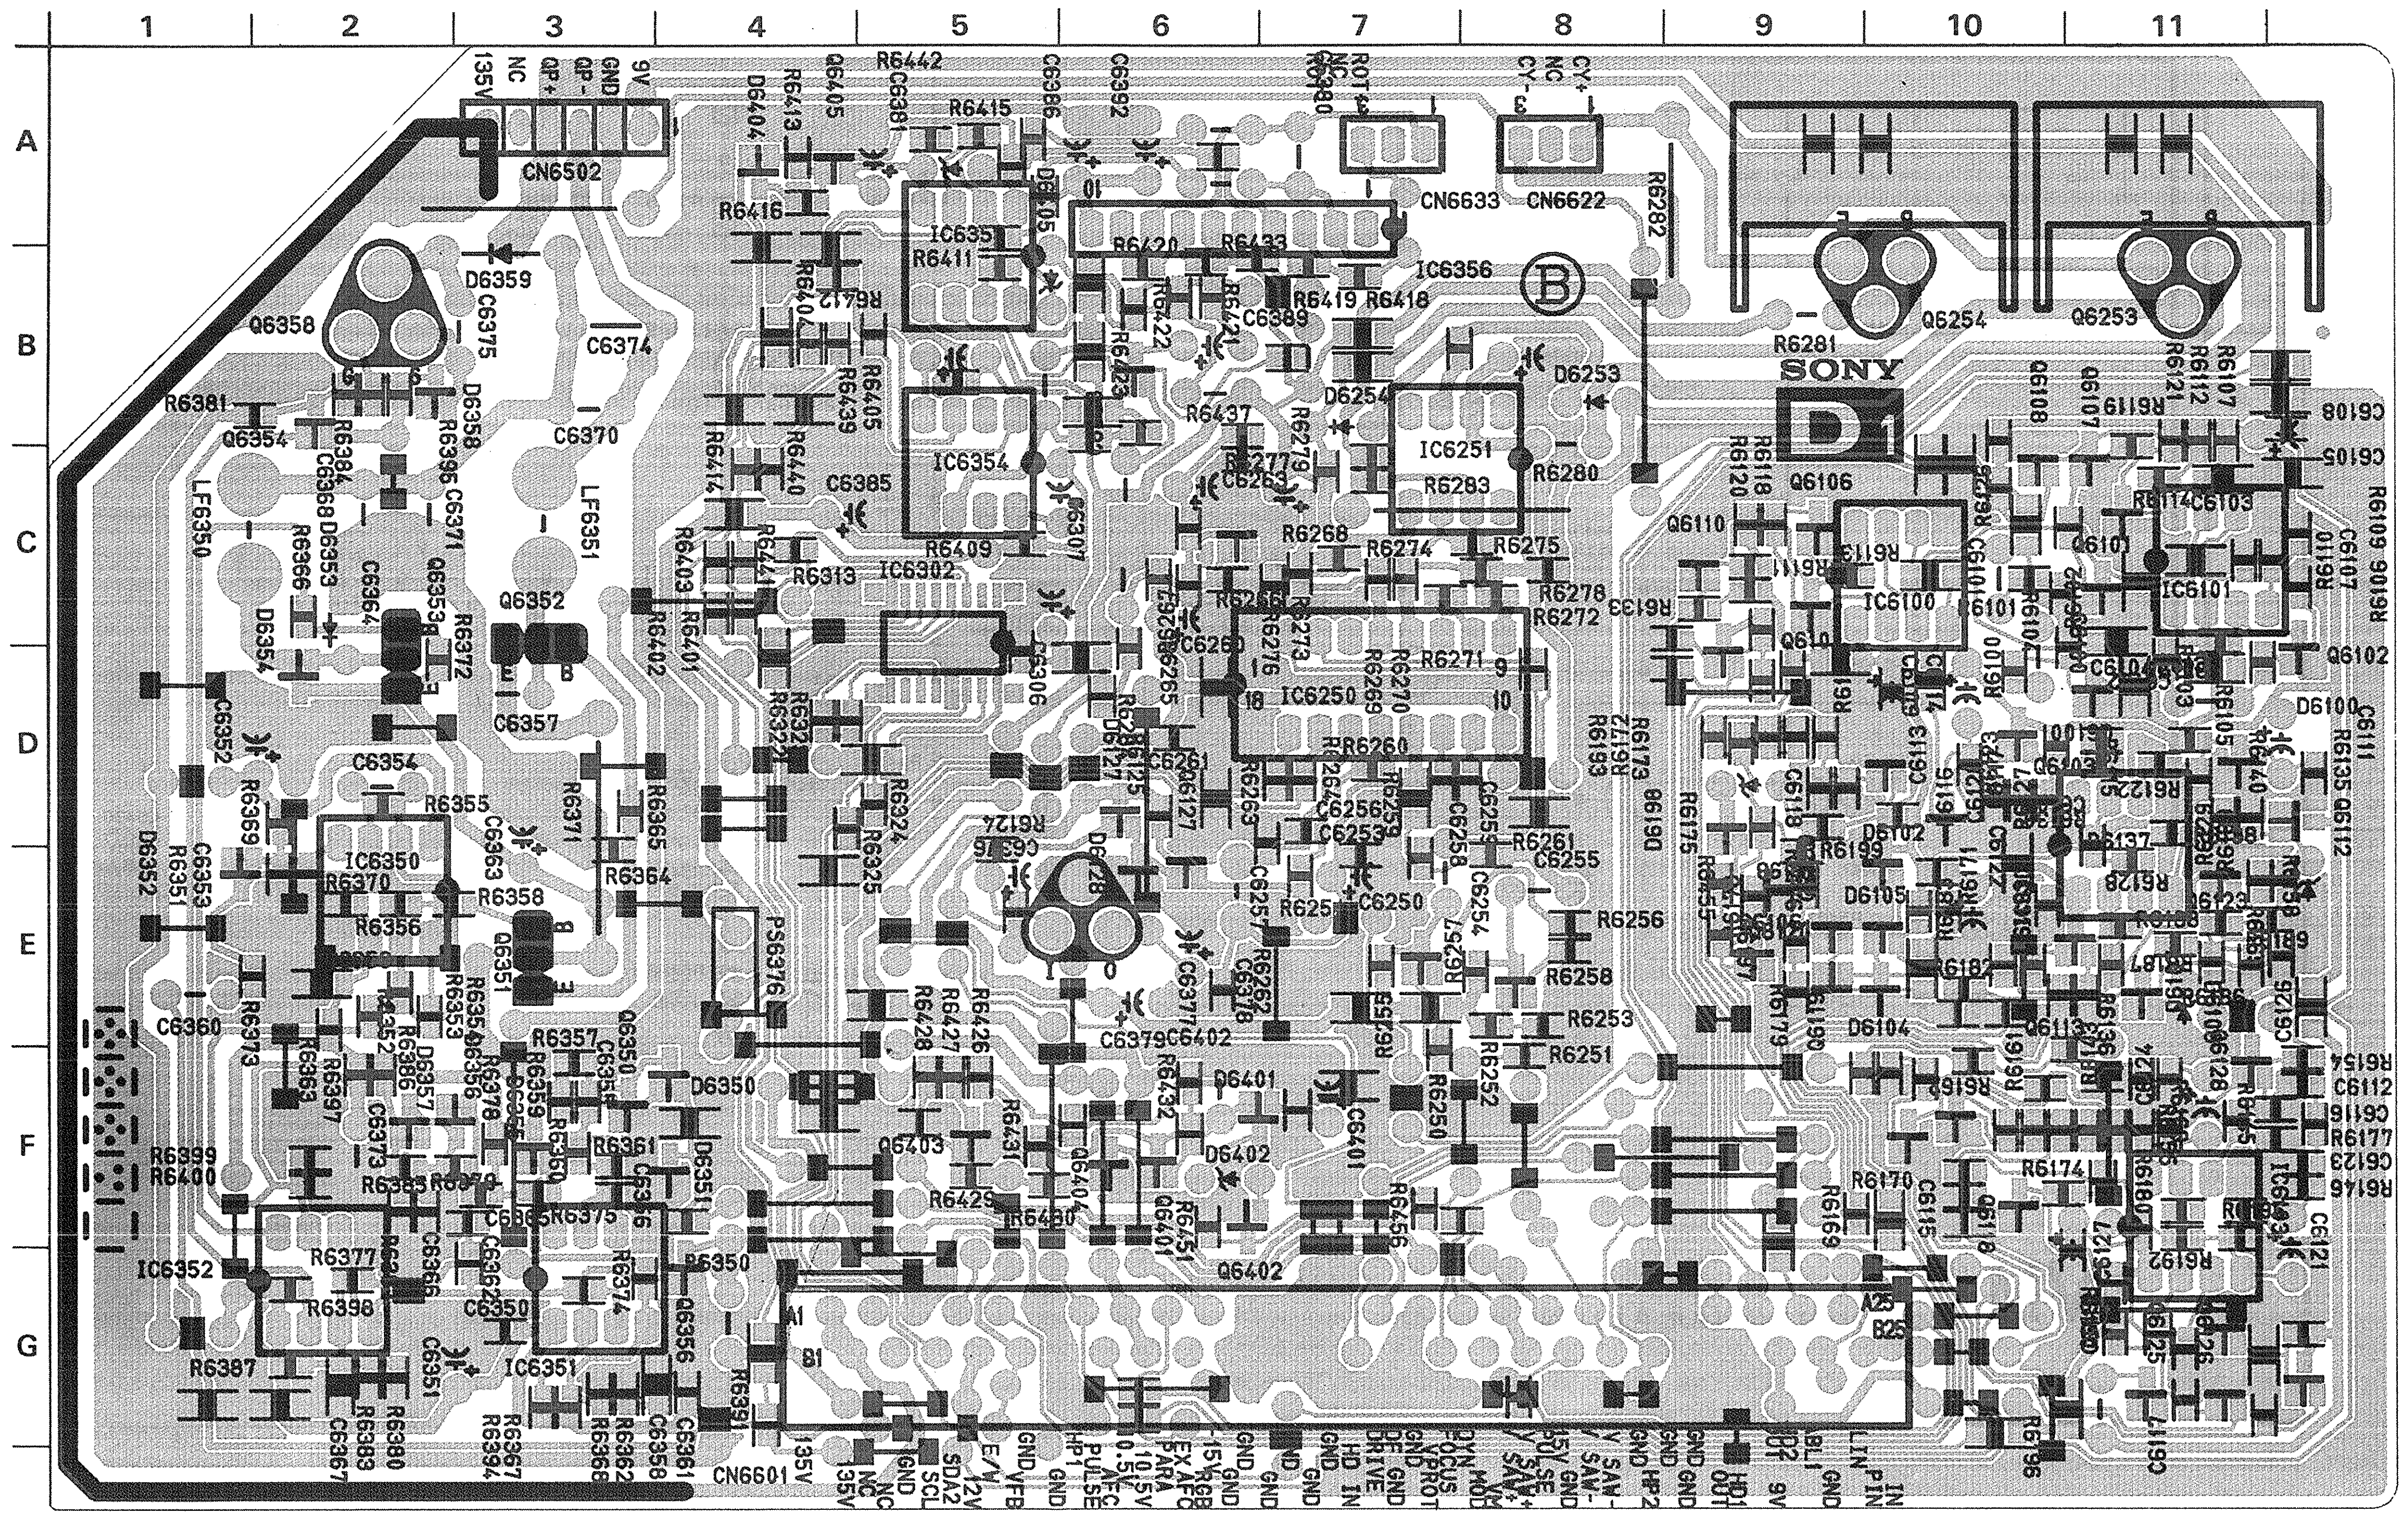

D1 BOARD

IC			
IC6100	C - 9	Q6350	E - 8
IC6101	C - 12	Q6351	E - 3
IC6102	D - 11	Q6352	D - 3
IC6103	G - 12	Q6353	C - 2
IC6250	D - 8	Q6354	C - 2
IC6251	C - 8	Q6356	G - 4
IC6302	D - 5	Q6358	B - 2
IC6350	D - 3	Q6401	F - 7
IC6351	G - 3	Q6402	G - 6
IC6352	G - 1	Q6403	F - 5
IC6353	E - 5	Q6404	G - 6
IC6354	C - 5	Q6455	C - 8
IC6355	A - 5	Q6465	B - 5
IC6356	A - 6	**DIODE**	
TRANSISTOR		D6100	D - 12
Q6100	D - 11	D6101	E - 12
Q6101	C - 11	D6102	D - 10
Q6102	C - 12	D6104	E - 9
Q6104	C - 9	D6105	E - 9
Q6105	B - 11	D6106	E - 8
Q6106	C - 9	D6108	F - 11
Q6107	E - 11	D6127	D - 6
Q6108	B - 10	D6128	E - 6
Q6110	C - 8	D6129	D - 8
Q6118	G - 10	D6198	D - 8
Q6119	E - 8	D6253	B - 8
Q6120	E - 9	D6254	B - 7
Q6122	E - 9	D6350	F - 4
Q6123	E - 12	D6351	F - 4
Q6125	H - 11	D6352	E - 1
Q6126	H - 11	D6353	C - 2
Q6127	E - 6	D6354	D - 2
Q6128	F - 12	D6355	E - 3
Q6130	H - 11	D6358	B - 2
Q6131	G - 12	D6359	B - 3
Q6201	F - 10	D6401	F - 7
Q6202	F - 10	D6402	F - 6
Q6250	E - 8	D6403	A - 5
Q6251	E - 8	D6404	A - 4
Q6252	B - 10	D6405	A - 5
Q6253	B - 11		
Q6254	C - 2		

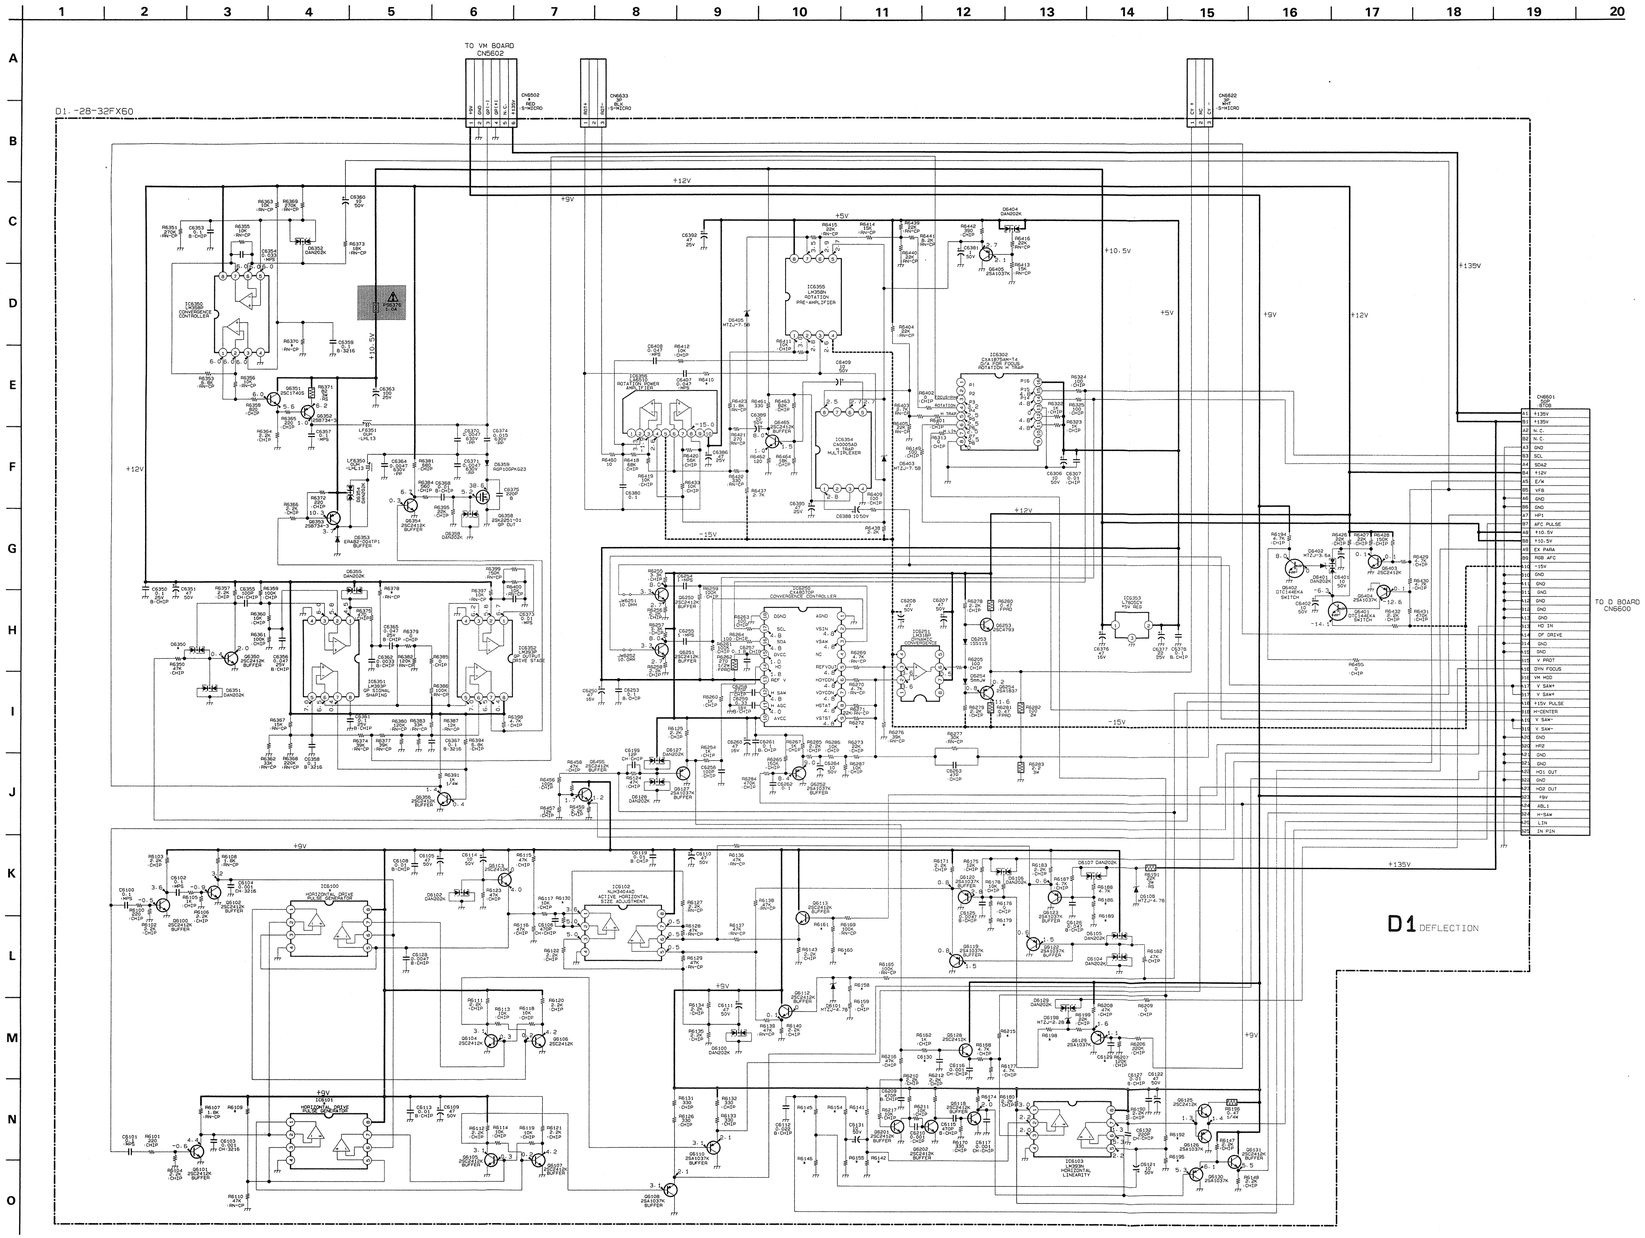

D1 BOARD * MARK

Ref	28FX60A	28FX60B	28FX60D	28FX60E	28FX60K	28FX60R	28FX60U	32FX60A	32FX60B	32FX60D	32FX60E	32FX60K	32FX60R	32FX60U
C6129	0.047MF	0.047MF	0.047MF	0.047MF	0.047MF	0.047MF	0.047MF	0.1MF	0.1MF	0.1MF	0.1MF	0.1MF	0.1MF	0.1MF
C6130	220PF	220PF	220PF	220PF	220PF	220PF	220PF	-	-	-	-	-	-	-
CN6502	1-564-509-11	1-564-509-11	1-564-509-11	1-564-509-11	1-564-509-11	1-564-509-11	1-564-509-11	1-568-881-51	1-568-881-51	1-568-881-51	1-568-881-51	1-568-881-51	1-568-881-51	1-568-881-51
D6350	-	-	-	-	-	-	-	DAN202K-T-146	DAN202K-T-146	DAN202K-T-146	DAN202K-T-146	DAN202K-T-146	DAN202K-T-146	DAN202K-T-146
IC6100	8-759-10-393	8-759-10-393	8-759-10-393	8-759-10-393	8-759-10-393	8-759-10-393	8-759-10-393	8-759-45-095	8-759-45-095	8-759-45-095	8-759-45-095	8-759-45-095	8-759-45-095	8-759-45-095
IC6101	8-759-10-393	8-759-10-393	8-759-10-393	8-759-10-393	8-759-10-393	8-759-10-393	8-759-10-393	8-759-45-095	8-759-45-095	8-759-45-095	8-759-45-095	8-759-45-095	8-759-45-095	8-759-45-095
IC6350	8-759-13-580	8-759-13-580	8-759-13-580	8-759-13-580	8-759-13-580	8-759-13-580	8-759-13-580	8-759-00-870	8-759-00-870	8-759-00-870	8-759-00-870	8-759-00-870	8-759-00-870	8-759-00-870
IC6351	8-759-193-93	8-759-193-93	8-759-193-93	8-759-193-93	8-759-193-93	8-759-193-93	8-759-193-93	8-759-450-95	8-759-450-95	8-759-450-95	8-759-450-95	8-759-450-95	8-759-450-95	8-759-450-95
IC6352	8-759-103-93	8-759-103-93	8-759-103-93	8-759-103-93	8-759-103-93	8-759-103-93	8-759-103-93	8-759-450-95	8-759-450-95	8-759-450-95	8-759-450-95	8-759-450-95	8-759-450-95	8-759-450-95
R6109	22K	22K	22K	22K	22K	22K	22K	47K	47K	47K	47K	47K	47K	47K
R6130	470K	470K	470K	470K	470K	470K	470K	-	-	-	-	-	-	-
R6141	6.8K	6.8K	6.8K	6.8K	6.8K	6.8K	6.8K	4.7K	4.7K	4.7K	4.7K	4.7K	4.7K	4.7K
R6142	2.2K	2.2K	2.2K	2.2K	2.2K	2.2K	2.2K	1.5K	1.5K	1.5K	1.5K	1.5K	1.5K	1.5K
R6145	12K	12K	12K	12K	12K	12K	12K	680	680	680	680	680	680	680
R6146	33K	33K	33K	33K	33K	33K	33K	4.7K	4.7K	4.7K	4.7K	4.7K	4.7K	4.7K
R6154	2.2K	2.2K	2.2K	2.2K	2.2K	2.2K	2.2K	470	470	470	470	470	470	470
R6155	5.6K	5.6K	5.6K	5.6K	5.6K	5.6K	5.6K	4.7K	4.7K	4.7K	4.7K	4.7K	4.7K	4.7K
R6158	10K	10K	10K	10K	10K	10K	10K	6.8K	6.8K	6.8K	6.8K	6.8K	6.8K	6.8K
R6160	SHORT 0	SHORT 0	SHORT 0	SHORT 0	SHORT 0	SHORT 0	SHORT 0	1.5K	1.5K	1.5K	1.5K	1.5K	1.5K	1.5K
R6161	6.8K	6.8K	6.8K	6.8K	6.8K	6.8K	6.8K	5.6K	5.6K	5.6K	5.6K	5.6K	5.6K	5.6K
R6174	12K	12K	12K	12K	12K	12K	12K	22K	22K	22K	22K	22K	22K	22K
R6179	5.6K	5.6K	5.6K	5.6K	5.6K	5.6K	5.6K	2.7K	2.7K	2.7K	2.7K	2.7K	2.7K	2.7K
R6186	SHORT 0	SHORT 0	SHORT 0	SHORT 0	SHORT 0	SHORT 0	SHORT 0	1K	1K	1K	1K	1K	1K	1K
R6189	4.7K	4.7K	4.7K	4.7K	4.7K	4.7K	4.7K	1K	1K	1K	1K	1K	1K	1K
R6192	22K	22K	22K	22K	22K	22K	22K	4.7K	4.7K	4.7K	4.7K	4.7K	4.7K	4.7K
R6195	68K	68K	68K	68K	68K	68K	68K	4.7K	4.7K	4.7K	4.7K	4.7K	4.7K	4.7K
R6198	12K	12K	12K	12K	12K	12K	12K	22K	22K	22K	22K	22K	22K	22K
R6215	-	-	-	-	-	-	-	47K	47K	47K	47K	47K	47K	47K
R6272	22K	22K	22K	22K	22K	22K	22K	-	-	-	-	-	-	-
R6370	10K	10K	10K	10K	10K	10K	10K	12K	12K	12K	12K	12K	12K	12K
R6410	10K	10K	10K	10K	10K	10K	10K	12K	12K	12K	12K	12K	12K	12K

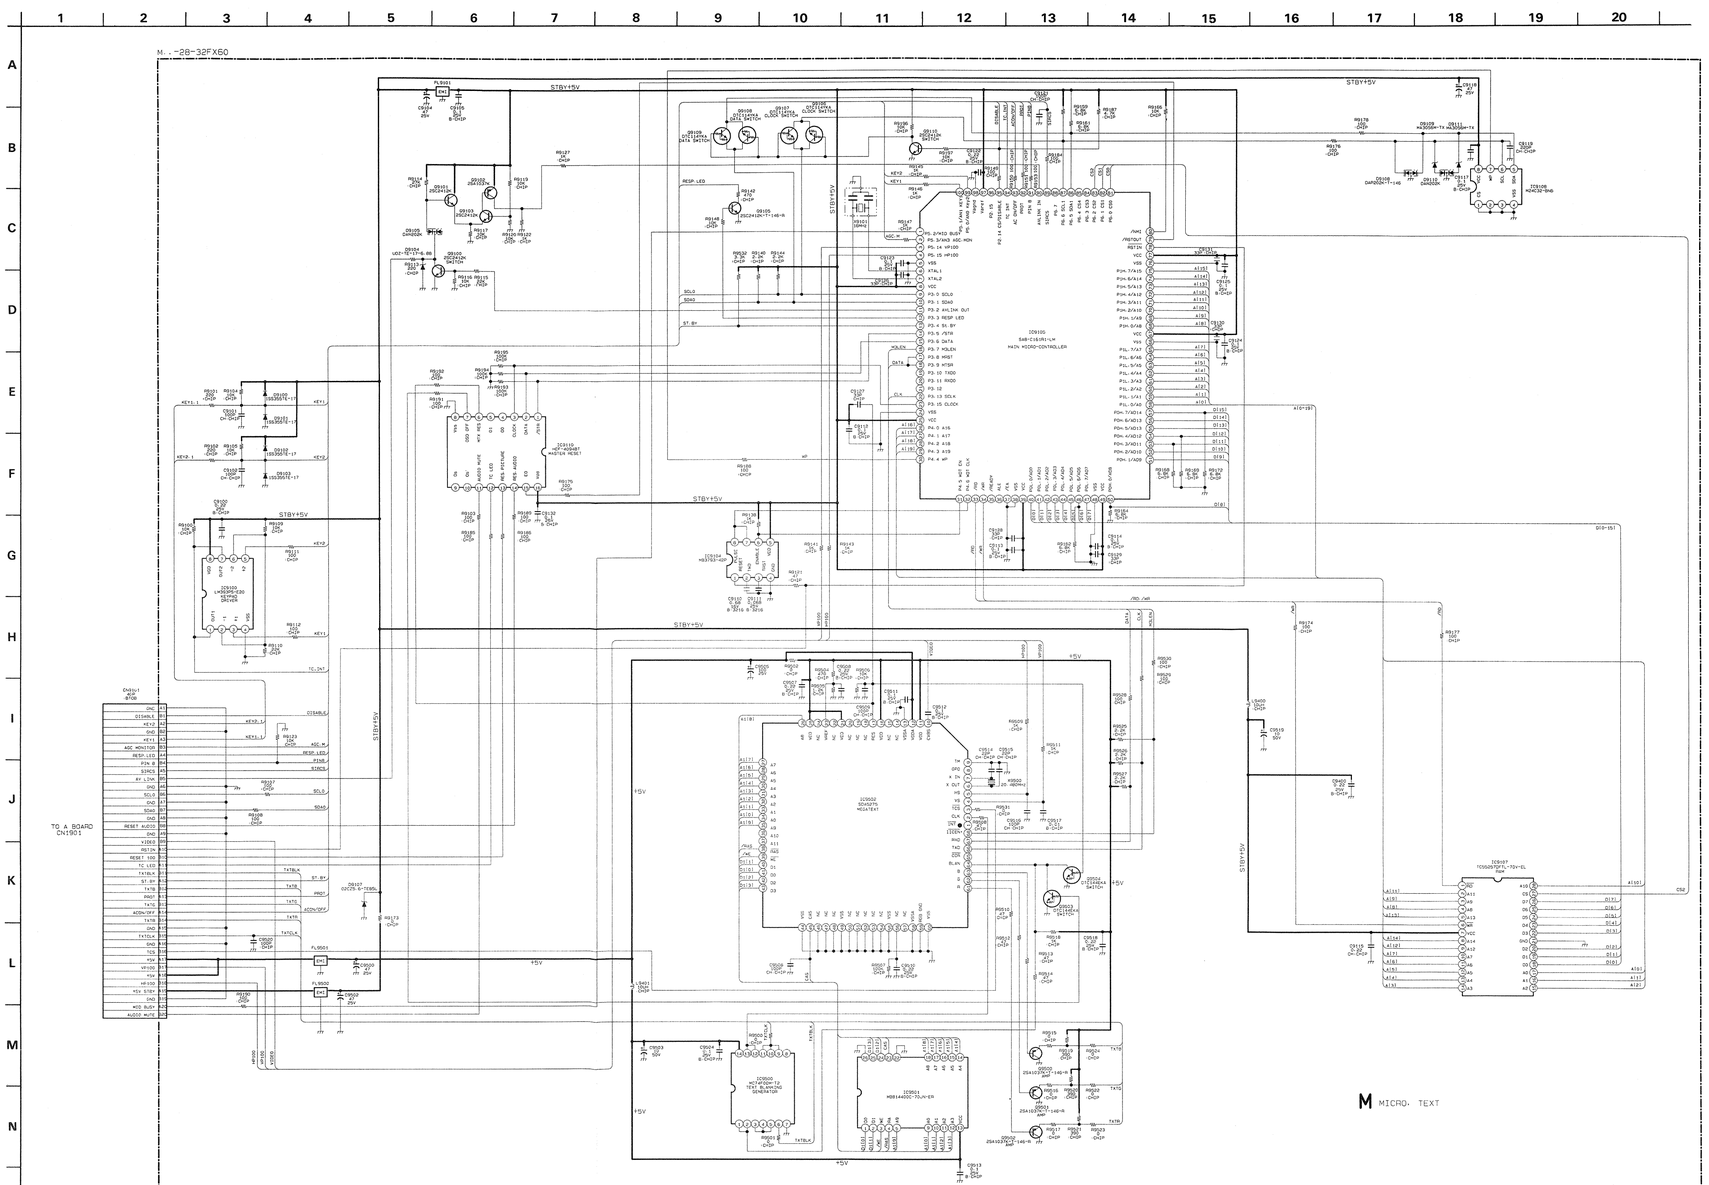

M [MICRO, TEXT]

M Board <Conductor Side>

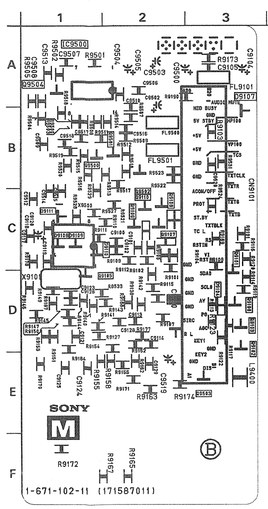

M Board <Component Side>

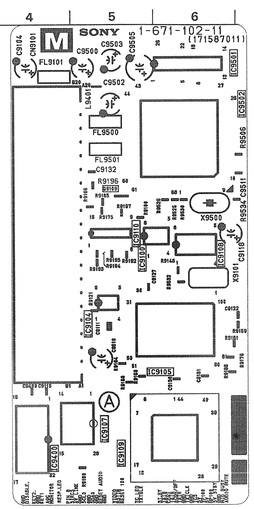

M BOARD

IC	
IC9100	C - 5
IC9104	D - 5
IC9105	E - 6
IC9107	E - 5
IC9108	C - 6
IC9109	F - 5
IC9110	C - 5
IC9500	A - 1
IC9502	B - 6
TRANSISTOR	
Q9100	D - 3
Q9101	C - 3
Q9102	D - 3
Q9103	D - 3
Q9105	D - 1
Q9106	C - 2
Q9107	C - 2
Q9108	C - 2
Q9109	B - 5
Q9110	C - 2
Q9500	B - 1
Q9501	B - 2
Q9502	C - 2
Q9503	E - 3
Q9504	A - 1
DIODE	
D9104	D - 3
D9107	A - 3
D9108	C - 1
D9109	C - 1
D9110	C - 2
D9111	C - 1

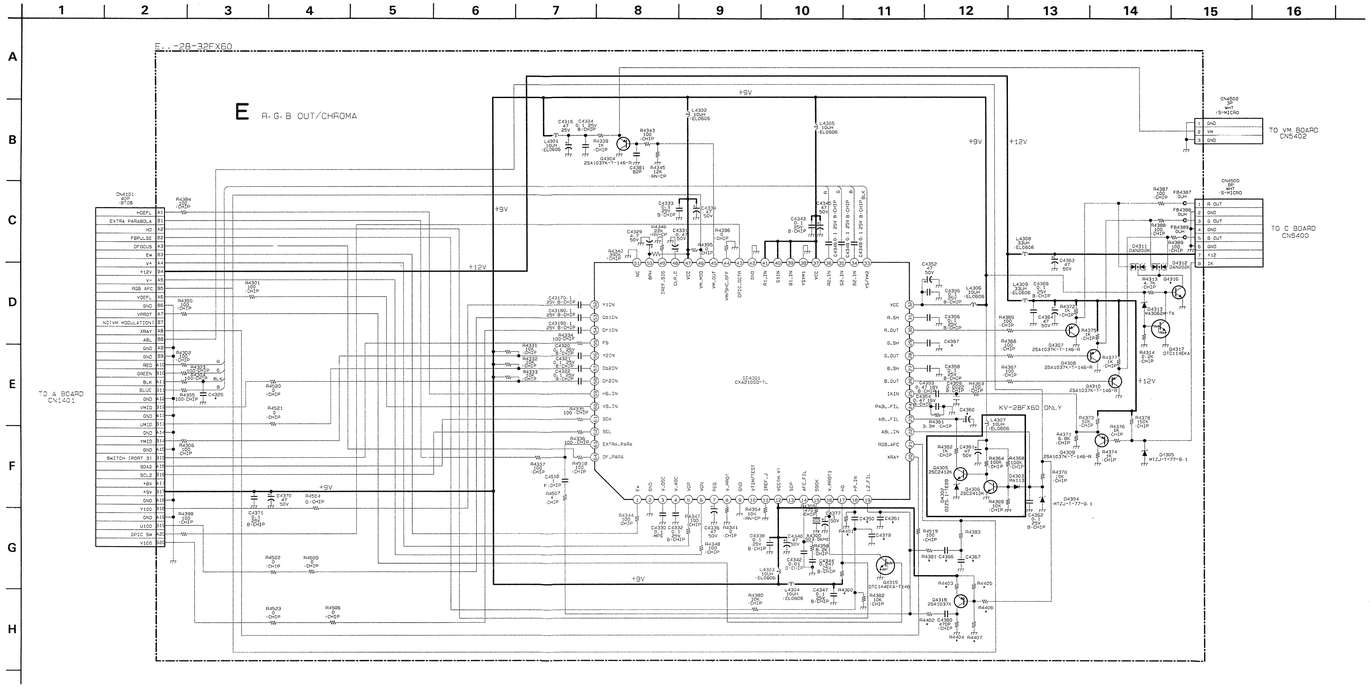

E [RGB OUT / CHROMA]

E BOARD * MARK

Ref	29FX60A	28FX60B	28FX60D	29FX60E	29FX60K	28FX60R	29FX60U	32FX60A	32FX60B	32FX60D	32FX60E	32FX60K	32FX60R	32FX60U
C4335	-	-	-	-	-	-	-	10PF	10PF	10PF	10PF	10PF	10PF	10PF
C4350	0.1MF	0.1MF	0.1MF	0.1MF	0.1MF	0.1MF	0.1MF	47MF	47MF	47MF	47MF	47MF	47MF	47MF
C4351	0.001MF	0.001MF	0.001MF	0.001MF	0.001MF	0.001MF	0.001MF	0.0022MF	0.0022MF	0.0022MF	0.0022MF	0.0022MF	0.0022MF	0.0022MF
C4357	0.1MF	0.1MF	0.1MF	0.1MF	0.1MF	0.1MF	0.1MF	0.001MF	0.001MF	0.001MF	0.001MF	0.001MF	0.001MF	0.001MF
C4360	4.7MF	4.7MF	4.7MF	4.7MF	4.7MF	4.7MF	4.7MF	33MF	33MF	33MF	33MF	33MF	33MF	33MF
C4366	-	-	-	-	-	-	-	0.01MF	0.01MF	0.01MF	0.01MF	0.01MF	0.01MF	0.01MF
C4367	-	-	-	-	-	-	-	0.047MF	0.047MF	0.047MF	0.047MF	0.047MF	0.047MF	0.047MF
C4379	-	-	-	-	-	-	-	47PF	47PF	47PF	47PF	47PF	47PF	47PF
C4316	SLP253B	SLP253B	SLP253B	SLP253B	SLP253B	SLP253B	SLP253B	25C2423K-T146-R	25C2423K-T146-R	25C2423K-T146-R	25C2423K-T146-R	25C2423K-T146-R	25C2423K-T146-R	25C2423K-T146-R
R4360	2.2K	2.2K	2.2K	2.2K	2.2K	2.2K	2.2K	3.3K	3.3K	3.3K	3.3K	3.3K	3.3K	3.3K
R4381	-	-	-	-	-	-	-	1.8M	1.8M	1.8M	1.8M	1.8M	1.8M	1.8M
R4383	-	-	-	-	-	-	-	18K	18K	18K	18K	18K	18K	18K
R4401	330K	330K	330K	330K	330K	330K	330K	-	-	-	-	-	-	-
R4402	2.2M	2.2M	2.2M	2.2M	2.2M	2.2M	2.2M	-	-	-	-	-	-	-
R4403	10K	10K	10K	10K	10K	10K	10K	-	-	-	-	-	-	-
R4404	10K	10K	10K	10K	10K	10K	10K	-	-	-	-	-	-	-
R4405	39K	39K	39K	39K	39K	39K	39K	-	-	-	-	-	-	-
R4406	220K	220K	220K	220K	220K	220K	220K	-	-	-	-	-	-	-
R4407	56K	56K	56K	56K	56K	56K	56K	-	-	-	-	-	-	-
R4524	-	-	-	-	-	-	-	SHORT 0	SHORT 0	SHORT 0	SHORT 0	SHORT 0	SHORT 0	SHORT 0

E Board <Component Side>

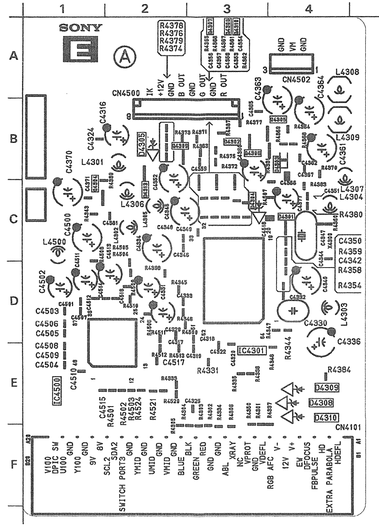

E Board <Conductor Side>

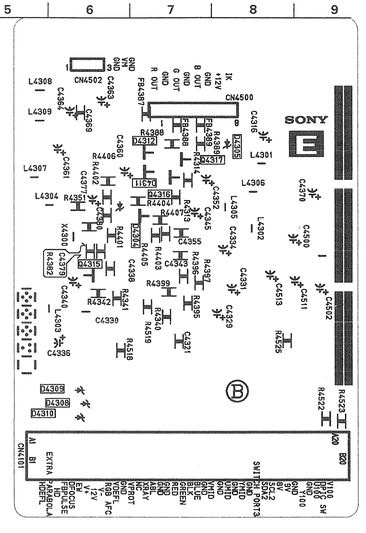

D BOARD

IC		D6613	D - 12
IC6600	F - 9	D6615	C - 12
IC6604	H - 11	D6616	D - 9
IC6651	G - 13	D6617	D - 8
IC6652	A - 7	D6618	B - 11
IC6653	A - 9	D6619	B - 8
IC6654	D - 12	D6620	B - 9
IC6667	E - 14	D6621	B - 12
IC6676	D - 13	D6622	C - 13
IC6700	D - 6	D6623	E - 8
IC6801	A - 3	D6624	B - 13
TRANSISTOR		D6625	A - 12
Q6600	J - 6	D6627	A - 10
Q6602	G - 9	D6628	A - 13
Q6603	G - 8	D6629	B - 12
Q6605	D - 12	D6651	I - 13
Q6606	A - 13	D6652	H - 13
Q6607	E - 8	D6653	H - 13
Q6651	E - 13	D6654	G - 12
Q6652	E - 14	D6655	G - 13
Q6667	E - 13	D6656	E - 13
Q6676	D - 13	D6658	H - 13
Q6677	D - 14	D6659	F - 13
Q6678	D - 13	D6676	C - 13
Q6679	C - 13	D6677	C - 13
Q6680	C - 13	D6678	C - 13
Q6681	D - 13	D6679	D - 13
Q6700	C - 6	D6681	E - 13
Q6801	H - 2	D6700	C - 5
Q6802	E - 6	D6701	H - 2
Q6803	F - 2	D6803	B - 3
Q6804	D - 5	D6804	C - 3
Q6805	E - 13	D6805	G - 3
Q6806	D - 3	D6806	H - 3
Q6807	B - 13	D6807	G - 7
Q6809	A - 2	D6808	G - 8
Q6810	A - 2	D6809	B - 13
Q6851	I - 2	D6811	D - 3
DIODE		D6812	B - 2
D6600	J - 7	D6813	B - 2
D6601	J - 7	D6851	H - 2
D6602	J - 6	D6852	1 - 2
D6603	D - 12		
D6604	I - 11		
D6610	C - 12		

D [POWER SUPPLY AND DEFLECTION]

D Board

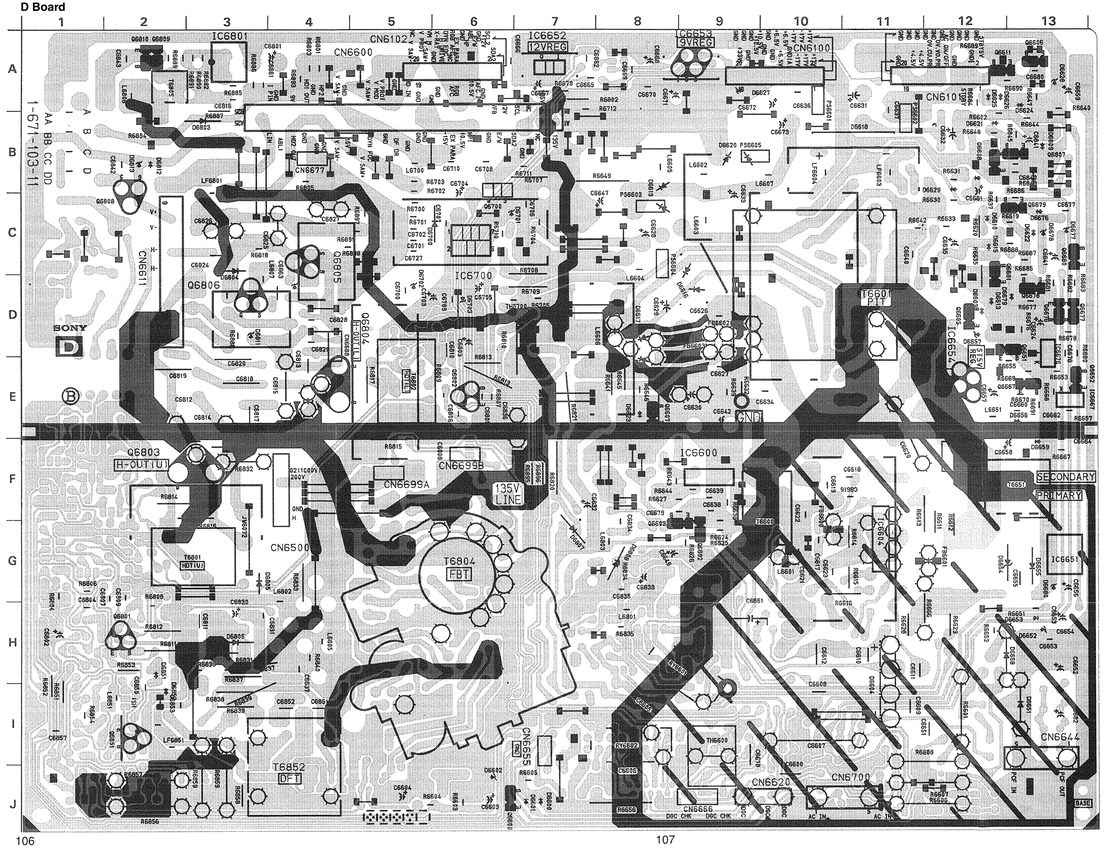

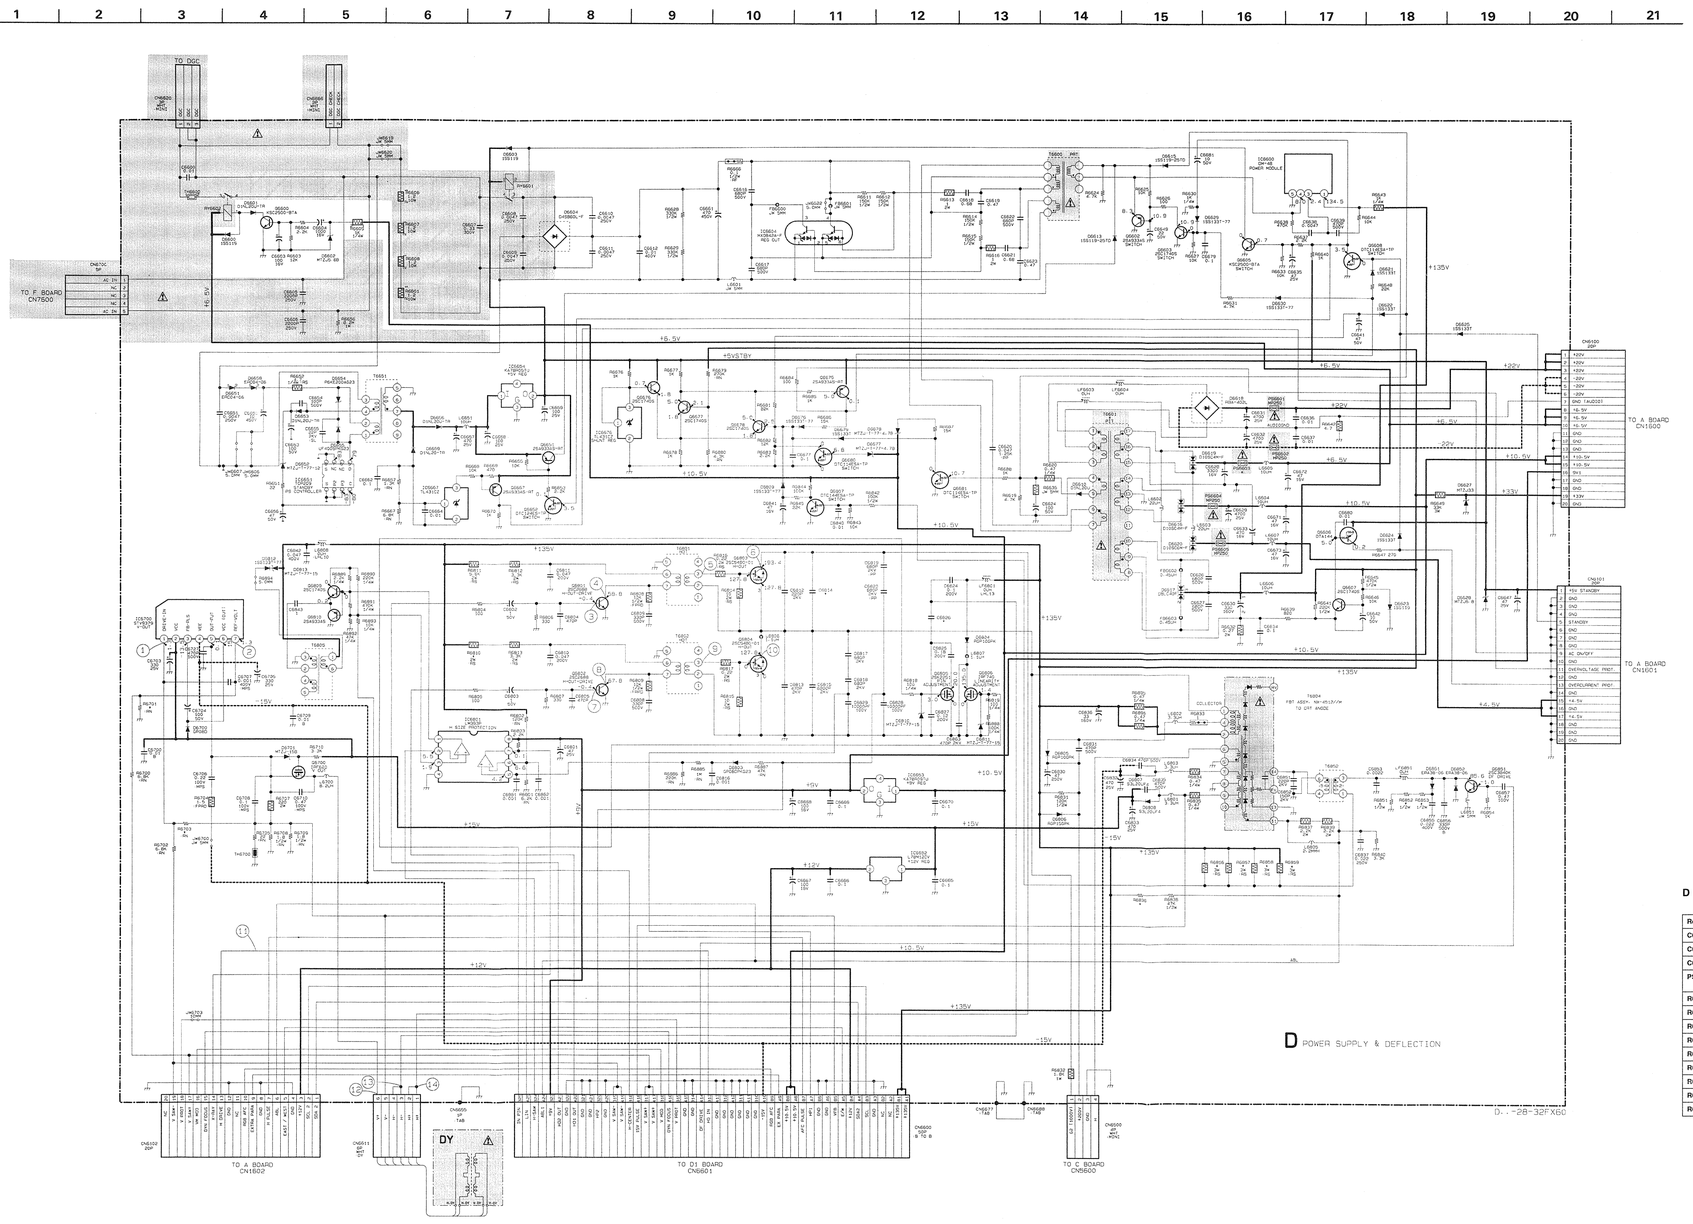

Waveforms D Board

① 40 mVp-p (H)	② 0.8 Vp-p (H)	③ 20 mVp-p (H)	④ 2.0 Vp-p (H)	⑤ 1.1 KVp-p (H)
⑥ 180 Vp-p (H)	⑦ 20 mVp-p (H)	⑧ 2.0 Vp-p (H)	⑨ 1.1 KVp-p (H)	⑩ 180 Vp-p (H)
⑪ 0.1 Vp-p (H)	⑫ 2.0 Vp-p (V)	⑬ 0.3 Vp-p (H)	⑭ 20 Vp-p (H)	

D BOARD * MARK

Ref	28FX60A	28FX60B	28FX60D	28FX60E	28FX60K	28FX60R	28FX60U	32FX60A	32FX60B	32FX60D	32FX60E	32FX60K	32FX60R	32FX60U
C6814	7500PF	7500PF	7500PF	7500PF	7500PF	7500PF	7500PF	6800PF	6800PF	6800PF	6800PF	6800PF	6800PF	6800PF
C6815	6800PF	6800PF	6800PF	6800PF	6800PF	6800PF	6800PF	6200PF	6200PF	6200PF	6200PF	6200PF	6200PF	6200PF
C6826	0.39MF	0.39MF	0.39MF	0.39MF	0.39MF	0.39MF	0.39MF	0.33MF	0.33MF	0.33MF	0.33MF	0.33MF	0.33MF	0.33MF
PS6603	1-801-550-21	1-801-550-21	1-801-550-21	1-801-550-21	1-801-550-21	1-801-550-21	1-801-550-21	1-801-549-21	1-801-549-21	1-801-549-21	1-801-549-21	1-801-549-21	1-801-549-21	1-801-549-21
R6701	5.6K	5.6K	5.6K	5.6K	5.6K	5.6K	5.6K	4.7K	4.7K	4.7K	4.7K	4.7K	4.7K	4.7K
R6703	5.6K	5.6K	5.6K	5.6K	5.6K	5.6K	5.6K	4.7K	4.7K	4.7K	4.7K	4.7K	4.7K	4.7K
R6810	3.3K	3.3K	3.3K	3.3K	3.3K	3.3K	3.3K	3.9K	3.9K	3.9K	3.9K	3.9K	3.9K	3.9K
R6836	15K	15K	15K	15K	15K	15K	15K	10K	10K	10K	10K	10K	10K	10K
R6851	100K	100K	100K	100K	100K	100K	100K	220K	220K	220K	220K	220K	220K	220K
R6852	100K	100K	100K	100K	100K	100K	100K	220K	220K	220K	220K	220K	220K	220K
R6853	100K	100K	100K	100K	100K	100K	100K	220K	220K	220K	220K	220K	220K	220K
R6856	8.2K	8.2K	8.2K	8.2K	8.2K	8.2K	8.2K	6.8K	6.8K	6.8K	6.8K	6.8K	6.8K	6.8K
R6857	8.2K	8.2K	8.2K	8.2K	8.2K	8.2K	8.2K	6.8K	6.8K	6.8K	6.8K	6.8K	6.8K	6.8K

F1 [AC FILTER FUSE]

F1 Board

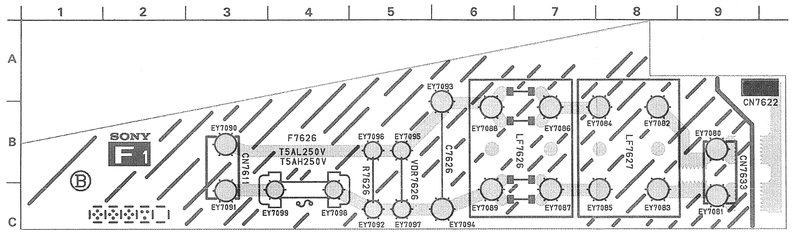

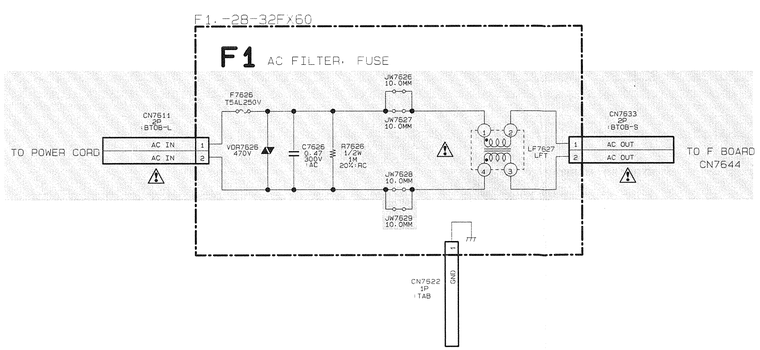

H1 [AV3 INPUT]

H1 Board

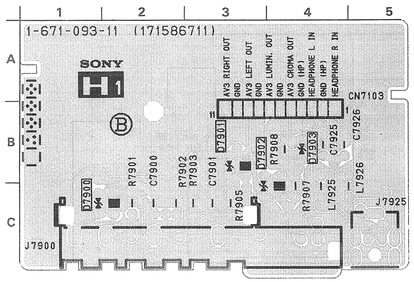

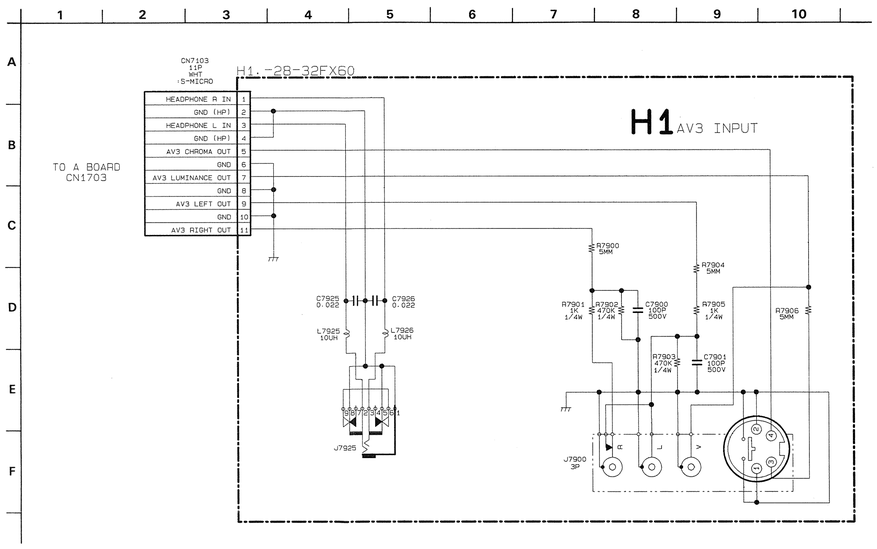

F [POWER SWITCH AND RESPONSE LED, IR Rx]

F Board

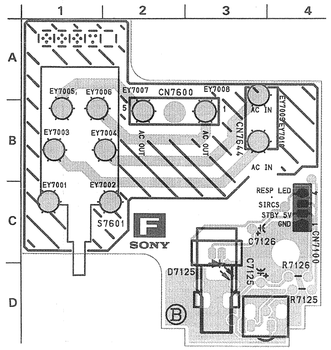

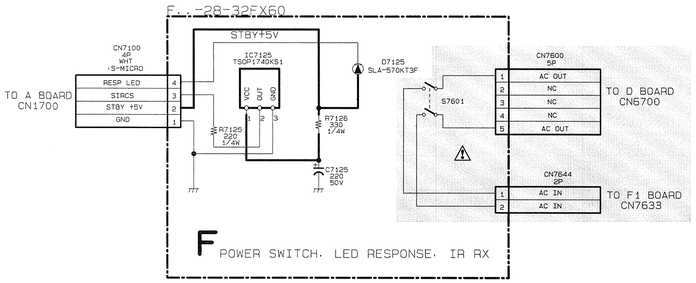

Waveforms A Board

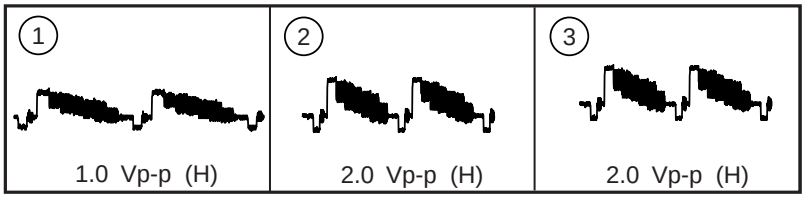

Waveforms D Board

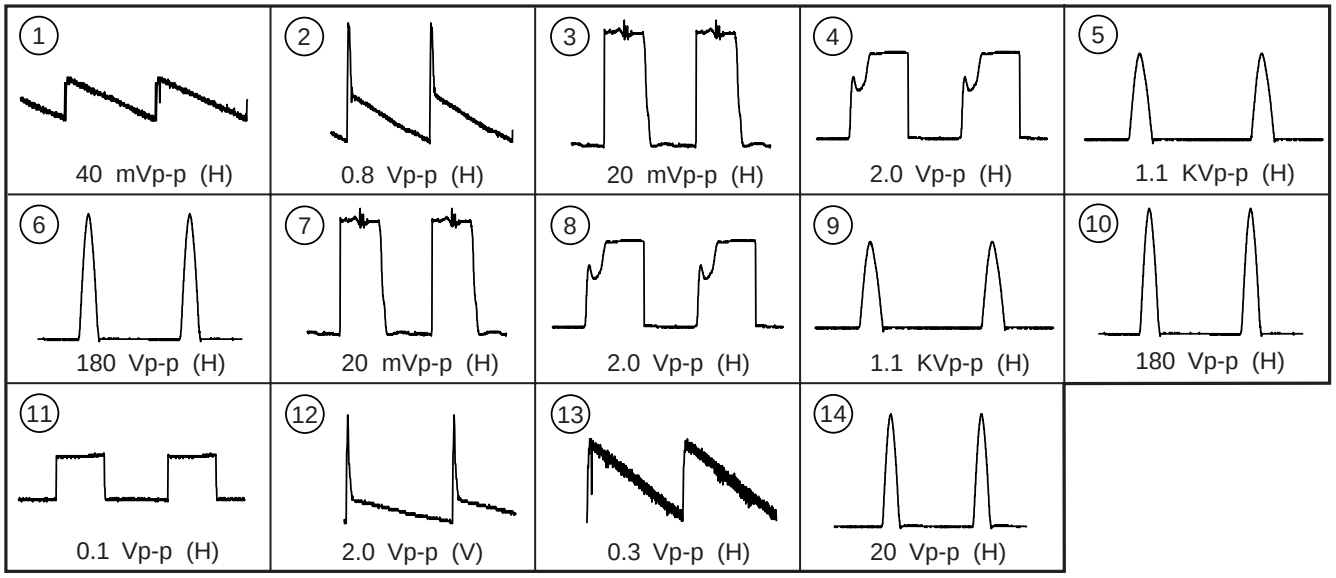

Waveforms J1(1/2) Board

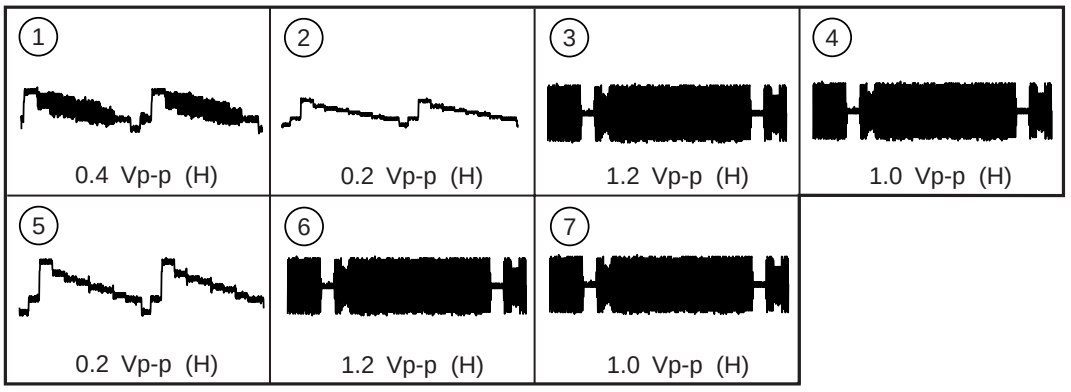

Waveforms C Board

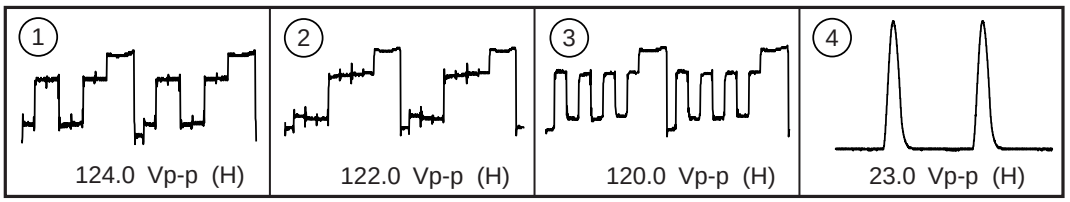

5-4 SEMICONDUCTORS

BA7046F
BA7046F-T1
LM393PS-E20
MB3793-42NF
MB3793-42NF-ER
NJM2240M
NJM2240M(TE2)
NJM3404AD



(TOP VIEW)

CXA1855Q-T6

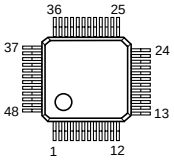

(TOP VIEW)

CXA1875AM-T4
HE4094BT
MC14052BDR2
MC74F157ADR2
SN74LS221D
74HCT4046AD/S470

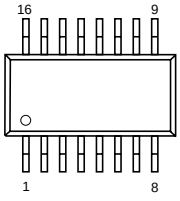

(TOP VIEW)

CXD2053S
TDA4780/V3



(TOP VIEW)

KA78R05TU
KA78R09TU
KA78R33TU



1 : V IN
2 : V OUT
3 : GND
4 : ON/OFF CONTROL

LM393D
M5216P
M24C32-BN6
ST24C16FB6
TDA2822M
UPC393C

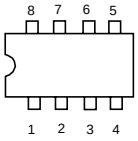

LM78L05ACZ
LM78L12ACZ
L78L05ACZ-AP
L78L12ACZ-AP



MB3793-42PNF-ER



MSP3410D-QA-B4
SAA7185WP
SDA5273P-C134-GEG
SDA5275

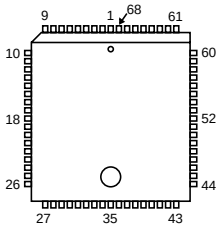

(TOP VIEW)

M27C800-100K1

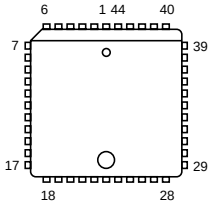

(TOP VIEW)

PC123F2
PC123FY2

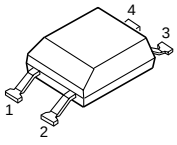

SBX1981-51



SDA9361

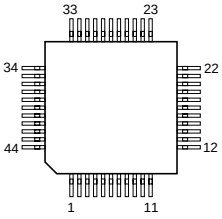

STV9379

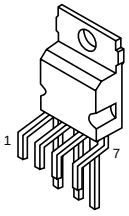

SAB-C161R1-LM

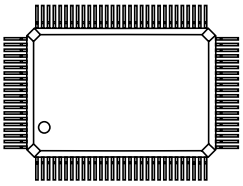

TC55257DFTL-70V-EL

TDA7309D013TR

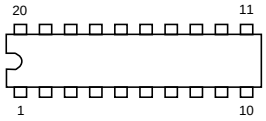

(TOP VIEW)

SDA9288X-B121
TDA9143/N2
TDA9144/N2
TDA9170T

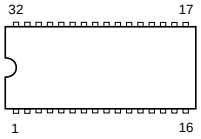

(TOP VIEW)

TDA9320H-N1-518

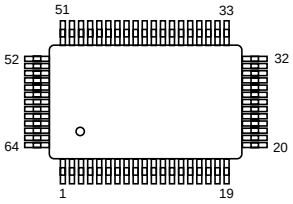

(TOP VIEW)

TEA6422DT
LM393N



TOP209P

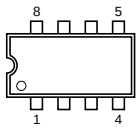

(TOP VIEW)

U2860B-BFPG3
74LVC08D

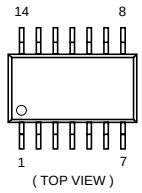

BC546B
BC556B



BF199
BF199-AMMO



BF421-AMMO



BF87-127



IMZ1A-T109

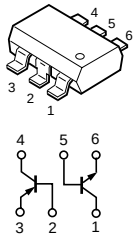

IRF614
IRF620



DTA144EK
DTA144EK-T146
DTC114EK
DTC114YKA-T146
DTC123EK
DTC123EK-T146
DTC124EKA-T146

DTC144EK
DTC144EK-T146
2SA1037K-T-146-R
2SA1162-G
2SC2412K-QR
2SC2412K-T-146-R



DTA144ESA
DTA144ESA-TP
DTC114ESA-TP
DTC144ESA-TP
2SA1175-HFE
2SA733-K

2SA933AS-RT
2SA933AS-QRT
2SA933S-RT
2SC1740S-RT
2SC2785-HFE



2SA1837



2SC2500-B
2SC2551-O
2SC2551O-TPE2



2SC2688-LK
2SC3840K



2SC3997CA

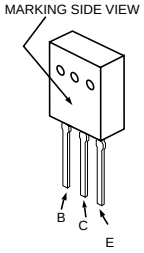

2SC4793



2SD2396H



DAN202K
DAN202K-T-146



DAP202K
DAP202K-T-146



DA204K
DA204K-T-146



D1NL20-TA
D1NL20U-TR
D1N54-TR
EGP20G
EL1Z
GP08D
GP08DPKG23
R2K-V1

RGP02-20EG23
RGP10GPKG23
RGP15GPKG23
S2LA20F
1SS133T-77
1SS83
1SS83TD



D10SC4M
D10SC6M



D4SB60L
D4SB60L-F
RBA-402L

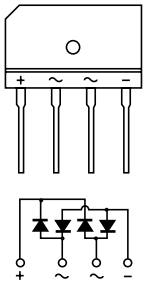

ESAC39M-06C
ESAC39M-06CF38



UF4005PKG23

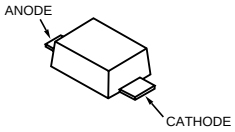

ERA38-06TP1
ERA82-004TP1
GP08DPKG23
MTZJ-T-77-12
MTZJ-T-77-15
MTZJ-T-77-2.2B
MTZJ-T-77-22
MTZJ-T-77-33C
MTZJ-T-77-3.6B
MTZJ-T-77-4.7B
MTZJ-T-77-5.6B
MTZJ-T-77-6.8
MTZJ-T-77-7.5B
MTZJ-T-77-9.1
MTZJ-33C
RD5.6ESB2
RD9.1ESB2
PGKE200AG23
1SS119-25
1SS119-25TD

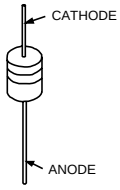

ERC04-06SE



ERD08M-15



MA3033-L
MA3033L-TX
MA3056M-TX
MA3062M-TX
MA3030-H-(TX)

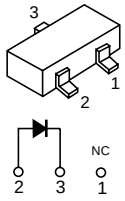

MA3051L-TX



MA73-TX

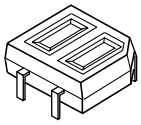

RD12SB2
UDZ-TE-17-6.2B
UDZ-TE-17-6.8B
UDZ-TE-12B

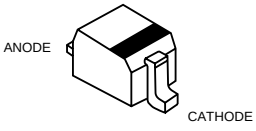

5-5. IC BLOCK DIAGRAMS

D BOARD IC6700 STV 9379

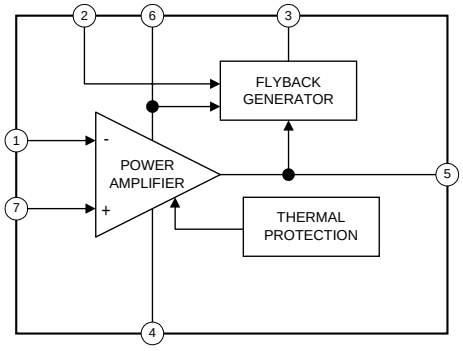

J BOARD IC8101 TDA2822M

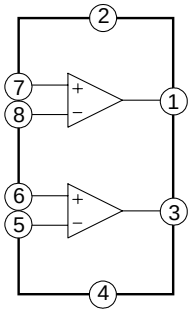

E BOARD IC4301 CXA2100Q-TL

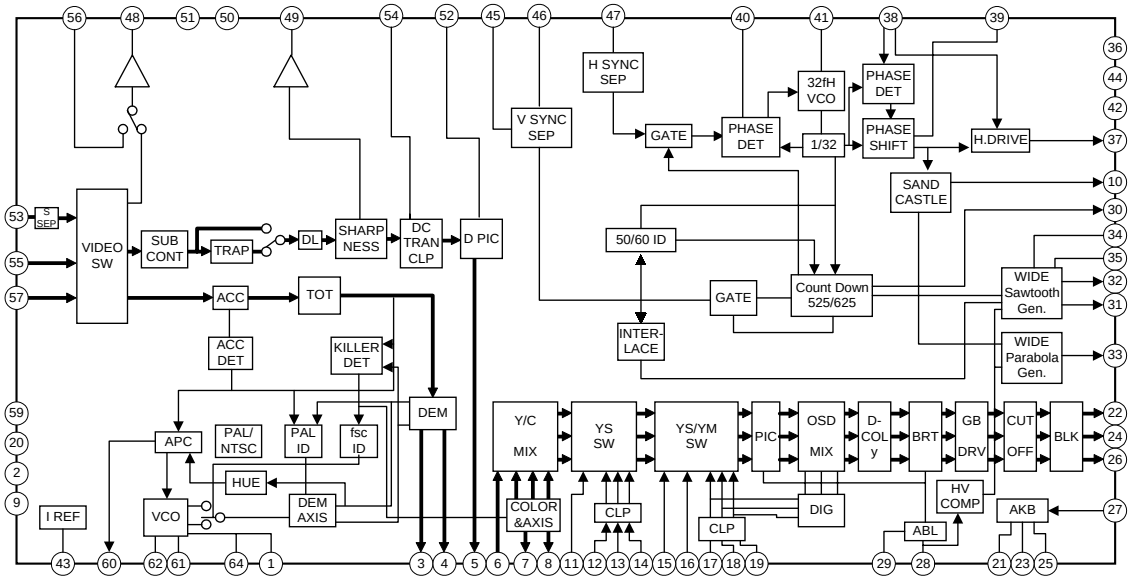

J BOARD IC8200 MSP3410D-QA-B4

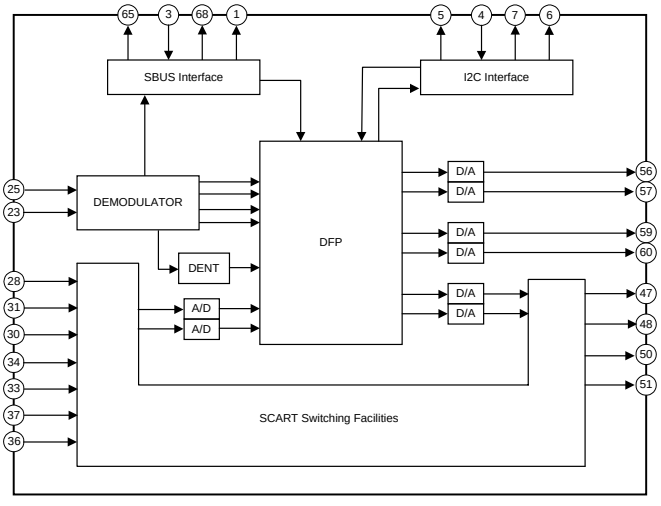

SECTION 6
EXPLODED VIEWS

NOTE :

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

6-1. CHASSIS

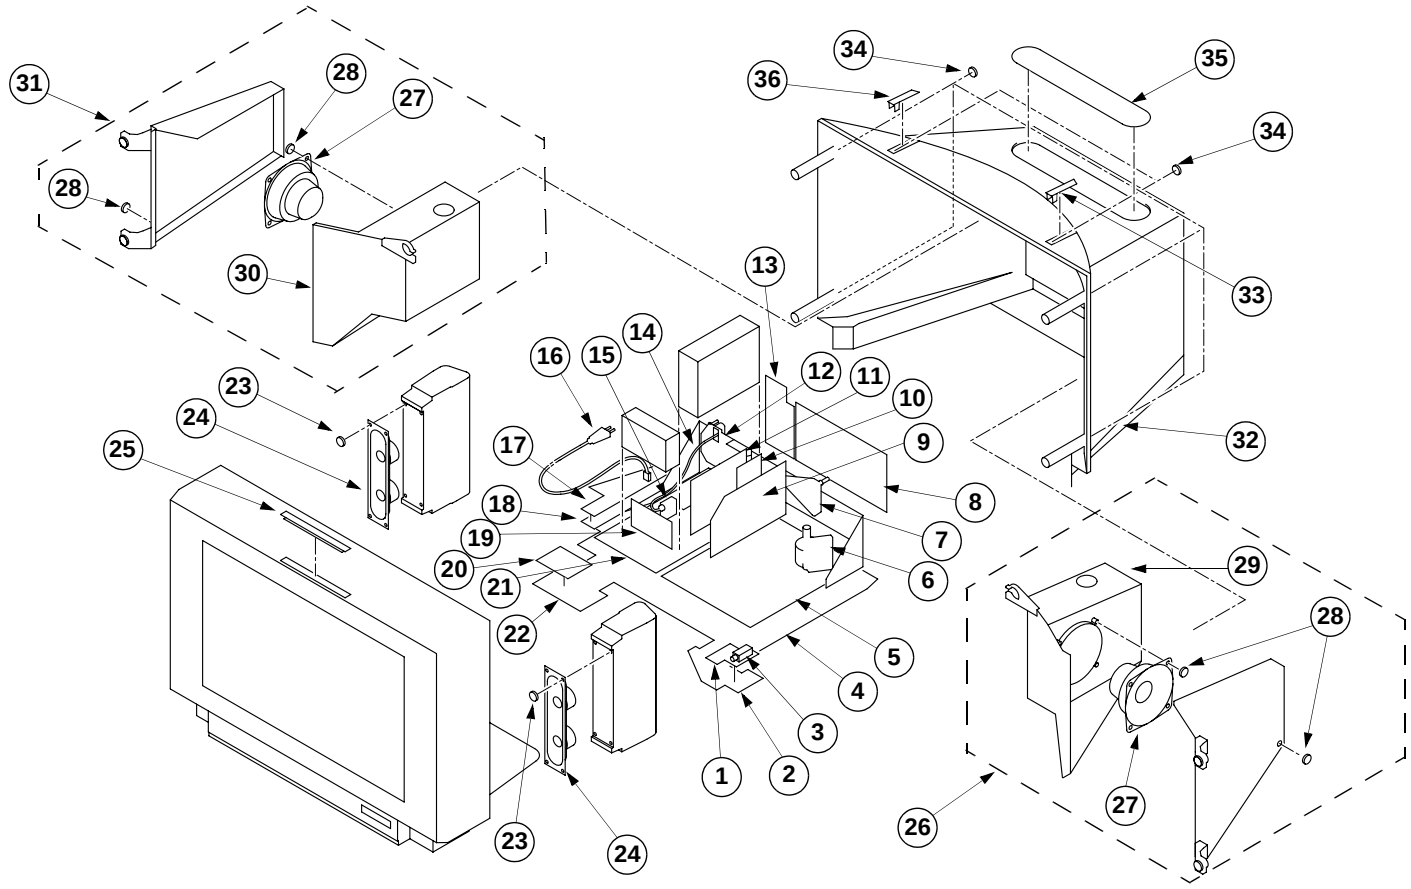

REF. NO.		PART.NO	DESCRIPTION	REMARK
1		*A-1624-073-A	F BOARD, COMPLETE	
2		*4-204-551-01	BRACKET, F (KV-28FX60A/28FX60D/28FX60E/28FX60K/28FX60R/32FX60A/32FX60B/32FX60D/32FX60E/32FX60K/32FX60R/32FX60U)	
		*4-204-551-21	BRACKET, F (KV-28FX60B/28FX60U)	
3	⚠	1-571-433-21	SWITCH, PUSH (AC POWER)	
4		*4-204-549-01	BRACKET, MAIN	
5		*A-1640-328-A	D BOARD, COMPLETE (KV-28FX60)	
		*A-1640-323-A	D BOARD, COMPLETE (KV-32FX60)	
6	⚠	1-453-272-11	TRANSFORMER ASSY, FLYBACK (NX-4512/U2B4)	
7		*4-204-476-01	BRACKET, J1	
8		*A-1651-100-A	J BOARD, COMPLETE (KV-28FX60A/28FX60B/28FX60D/28FX60E/28FX60K/28FX60R/28FX60U/32FX60A/32FX60D/32FX60E/32FX60K/32FX60R/32FX60U)	
		*A-1651-104-A	J BOARD, COMPLETE (KV-32FX60B)	
9		*A-1640-329-A	D1 BOARD, COMPLETE (KV-28FX60)	
		*A-1640-322-A	D1 BOARD, COMPLETE (KV-32FX60)	
10		*A-1640-341-A	E BOARD, COMPLETE (KV-28FX60)	
		*A-1640-337-A	E BOARD, COMPLETE (KV-32FX60)	
11		*A-1620-112-A	B1 BOARD, COMPLETE	
12		*4-204-477-01	BRACKET, J2	
13		*A-1648-016-A	U BOARD, COMPLETE	
14		1-790-082-11	CABLE, RF	

REF. NO.		PART.NO	DESCRIPTION	REMARK
15		1-693-338-11	TUNER/VIF (AEP) (KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/32FX60A/32FX60D/ 32FX60E/32FX60K/32FX60R)	
		1-693-340-11	TUNER/VIF (FR) (KV-32FX60B)	
		1-693-339-11	TUNER/VIF (UK) (KV-28FX60U/32FX60U)	
16	⚠	1-574-062-61	CORD, POWER (WITH CONNECTOR) (KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/32FX60A/32FX60B/ 32FX60D/32FX60E/32FX60K/32FX60R)	
	⚠	1-590-762-21	CORD, POWER (WITH UK PLUG) (KV-28FX60U/32FX60U)	
17		*A-1624-074-A	F1 BOARD, COMPLETE	
18		*4-204-552-01	BRACKET, F1	
19		*A-1634-047-A	M BOARD, COMPLETE	
20		*A-1646-170-A	H1 BOARD, COMPLETE	
21		*A-1630-978-A	A BOARD, COMPLETE (KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/32FX60A/32FX60D/ 32FX60E/32FX60K/32FX60R)	
		*A-1630-989-A	A BOARD, COMPLETE (KV-28FX60U/32FX60U)	
		*A-1630-988-A	A BOARD, COMPLETE (KV-32FX60B)	
22		*4-204-550-01	BRACKET, H (KV-28FX60A/28FX60D/28FX60E/28FX60K/ 28FX60R/32FX60A/32FX60B/32FX60D/ 32FX60E/32FX60R/32FX60U)	
		*4-204-550-21	BRACKET, H (KV-28FX60B/28FX60U)	
23		4-039-358-01	SCREW (4X16), (+) BV TAPPING	
24		1-529-153-11	SPEAKER (4.8X20CM)	
25		0-553-509-00	SWITCH, ARRAY	
26		A-1678-188-A	WOOFER (R) ASSY	27-29
27		1-529-144-11	SPEAKER (13CM)	
28		4-039-355-11	SCREW (4X12), (+) BV TAPPING	
29		*A-1678-158-A	WOOFER (R) ASSY, SP FX	
30		*A-1678-157-A	WOOFER (L) ASSY, SP FX	
31		A-1678-150-A	WOOFER (L) ASSY	27,28,30
32		4-204-459-01	COVER, REAR (KV-28FX60)	
		4-204-367-21	COVER, REAR (KV-32FX60)	
33		4-204-427-01	COVER, SCREW (L) (KV-28FX60)	
		4-204-369-01	COVER, SCREW (L) (KV-32FX60)	
34		4-302-404-03	SCREW (WASHER HEAD)(+P 4X16)	
35		*4-204-458-01	COVER, PORT	
36		4-204-428-01	COVER, SCREW (R) (KV-28FX60)	
		4-204-370-01	COVER, SCREW (R) (KV-32FX60)	

6-2. PICTURE TUBE

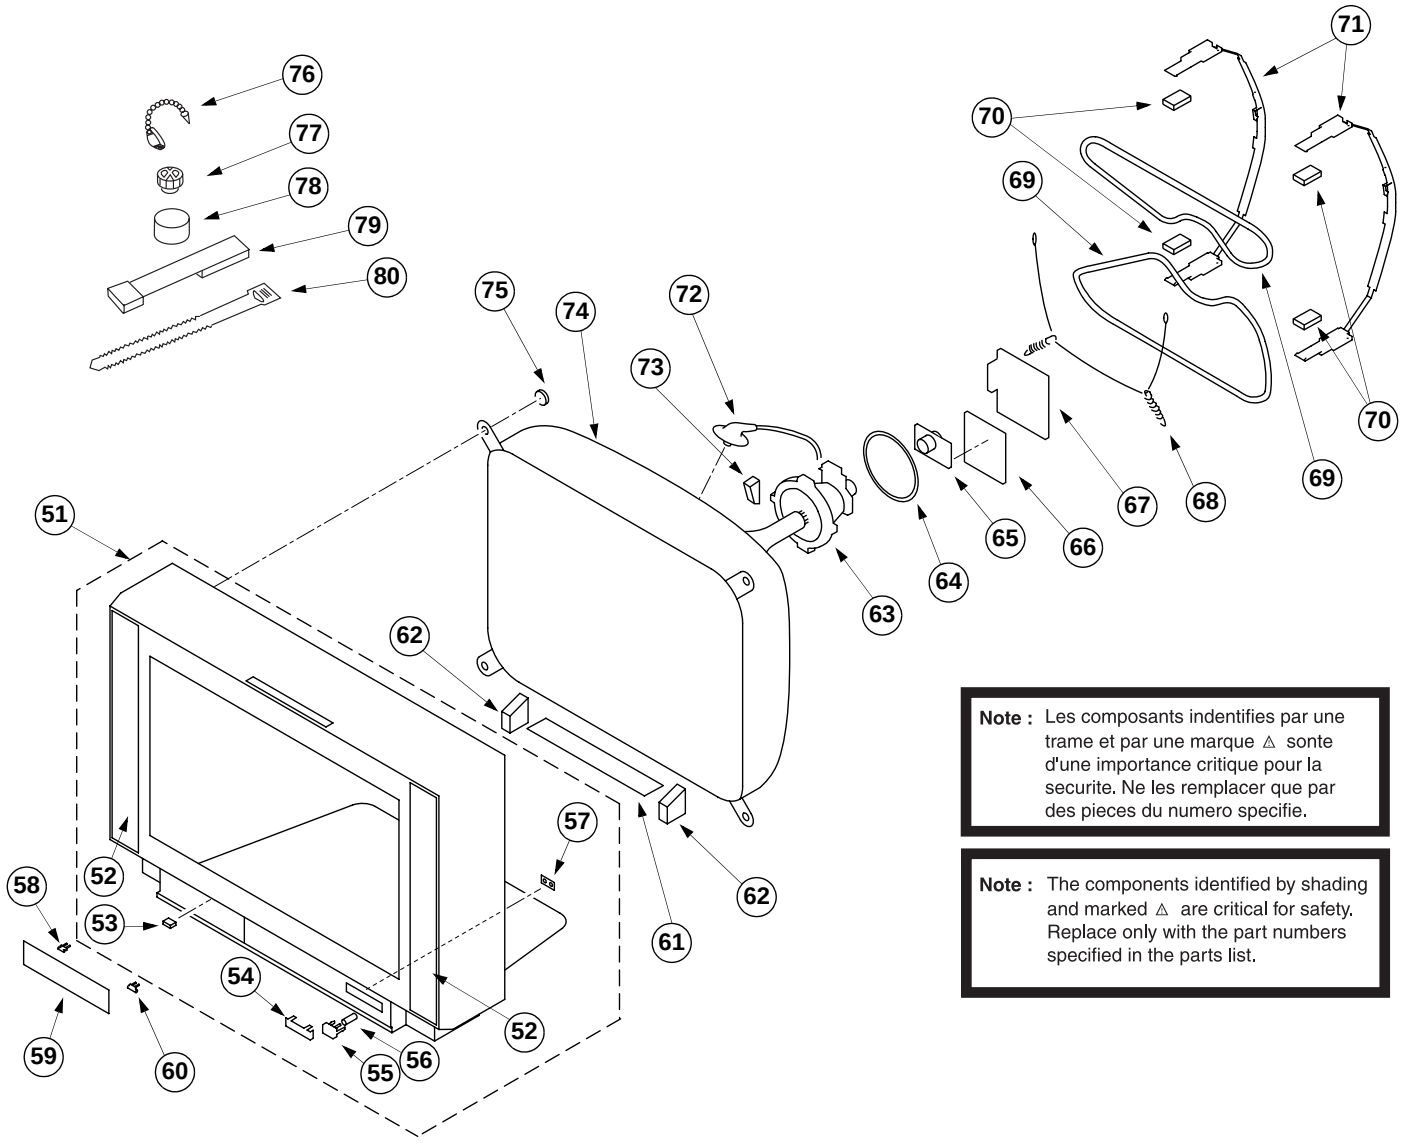

Note : Les composants indentifies par une trame et par une marque ⚠ sonte d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

REF. NO.		PART.NO	DESCRIPTION	REMARK
51		X-4200-417-2	BEZNET ASSY (KV-28FX60)	52-57
		X-4200-412-3	BEZNET ASSY (KV-32FX60)	
52		4-204-368-01	GRILLE, SPEAKER (KV-32FX60	
53		4-042-192-01	CATCHER, PUSH	
54		4-204-492-01	WINDOW, ORNAMENTAL	
55		4-204-438-01	BUTTON, POWER	
56		4-202-964-11	SPRING	
57		4-204-439-01	GUIDE, LIGHT	
58		4-202-555-01	SHAFT, DOOR	
59		4-204-435-31	DOOR (KV-28FX60A/28FX60B/28FX60D/28FX60K/ 28FX60R/28FX60U/32FX60A/32FX60D/ 32FX60K/32FX60R)	
		4-204-435-41	DOOR (KV-28FX60E/28FX60U/32FX60B/32FX60E/ 32FX60U)	

REF. NO.		PART.NO	DESCRIPTION	REMARK
60		4-045-250-01	DAMPER	
61		4-203-128-31	SHEET, BLOTTING (KV-28FX60)	
62		*4-203-098-01	SUPPORTER, CRT (KV-32FX60)	
63	⚠	1-451-481-11	DEFLECTION YOKE (Y28RCV2) (KV-28FX60)	
	⚠	1-451-480-11	DEFLECTION YOKE (Y32RCV2) (KV-32FX60)	
64		1-452-896-11	COIL, NA ROTATION (RT200)	
65	⚠	8-453-011-11	NECK ASSY, NA299-M	
66		*A-1644-094-A	VM BOARD, COMPLETE	
67		*A-1638-123-A	C BOARD, COMPLETE	
68		4-369-318-51	SPRING, TENSION	
69	⚠	1-416-466-11	COIL, DEMAGNETIC (KV-28FX60)	
	⚠	1-416-769-11	COIL, DEMAGNETIC (KV-32FX60)	
70		*4-202-988-01	CUSHION, BOX	

REF. NO.		PART.NO	DESCRIPTION	REMARK
71		*4-057-303-01	HOLDER, DGC (KV-28FX60)	
		*4-059-569-01	HOLDER, DGC (KV-32FX60)	
72	⚠	1-251-317-31	CAP ASSY, HIGH-VOLTAGE	
73		3-704-495-01	SPACER, DY	
74	⚠	8-737-785-05	PICTURE TUBE (W66LX010X)	(KV-28FX60)
	⚠	8-735-054-05	PICTURE TUBE (W76LLZ060X)	(SD-302) (KV-32FX60)

REF. NO.	PART.NO	DESCRIPTION	REMARK
75	4-036-188-01	SCREW, SELF TAPPING	
76	4-308-870-00	CLIP, LEAD WIRE	
77	1-452-094-00	MAGNET, ROTATABLE DISK; 15MM	
78	1-425-032-00	MAGNET, DISK; 10MM	
79	X-4387-214-1	PERMALLOY ASSY, CORRECTION	
80	3-701-007-00	BAND, BINDING	

SECTION 7
ELECTRICAL PARTS LIST

Note : Les composants indentifies par une trame et par une marque ⚠ sonte d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
-
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- RESISTORS
- All resistors are in ohms.
- F : nonflammable.

When indicating parts by reference number, please include the board name.

CAPACITORS MF : mF, PF : mmF

COILS MMH : mH , uH

B1

REF. NO.	PART.NO	DESCRIPTION	REMARK
	*A-1620-112-A	B1 BOARD, COMPLETE **********	
		< CAPACITOR >	
C2301	1-126-934-11	ELECT 220MF	20% 16V
C2302	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2303	1-126-964-11	ELECT 10MF	20% 50V
C2304	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
C2305	1-163-259-91	CERAMIC CHIP 220PF	5% 50V
C2306	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
C2307	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2308	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
C2309	1-126-934-11	ELECT 220MF	20% 16V
C2311	1-126-963-11	ELECT 4.7MF	20% 50V
C2312	1-126-963-11	ELECT 4.7MF	20% 50V
C2313	1-126-963-11	ELECT 4.7MF	20% 50V
C2314	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
C2315	1-164-489-11	CERAMIC CHIP 0.22MF	10% 16V
C2316	1-110-501-11	CERAMIC CHIP 0.33MF	10% 16V
C2317	1-162-638-11	CERAMIC CHIP 1MF	16V
C2318	1-163-989-11	CERAMIC CHIP 0.033MF	10% 25V
C2319	1-163-989-11	CERAMIC CHIP 0.033MF	10% 25V
C2320	1-164-489-11	CERAMIC CHIP 0.22MF	10% 16V
C2323	1-163-021-91	CERAMIC CHIP 0.01MF	10% 50V
C2324	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2325	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2327	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2328	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2329	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2330	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2331	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2332	1-163-105-00	CERAMIC CHIP 33PF	5% 50V
C2333	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2334	1-126-964-11	ELECT 10MF	20% 50V
C2335	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2337	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
C2338	1-126-934-11	ELECT 220MF	20% 16V
C2339	1-164-005-11	CERAMIC CHIP 0.47MF	25V
C2340	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2342	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2343	1-126-961-11	ELECT 2.2MF	20% 50V
C2344	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2345	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2346	1-126-964-11	ELECT 10MF	20% 50V
C2347	1-163-097-00	CERAMIC CHIP 15PF	5% 50V
C2348	1-163-097-00	CERAMIC CHIP 15PF	5% 50V
C2349	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2350	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2351	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2354	1-126-934-11	ELECT 220MF	20% 16V
C2356	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2357	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2358	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2361	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2362	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2363	1-126-934-11	ELECT 220MF	20% 16V
C2364	1-102-518-11	CERAMIC CHIP 33PF	5% 50V
C2366	1-102-518-11	CERAMIC CHIP 33PF	5% 50V
C2367	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2368	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2371	1-102-518-11	CERAMIC CHIP 33PF	5% 50V
C2372	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2374	1-102-518-11	CERAMIC CHIP 33PF	5% 50V
C2377	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2378	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2380	1-163-145-00	CERAMIC CHIP 0.0015MF	5% 50V
C2381	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2382	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2383	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2385	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2387	1-163-275-11	CERAMIC CHIP 0.001MF	2% 100V
C2388	1-136-479-11	FILM 0.001MF	1% 100V
C2389	1-163-085-00	CERAMIC CHIP 2PF	0.25PF 50V
C2390	1-102-852-91	CERAMIC 47PF	5% 50V
C2391	1-102-852-91	CERAMIC 47PF	5% 50V
C2704	1-126-934-11	ELECT 220MF	20% 16V

B1

REF. NO.	PART.NO	DESCRIPTION	REMARK
C2705	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
		< CONNECTOR >	
CN2100	1-695-301-11	CONNECTOR, BOARD TO BOARD 40P	
		< FILTER >	
FL2300	1-236-071-11	ENCAPSULATED COMPONENT	
FL2301	1-233-767-21	FILTER	
FL2302	1-236-071-11	ENCAPSULATED COMPONENT	
FL2303	1-236-071-11	ENCAPSULATED COMPONENT	
FL2305	1-236-071-11	ENCAPSULATED COMPONEN	
		< IC >	
IC2300	8-759-991-41	IC LM78L05ACZ	
IC2301	8-759-295-09	IC TLC2932IPW	
IC2302	8-759-257-59	IC TDA8755T-T	
IC2303	8-759-438-64	IC SAA4952WP/V1	
IC2304	8-759-546-02	IC SAA4995WP-V1-T3	
IC2305	8-759-295-09	IC TLC2932IPW	
IC2306	8-759-439-27	IC TMS4C2972-28DTR	
IC2307	8-759-546-04	IC SAA4991WP-V1-T3	
IC2308	8-759-572-55	IC P83C654KBA/585	
IC2309	8-759-439-27	IC TMS4C2972-28DTR	
IC2310	8-759-991-41	IC LM78L05ACZ	
IC2311	8-759-467-19	IC SDA9280B22	
IC2314	8-759-439-26	IC SN74LS221D	
		< COIL >	
L2300	1-408-597-31	INDUCTOR 3.3UH	
L2301	1-410-435-21	INDUCTOR 220UH	
L2302	1-410-435-21	INDUCTOR 220UH	
L2303	1-408-597-31	INDUCTOR 3.3UH	
L2304	1-414-186-31	INDUCTOR 33UH	
L2305	1-408-603-31	INDUCTOR 10UH	
L2306	1-414-186-31	INDUCTOR 33UH	
L2307	1-414-384-11	INDUCTOR 5.6UH	
		< TRANSISTOR >	
Q2301	1-801-806-11	TRANSISTOR DTC144EKA-T146	
Q2302	1-801-806-11	TRANSISTOR DTC144EKA-T146	
Q2303	1-801-806-11	TRANSISTOR DTC144EKA-T146	
Q2304	1-801-806-11	TRANSISTOR DTC144EKA-T146	
Q2305	8-729-216-22	TRANSISTOR 2SA1162-G	
Q2306	8-729-216-22	TRANSISTOR 2SA1162-G	
Q2307	8-729-216-22	TRANSISTOR 2SA1162-G	
		< RESISTOR >	
R2300	1-216-051-00	RES,CHIP 1.2K 5%	1/10W
R2301	1-216-053-00	RES,CHIP 1.5K 5%	1/10W
R2302	1-216-067-00	RES,CHIP 5.6K 5%	1/10W
R2303	1-216-059-00	RES,CHIP 2.7K 5%	1/10W
R2304	1-216-051-00	RES,CHIP 1.2K 5%	1/10W
R2305	1-216-065-91	RES,CHIP 4.7K 5%	1/10W
R2306	1-216-295-91	SHORT 0	
R2307	1-216-049-91	RES,CHIP 1K 5%	1/10W
R2310	1-216-049-91	RES,CHIP 1K 5%	1/10W
R2312	1-216-049-91	RES,CHIP 1K 5%	1/10W
R2313	1-216-047-91	RES,CHIP 820 5%	1/10W
R2314	1-216-063-91	RES,CHIP 3.9K 5%	1/10W
R2315	1-216-113-00	RES,CHIP 470K 5%	1/10W
R2316	1-216-073-00	RES,CHIP 10K 5%	1/10W
R2317	1-216-025-91	RES,CHIP 100 5%	1/10W
R2320	1-216-295-91	SHORT 0	
R2321	1-216-295-91	SHORT 0	
R2337	1-216-049-91	RES,CHIP 1K 5%	1/10W
R2338	1-216-295-91	SHORT 0	
R2341	1-216-295-91	SHORT 0	
R2345	1-216-025-91	RES,CHIP 100 5%	1/10W
R2348	1-216-089-91	RES,CHIP 47K 5%	1/10W
R2355	1-216-295-91	SHORT 0	
R2356	1-216-063-91	RES,CHIP 3.9K 5%	1/10W
R2358	1-216-295-91	SHORT 0	
R2359	1-216-001-00	RES,CHIP 10 5%	1/10W
R2360	1-216-085-00	RES,CHIP 33K 5%	1/10W
R2361	1-216-085-00	RES,CHIP 33K 5%	1/10W
R2362	1-216-295-91	SHORT 0	
R2363	1-216-295-91	SHORT 0	
R2364	1-216-057-00	RES,CHIP 2.2K 5%	1/10W
R2365	1-216-057-00	RES,CHIP 2.2K 5%	1/10W
R2366	1-216-057-00	RES,CHIP 2.2K 5%	1/10W
R2367	1-216-057-00	RES,CHIP 2.2K 5%	1/10W
R2368	1-216-057-00	RES,CHIP 2.2K 5%	1/10W
R2369	1-216-057-00	RES,CHIP 2.2K 5%	1/10W
R2370	1-216-057-00	RES,CHIP 2.2K 5%	1/10W
R2371	1-216-057-00	RES,CHIP 2.2K 5%	1/10W
R2372	1-216-057-00	RES,CHIP 2.2K 5%	1/10W
R2373	1-216-065-91	RES,CHIP 4.7K 5%	1/10W
R2374	1-216-049-91	RES,CHIP 1K 5%	1/10W
R2375	1-216-049-91	RES,CHIP 1K 5%	1/10W
R2376	1-216-049-91	RES,CHIP 1K 5%	1/10W
R2377	1-216-049-91	RES,CHIP 1K 5%	1/10W
R2378	1-216-029-00	RES,CHIP 150 5%	1/10W
R2379	1-216-076-00	RES,CHIP 13K 5%	1/10W
R2380	1-216-073-00	RES,CHIP 10K 5%	1/10W
R2381	1-216-021-00	RES,CHIP 68 5%	1/10W
R2382	1-216-049-91	RES,CHIP 1K 5%	1/10W
R2383	1-216-049-91	RES,CHIP 1K 5%	1/10W
R2384	1-216-021-00	RES,CHIP 68 5%	1/10W
R2385	1-216-037-00	RES,CHIP 330 5%	1/10W
R2386	1-216-295-91	SHORT 0	
R2387	1-216-027-00	RES,CHIP 120 5%	1/10W
R2388	1-216-037-00	RES,CHIP 330 5%	1/10W

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

B1 **F** **F1**

REF. NO.	PART.NO	DESCRIPTION	REMARK
R2389	1-216-069-00	RES,CHIP 6.8K 5% 1/10W	
R2390	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R2391	1-216-025-91	RES,CHIP 100 5% 1/10W	
R2392	1-216-295-91	SHORT 0	
R2393	1-216-295-91	SHORT 0	
R2394	1-216-295-91	SHORT 0	
R2395	1-216-295-91	SHORT 0	
R2396	1-216-295-91	SHORT 0	
R2397	1-216-295-91	SHORT 0	
R2398	1-216-295-91	SHORT 0	
R2410	1-216-037-00	RES,CHIP 330 5% 1/10W	
R2411	1-216-037-00	RES,CHIP 330 5% 1/10W	
R2412	1-216-668-11	METAL CHIP 5.1K 0.50% 1/10W	
R2413	1-216-059-11	RES,CHIP 2.7K 0.50% 1/10W	
R2415	1-216-295-91	SHORT 0	
R2711	1-216-001-00	RES,CHIP 10 5% 1/10W	
R2712	1-216-295-91	SHORT 0	
R2713	1-216-295-91	SHORT 0	
R2714	1-216-295-91	SHORT 0	
R2715	1-216-295-91	SHORT 0	
R2716	1-216-295-91	SHORT 0	
R2717	1-216-295-91	SHORT 0	
R2718	1-216-295-91	SHORT 0	
R2719	1-216-295-91	SHORT 0	
R2720	1-216-295-91	SHORT 0	
R2721	1-216-295-91	SHORT 0	
R2722	1-216-295-91	SHORT 0	
R2723	1-216-027-00	RES,CHIP 120 5% 1/10W	
R2724	1-216-295-91	SHORT 0	
R2725	1-216-021-00	RES,CHIP 68 5% 1/10W	
R2726	1-216-295-91	SHORT 0	
R2727	1-216-295-91	SHORT 0	
R2734	1-216-295-91	SHORT 0	
R2735	1-216-021-00	RES,CHIP 68 5% 1/10W	
R2736	1-216-295-91	SHORT 0	
R2738	1-216-025-91	RES,CHIP 100 5% 1/10W	
		< CRYSTAL >	
X2300	1-579-175-11	VIBRATOR, CERAMIC	
**********			
	*A-1624-073-A	F BOARD, COMPLETE	
		**********	
	*4-203-258-11	HOLDER, LED	
		< CAPACITOR >	
C7125	1-126-969-11	ELECT 220MF 20% 50V	

REF. NO.	PART.NO	DESCRIPTION	REMARK
		< CONNECTOR >	
CN7100	*1-568-879-11	PIN, CONNECTOR 4P	
CN7600 ⚠	*1-691-291-11	PIN, CONNECTOR (PC BOARD) 5P	
CN7644 ⚠	*1-580-844-11	PIN, CONNECTOR (POWER)	
		< DIODE >	
D7125	8-719-030-11	DIODE SLA-570KT3F	
		<IC >	
IC7125	8-749-014-59	IC TSOP1740KS1	
		< RESISTOR >	
R7125	1-247-815-91	CARBON 220 5% 1/4W	
R7126	1-249-411-11	CARBON 330 5% 1/4W	
		< SWITCH >	
S7601 ⚠	1-571-433-21	SWITCH, PUSH (AC POWER)	
**********			
	*A-1624-074-A	F1 BOARD, COMPLETE	
		**********	
		< CAPACITOR >	
C7626 ⚠	1-136-519-12	FILM 0.47MF 20% 300V	
		< CONNECTOR >	
CN7611 ⚠	*1-580-844-11	PIN, CONNECTOR (POWER)	
CN7622	1-695-915-11	TAB (CONTACT)	
CN7633 ⚠	*1-580-843-11	PIN, CONNECTOR (POWER)	
		< FUSE >	
F7626 ⚠	1-532-505-00	FUSE 5A/250V	
⚠	*1-533-725-11	HOLDER, FUSE (F7626)	
		< TRANSFORMER >	
LF7627 ⚠	1-433-488-11	TRANSFORMER, LINE FILTER	
		< RESISTOR >	
R7626 ⚠	1-202-885-91	SOLID 1M 20% 1/2W	
		< VARISTOR >	
VDR7626 ⚠	1-801-073-31	VARISTOR ERZV14D471	

A

REF. NO.	PART.NO	DESCRIPTION	REMARK
	* A-1630-978-A	A BOARD, COMPLETE	
		**********	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/32FX60A/32FX60D/	
		32FX60E/32FX60K/32FX60R)	
	* A-1630-988-A	A BOARD, COMPLETE (KV-32FX60B)	
		**********	
	* A-1630-989-A	A BOARD, COMPLETE (KV-28FX60U/32FX60U)	
		**********	
	4-204-625-01	HEAT SINK, AUDIO	
	4-382-854-11	SCREW (M3X10), P, SW (+)	
	*4-931-401-01	HEAT SINK, V.OUT	
		< CAPACITOR >	
C1100	1-104-664-11	ELECT 47MF 20% 25V	
C1101	1-104-666-11	ELECT 220MF 20% 25V	
C1126	1-162-568-11	CERAMIC CHIP 0.33MF 10% 16V	
C1127	1-130-785-81	MYLAR 0.47MF 5% 50V	
C1128	1-163-135-00	CERAMIC CHIP 560PF 5% 50V	
C1129	1-130-777-00	FILM 0.1MF 5% 63V	
C1130	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V	
C1131	1-163-251-11	CERAMIC CHIP 100PF 5% 50V	
C1132	1-163-021-91	CERAMIC CHIP 0.01MF 10% 50V	
C1133	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1134	1-126-961-11	ELECT 2.2MF 20% 50V	
C1135	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1136	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1137	1-126-943-11	ELECT 2200MF 20% 25V	
C1138	1-126-943-11	ELECT 2200MF 20% 25V	
C1139	1-104-329-11	CERAMIC CHIP 0.1MF 10% 50V	
C1140	1-128-560-11	ELECT 22MF 20% 100V	
C1151	1-162-568-11	CERAMIC CHIP 0.33MF 10% 16V	
C1152	1-130-785-11	MYLAR 0.47MF 5% 50V	
C1153	1-163-135-00	CERAMIC CHIP 560PF 5% 50V	
C1154	1-130-777-00	FILM 0.1MF 5% 63V	
C1155	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V	
C1156	1-163-251-11	CERAMIC CHIP 100PF 5% 50V	
C1157	1-163-021-91	CERAMIC CHIP 0.01MF 10% 50V	
C1158	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1159	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1160	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1161	1-104-329-11	CERAMIC CHIP 0.1MF 10% 50V	
C1162	1-128-560-11	ELECT 22MF 20% 100V	
C1177	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1179	1-126-964-11	ELECT 10MF 20% 50V	
C1180	1-126-943-11	ELECT 2200MF 20% 25V	
C1181	1-126-943-11	ELECT 2200MF 20% 25V	
C1182	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1183	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1184	1-107-823-11	CERAMIC CHIP 0.47MF 10% 16V	
C1226	1-104-661-91	ELECT 330MF 20% 16V	
C1326	1-163-059-91	CERAMIC CHIP 0.01MF 10% 50V	
C1327	1-126-934-11	ELECT 220MF 20% 10V	
C1328	1-163-117-00	CERAMIC CHIP 100PF 5% 50V	
C1601	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1602	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1603	1-126-933-11	ELECT 100MF 20% 16V	
C1604	1-126-933-11	ELECT 100MF 20% 16V	
C1605	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1607	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1608	1-126-934-11	ELECT 220MF 20% 16V	
C1609	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1610	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1611	1-126-933-11	ELECT 100MF 20% 16V	
C1612	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1613	1-126-933-11	ELECT 100MF 20% 16V	
C1614	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1615	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C1617	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
		< CONNECTOR >	
CN1111	*1-564-520-11	PLUG, CONNECTOR 5P	
CN1200	1-695-298-11	CONNECTOR, BOARD TO BOARD 40P	
CN1401	1-695-298-11	CONNECTOR, BOARD TO BOARD 40P	
CN1600	1-900-903-64	CONNECTOR ASSY 20P	
CN1601	1-900-903-64	CONNECTOR ASSY 20P	
CN1602	1-900-903-64	CONNECTOR ASSY 20P	
CN1700	*1-568-879-11	PIN, CONNECTOR 4P	
CN1701	1-573-296-11	CONNECTOR, BOARD TO BOARD 10P	
CN1702	*1-568-880-51	PIN, CONNECTOR 5P	
CN1703	*1-564-514-11	PLUG, CONNECTOR 11P	
CN1801	1-695-299-11	CONNECTOR, BOARD TO BOARD 50P	
CN1901	1-695-298-11	CONNECTOR, BOARD TO BOARD 40P	
		< DIODE >	
D1100	8-719-914-43	DIODE DAN202K	
D1101	8-719-914-44	DIODE DAP202K	
D1102	8-719-914-43	DIODE DAN202K	
D1103	8-719-914-43	DIODE DAN202K	
D1401	8-719-105-99	DIODE RD6.2M-B1	
D1402	8-719-105-99	DIODE RD6.2M-B1	
D1403	8-719-105-99	DIODE RD6.2M-B1	
D1404	8-719-105-99	DIODE RD6.2M-B1	
D1626	8-719-914-43	DIODE DAN202K	
D1627	8-719-914-43	DIODE DAN202K	
D1629	8-719-914-43	DIODE DAN202K	
		< FERRITE BEAD >	
FB1126	1-535-303-00	LEAD, JUMPER (5.0MM)	
FB1151	1-535-303-00	LEAD, JUMPER (5.0MM)	

REF. NO.	PART.NO	DESCRIPTION			REMARK
		< IC >			
IC1126	8-759-544-25	IC TDA7482			
IC1151	8-759-544-25	IC TDA7482			
IC1176	8-759-333-24	IC LM1876TF			
IC1400	8-752-072-94	IC CXA1875AM-T4			
IC1601	8-759-457-44	IC KA78R05TU			
IC1602	8-759-544-09	IC KA278R05TU			
IC1603	8-759-295-82	IC L78L08ACZ-AP			
IC1604	8-759-544-13	IC KA78R09TU			
IC1605	8-759-544-11	IC KA78R33TU			
		< COIL >			
L1126	1-416-857-11	INDUCTOR	65UH		
L1127	1-414-158-11	INDUCTOR	2.2UH		
L1128	1-414-158-11	INDUCTOR	2.2UH		
L1151	1-416-857-11	INDUCTOR	65UH		
L1152	1-414-158-11	INDUCTOR	2.2UH		
L1153	1-414-158-11	INDUCTOR	2.2UH		
L1326	1-414-183-41	INDUCTOR	10UH		
		< TRANSISTOR >			
Q1100	8-729-216-22	TRANSISTOR	2SA1162-G		
Q1201	8-729-620-06	TRANSISTOR	2SC3052-EF		
Q1202	8-729-620-06	TRANSISTOR	2SC3052-EF		
Q1203	8-729-620-06	TRANSISTOR	2SC3052-EF		
Q1204	8-729-620-06	TRANSISTOR	2SC3052-EF		
Q1226	8-729-620-06	TRANSISTOR	2SC3052-EF		
Q1227	8-729-620-06	TRANSISTOR	2SC3052-EF		
Q1229	8-729-027-38	TRANSISTOR	DTA144EKA-T146		
Q1326	8-729-620-06	TRANSISTOR	2SC3052-EF		
Q1327	8-729-216-22	TRANSISTOR	2SA1162-G		
Q1328	8-729-620-06	TRANSISTOR	2SC3052-EF		
Q1329	8-729-216-22	TRANSISTOR	2SA1162-G		
Q1400	8-729-046-47	TRANSISTOR	KSC2500-BTA		
Q1601	8-729-620-06	TRANSISTOR	2SC3052-EF		
Q1626	8-729-620-06	TRANSISTOR	2SC3052-EF		
		< RESISTOR >			
JR1601	1-216-296-91	SHORT	0		
R1001	1-216-295-91	SHORT	0		
R1002	1-216-295-91	SHORT	0		
R1003	1-216-295-91	SHORT	0		
R1004	1-216-295-91	SHORT	0		
R1005	1-216-295-91	SHORT	0		
R1006	1-216-295-91	SHORT	0		
R1100	1-216-025-91	RES,CHIP	100	5%	1/10W
R1101	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R1102	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R1126	1-216-631-11	METAL CHIP	150	0.50%	1/10W
R1127	1-216-075-00	RES,CHIP	12K	5%	1/10W
R1128	1-216-041-00	RES,CHIP	470	5%	1/10W
R1151	1-216-631-11	METAL CHIP	150	0.50%	1/10W
R1152	1-216-075-00	RES,CHIP	12K	5%	1/10W
R1153	1-216-041-00	RES,CHIP	470	5%	1/10W
R1176	1-216-063-91	RES,CHIP	3.9K	5%	1/10W
R1179	1-216-357-00	METAL OXIDE	4.7	5%	1W F
R1182	1-216-081-00	RES,CHIP	22K	5%	1/10W
R1183	1-216-045-00	RES,CHIP	680	5%	1/10W
R1185	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1201	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1202	1-216-083-00	RES,CHIP	27K	5%	1/10W
R1203	1-216-083-00	RES,CHIP	27K	5%	1/10W
R1204	1-216-071-00	RES,CHIP	8.2K	5%	1/10W
R1205	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1206	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1207	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1208	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1209	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1210	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1226	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1227	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1228	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1229	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1230	1-216-055-00	RES,CHIP	1.8K	5%	1/10W
R1232	1-216-295-91	SHORT	0		
R1233	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1326	1-216-025-91	RES,CHIP	100	5%	1/10W
R1327	1-216-025-91	RES,CHIP	100	5%	1/10W
R1328	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1329	1-216-025-91	RES,CHIP	100	5%	1/10W
R1330	1-216-041-00	RES,CHIP	470	5%	1/10W
R1331	1-216-041-00	RES,CHIP	470	5%	1/10W
R1332	1-216-041-00	RES,CHIP	470	5%	1/10W
R1333	1-216-075-00	RES,CHIP	12K	5%	1/10W
R1334	1-216-069-00	RES,CHIP	6.8K	5%	1/10W
R1335	1-216-025-91	RES,CHIP	100	5%	1/10W
R1336	1-216-041-00	RES,CHIP	470	5%	1/10W
R1337	1-216-041-00	RES,CHIP	470	5%	1/10W
R1338	1-216-001-00	RES,CHIP	10	5%	1/10W
R1339	1-216-041-00	RES,CHIP	470	5%	1/10W
R1340	1-216-043-91	RES,CHIP	560	5%	1/10W
R1400	1-216-053-00	RES,CHIP	1.5K	5%	1/10W
R1401	1-216-081-00	RES,CHIP	22K	5%	1/10W
R1403	1-216-295-91	SHORT	0		
R1404	1-216-295-91	SHORT	0		
R1601	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R1602	1-216-691-11	METAL CHIP	47K	0.50%	1/10W
R1603	1-216-025-91	RES,CHIP	100	5%	1/10W
R1605	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1609	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1610	1-216-065-91	RES,CHIP	4.7K	5%	1/10W

A M

REF. NO.	PART.NO	DESCRIPTION			REMARK
R1615	1-216-025-91	RES,CHIP	100	5%	1/10W
R1616	1-216-304-11	RES,CHIP	3.3	5%	1/10W
R1617	1-216-304-11	RES,CHIP	3.3	5%	1/10W
R1618	1-216-295-91	SHORT	0		
R1621	1-216-027-00	RES,CHIP	120	5%	1/10W
R1622	1-216-029-00	RES,CHIP	150	5%	1/10W
R1623	1-216-033-00	RES,CHIP	220	5%	1/10W
R1625	1-216-295-91	SHORT	0		
		< TUNER >			
TU1326	1-693-338-11	TUNER/VIF (AEP) (KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/32FX60A/32FX60D/ 32FX60E/32FX60K/32FX60R)			
	1-693-340-11	TUNER/VIF (FR) (KV-32FX60B)			
	1-693-339-11	TUNER/VIF (UK) (KV-28FX60U/32FX60U)			
**********					
	*A-1634-047-A	M BOARD, COMPLETE **********			
		< CAPACITOR >			
C9100	1-115-340-11	CERAMIC CHIP	0.22MF	10%	25V
C9101	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C9102	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C9104	1-104-664-11	ELECT	47MF	20%	25V
C9105	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C9110	1-165-321-11	CERAMIC CHIP	0.68MF	10%	16V
C9111	1-164-157-11	CERAMIC CHIP	0.068MF	10%	25V
C9112	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C9113	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C9114	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C9115	1-115-340-11	CERAMIC CHIP	0.22MF	10%	25V
C9117	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C9118	1-104-664-11	ELECT	47MF	20%	25V
C9119	1-163-259-91	CERAMIC CHIP	220PF	5%	50V
C9121	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C9122	1-115-340-11	CERAMIC CHIP	0.22MF	10%	25V
C9123	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C9124	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C9125	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C9126	1-163-105-00	CERAMIC CHIP	33PF	5%	50V
C9127	1-163-105-00	CERAMIC CHIP	33PF	5%	50V
C9128	1-163-105-00	CERAMIC CHIP	33PF	5%	50V
C9129	1-163-105-00	CERAMIC CHIP	33PF	5%	50V
C9130	1-163-105-00	CERAMIC CHIP	33PF	5%	50V
C9131	1-163-105-00	CERAMIC CHIP	33PF	5%	50V
C9132	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C9400	1-115-340-11	CERAMIC CHIP	0.22MF	10%	25V
C9500	1-104-664-11	ELECT	47MF	20%	25V
C9502	1-104-664-11	ELECT	47MF	20%	25V
C9503	1-126-964-11	ELECT	10MF	20%	50V
C9504	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C9505	1-104-665-11	ELECT	100MF	20%	25V
C9506	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C9507	1-115-340-11	CERAMIC CHIP	0.22MF	10%	25V
C9508	1-115-340-11	CERAMIC CHIP	0.22MF	10%	25V
C9509	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C9510	1-115-340-11	CERAMIC CHIP	0.22MF	10%	25V
C9511	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C9512	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C9513	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C9514	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C9515	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C9516	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C9517	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C9518	1-115-340-11	CERAMIC CHIP	0.22MF	10%	25V
C9519	1-126-964-11	ELECT	10MF	20%	50V
C9520	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
		< CONNECTOR >			
CN9101	1-695-301-11	CONNECTOR, BOARD TO BOARD 40P			
		< DIODE >			
D9100	8-719-988-62	DIODE 1SS355			
D9101	8-719-988-62	DIODE 1SS355			
D9102	8-719-988-62	DIODE 1SS355			
D9103	8-719-988-62	DIODE 1SS355			
D9104	8-719-056-83	DIODE UDZ-TE-17-6.8B			
D9105	8-719-914-43	DIODE DAN202K			
D9107	8-719-025-31	DIODE 02CZ5.6-TE85L			
D9108	8-719-914-44	DIODE DAP202K			
D9109	8-719-105-91	DIODE RD5.6M-B2			
D9110	8-719-914-43	DIODE DAN202K			
D9111	8-719-105-91	DIODE RD5.6M-B2			
		< FILTER >			
FL9101	1-236-071-11	ENCAPSULATED COMPONENT			
FL9500	1-236-071-11	ENCAPSULATED COMPONENT			
FL9501	1-236-071-11	ENCAPSULATED COMPONENT			
		< IC >			
IC9100	8-759-988-13	IC LM393PS			
IC9104	8-759-259-18	IC MB3793-42PNF			
IC9105	8-759-544-30	IC SAB-C161R1-LM			
IC9107	8-759-395-27	IC TC55257DFTL-70V			
IC9108	8-759-531-64	IC M24C32-BN6			
IC9110	8-759-559-96	IC HEF4094BT			
IC9500	8-759-034-47	IC MC74F00M-T2			
IC9501	8-759-426-56	IC MB814400C-70PJN-ER			
IC9502	8-759-438-62	IC SDA5275			

REF. NO.	PART.NO	DESCRIPTION			REMARK
		< COIL >			
L9400	1-412-029-11	INDUCTOR CHIP 10UH			
L9401	1-412-029-11	INDUCTOR CHIP 10UH			
		< TRANSISTOR >			
Q9100	8-729-620-06	TRANSISTOR 2SC3052-EF			
Q9101	8-729-620-06	TRANSISTOR 2SC3052-EF			
Q9102	8-729-216-22	TRANSISTOR 2SA1162-G			
Q9103	8-729-620-06	TRANSISTOR 2SC3052-EF			
Q9105	8-729-620-06	TRANSISTOR 2SC3052-EF			
Q9106	8-729-027-46	TRANSISTOR DTC114YKA-T146			
Q9107	8-729-027-46	TRANSISTOR DTC114YKA-T146			
Q9108	8-729-027-46	TRANSISTOR DTC114YKA-T146			
Q9109	8-729-027-46	TRANSISTOR DTC114YKA-T146			
Q9110	8-729-620-06	TRANSISTOR 2SC3052-EF			
Q9500	8-729-216-22	TRANSISTOR 2SA1162-G			
Q9501	8-729-216-22	TRANSISTOR 2SA1162-G			
Q9502	8-729-216-22	TRANSISTOR 2SA1162-G			
Q9503	1-801-806-11	TRANSISTOR DTC144EKA-T146			
Q9504	1-801-806-11	TRANSISTOR DTC144EKA-T146			
		< RESISTOR >			
R9100	1-216-073-00	RES,CHIP	10K	5%	1/10W
R9101	1-216-033-00	RES,CHIP	220	5%	1/10W
R9102	1-216-033-00	RES,CHIP	220	5%	1/10W
R9103	1-216-025-91	RES,CHIP	100	5%	1/10W
R9104	1-216-073-00	RES,CHIP	10K	5%	1/10W
R9105	1-216-073-00	RES,CHIP	10K	5%	1/10W
R9107	1-216-025-91	RES,CHIP	100	5%	1/10W
R9108	1-216-025-91	RES,CHIP	100	5%	1/10W
R9109	1-216-073-00	RES,CHIP	10K	5%	1/10W
R9110	1-216-081-00	RES,CHIP	22K	5%	1/10W
R9111	1-216-025-91	RES,CHIP	100	5%	1/10W
R9112	1-216-025-91	RES,CHIP	100	5%	1/10W
R9113	1-216-033-00	RES,CHIP	220	5%	1/10W
R9114	1-216-083-00	RES,CHIP	27K	5%	1/10W
R9115	1-216-081-00	RES,CHIP	22K	5%	1/10W
R9116	1-216-073-00	RES,CHIP	10K	5%	1/10W
R9117	1-216-073-00	RES,CHIP	10K	5%	1/10W
R9119	1-216-073-00	RES,CHIP	10K	5%	1/10W
R9120	1-216-073-00	RES,CHIP	10K	5%	1/10W
R9121	1-216-017-91	RES,CHIP	47	5%	1/10W
R9122	1-216-049-91	RES,CHIP	1K	5%	1/10W
R9123	1-216-073-00	RES,CHIP	10K	5%	1/10W
R9127	1-216-049-91	RES,CHIP	1K	5%	1/10W
R9138	1-216-049-91	RES,CHIP	1K	5%	1/10W
R9140	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R9141	1-216-049-91	RES,CHIP	1K	5%	1/10W
R9142	1-216-041-00	RES,CHIP	470	5%	1/10W
R9143	1-216-049-91	RES,CHIP	1K	5%	1/10W
R9144	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R9145	1-216-049-91	RES,CHIP	1K	5%	1/10W
R9146	1-216-049-91	RES,CHIP	1K	5%	1/10W
R9147	1-216-049-91	RES,CHIP	1K	5%	1/10W
R9148	1-216-073-00	RES,CHIP	10K	5%	1/10W
R9149	1-216-025-91	RES,CHIP	100	5%	1/10W
R9150	1-216-025-91	RES,CHIP	100	5%	1/10W
R9151	1-216-025-91	RES,CHIP	100	5%	1/10W
R9153	1-216-025-91	RES,CHIP	100	5%	1/10W
R9159	1-216-069-00	RES,CHIP	6.8K	5%	1/10W
R9161	1-216-069-00	RES,CHIP	6.8K	5%	1/10W
R9162	1-216-069-00	RES,CHIP	6.8K	5%	1/10W
R9164	1-216-069-00	RES,CHIP	6.8K	5%	1/10W
R9166	1-216-073-00	RES,CHIP	10K	5%	1/10W
R9168	1-216-069-00	RES,CHIP	6.8K	5%	1/10W
R9169	1-216-069-00	RES,CHIP	6.8K	5%	1/10W
R9172	1-216-069-00	RES,CHIP	6.8K	5%	1/10W
R9173	1-216-295-91	SHORT	0		
R9174	1-216-025-91	RES,CHIP	100	5%	1/10W
R9175	1-216-025-91	RES,CHIP	100	5%	1/10W
R9176	1-216-025-91	RES,CHIP	100	5%	1/10W
R9177	1-216-025-91	RES,CHIP	100	5%	1/10W
R9178	1-216-025-91	RES,CHIP	100	5%	1/10W
R9184	1-216-025-91	RES,CHIP	100	5%	1/10W
R9185	1-216-025-91	RES,CHIP	100	5%	1/10W
R9186	1-216-025-91	RES,CHIP	100	5%	1/10W
R9187	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R9188	1-216-025-91	RES,CHIP	100	5%	1/10W
R9189	1-216-025-91	RES,CHIP	100	5%	1/10W
R9190	1-216-025-91	RES,CHIP	100	5%	1/10W
R9191	1-216-025-91	RES,CHIP	100	5%	1/10W
R9192	1-216-025-91	RES,CHIP	100	5%	1/10W
R9193	1-216-097-91	RES,CHIP	100K	5%	1/10W
R9194	1-216-097-91	RES,CHIP	100K	5%	1/10W
R9195	1-216-097-91	RES,CHIP	100K	5%	1/10W
R9196	1-216-073-00	RES,CHIP	10K	5%	1/10W
R9197	1-216-073-00	RES,CHIP	10K	5%	1/10W
R9500	1-216-295-91	SHORT	0		
R9501	1-216-295-91	SHORT	0		
R9502	1-216-295-91	SHORT	0		
R9504	1-216-041-00	RES,CHIP	470	5%	1/10W
R9505	1-216-051-00	RES,CHIP	1.2K	5%	1/10W
R9506	1-216-073-00	RES,CHIP	10K	5%	1/10W
R9507	1-216-097-91	RES,CHIP	100K	5%	1/10W
R9508	1-216-017-91	RES,CHIP	47	5%	1/10W
R9509	1-216-049-91	RES,CHIP	1K	5%	1/10W
R9510	1-216-017-91	RES,CHIP	47	5%	1/10W
R9511	1-216-049-91	RES,CHIP	1K	5%	1/10W
R9512	1-216-017-91	RES,CHIP	47	5%	1/10W
R9513	1-216-017-91	RES,CHIP	47	5%	1/10W
R9514	1-216-017-91	RES,CHIP	47	5%	1/10W
R9515	1-216-295-91	SHORT	0		

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

M **C**

REF. NO.	PART.NO	DESCRIPTION			REMARK
R9516	1-216-295-91	SHORT	0		
R9517	1-216-295-91	SHORT	0		
R9518	1-216-049-91	RES,CHIP	1K	5%	1/10W
R9519	1-216-039-00	RES,CHIP	390	5%	1/10W
R9520	1-216-039-00	RES,CHIP	390	5%	1/10W
R9521	1-216-039-00	RES,CHIP	390	5%	1/10W
R9522	1-216-295-91	SHORT	0		
R9523	1-216-295-91	SHORT	0		
R9524	1-216-295-91	SHORT	0		
R9525	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R9526	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R9527	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R9528	1-216-025-91	RES,CHIP	100	5%	1/10W
R9529	1-216-025-91	RES,CHIP	100	5%	1/10W
R9530	1-216-025-91	RES,CHIP	100	5%	1/10W
R9531	1-216-295-91	SHORT	0		
R9532	1-216-061-00	RES,CHIP	3.3K	5%	1/10W
		< CRYSTAL >			
X9101	1-781-107-21	RESONATOR			
X9500	1-760-551-21	VIBRATOR, CERAMIC			
**********					
	* A-1638-123-A	C BOARD, COMPLETE			
		**********			
	1-671-108-11	PWB, CIC			
	4-382-854-11	SCREW (M3X10), P, SW			
		< CAPACITOR >			
C5301	1-102-129-91	CERAMIC	0.01MF	10%	50V
C5302	1-128-525-91	ELECT	470MF	20%	16V
C5304	1-107-657-91	ELECT	1MF	20%	350V
C5305	1-137-052-91	FILM	0.047MF	10%	400V
C5306	1-102-157-91	CERAMIC	560PF	10%	500V
C5325	1-102-959-91	CERAMIC	22PF	5%	50V
C5326	1-102-157-91	CERAMIC	560PF	10%	500V
C5327	1-102-129-91	CERAMIC	0.01MF	10%	50V
C5328	1-128-525-91	ELECT	470MF	20%	16V
C5329	1-107-967-91	ELECT	1MF	20%	400V
C5350	1-107-907-91	ELECT	22MF	20%	50V
C5352	1-102-157-91	CERAMIC	560PF	10%	500V
C5353	1-102-129-91	CERAMIC	0.01MF	10%	50V
C5354	1-128-525-91	ELECT	470MF	20%	16V
C5355	1-107-657-91	ELECT	1MF	20%	350V
C5356	1-137-052-91	FILM	0.047MF	10%	400V
C5375	1-107-902-91	ELECT	1MF	20%	50V
C5377	1-162-115-91	CERAMIC	330PF	10%	2KV
C5378	1-162-116-91	CERAMIC	680PF	10%	2KV
C5379	1-162-114-71	CERAMIC	0.0047MF		2KV
C5380	1-107-652-91	ELECT	10MF	20%	250V
C5381	1-162-116-91	CERAMIC	680PF	10%	2KV
C5382	1-162-114-71	CERAMIC	0.0047MF		2KV
		< CONNECTOR >			
CN5400	1-564-511-11	PLUG, CONNECTOR 8P			
CN5511	1-695-915-21	TAB (CONTACT)			
CN5522	1-695-915-21	TAB (CONTACT)			
CN5600	1-508-766-12	PIN, CONNECTOR (5MM PITCH) 4P			
		< DIODE >			
D5300	8-719-921-20	DIODE 1SS119-25TD			
D5302	8-719-989-09	DIODE 1SS83TA			
D5325	8-719-921-20	DIODE 1SS119-25TD			
D5326	8-719-923-58	DIODE MTZJ-T-77-9.1A			
D5327	8-719-989-09	DIODE 1SS83TA			
D5350	8-719-921-20	DIODE 1SS119-25TD			
D5351	8-719-991-33	DIODE 1SS133T-77			
D5353	8-719-989-09	DIODE 1SS83TA			
D5375	8-719-991-33	DIODE 1SS133T-77			
D5376	8-719-991-33	DIODE 1SS133T-77			
D5377	8-719-936-83	DIODE GP08DPKG23			
D5378	8-719-923-84	DIODE MTZJ-T-77-13B			
D5379	8-719-982-96	DIODE MTZJ-T-77-2.2A			
D5380	8-719-982-96	DIODE MTZJ-T-77-2.2A			
D5381	8-719-031-34	DIODE RGP02-20EG23			
		<IC >			
IC5300	8-759-360-83	IC TDA6111Q/N4			
IC5325	8-759-360-83	IC TDA6111Q/N4			
IC5350	8-759-360-83	IC TDA6111Q/N4			
		< SOCKET >			
J5375	⚠ 1-540-071-22	SOCKET, CRT			
		< COIL >			
L5300	1-408-599-41	INDUCTOR	4.7UH		
L5325	1-408-599-41	INDUCTOR	4.7UH		
L5350	1-408-599-41	INDUCTOR	4.7UH		
L5375	1-410-671-41	INDUCTOR	47UH		
L5376	1-532-637-91	LINK,IC 1A/150V (ICP-F25)			
L5377	1-414-183-40	INDUCTOR	10UH		
		< TRANSISTOR >			
Q5300	8-729-204-98	TRANSISTOR 2SC25510-TPE2			
Q5325	8-729-204-98	TRANSISTOR 2SC25510-TPE2			
Q5350	8-729-029-57	TRANSISTOR DTA144ESA-TP			
Q5351	8-729-204-98	TRANSISTOR 2SC25510-TPE2			
Q5375	8-729-900-95	TRANSISTOR 2SC1740S-RT			
Q5376	8-729-026-40	TRANSISTOR 2SA933AS-RT			

REF. NO.	PART.NO	DESCRIPTION				REMARK
		< RESISTOR >				
R5300	1-247-831-91	CARBON	1K	5%	1/4W	
R5301	1-247-823-91	CARBON	470	5%	1/4W	
R5302	1-247-813-91	CARBON	180	5%	1/4W	
R5303	1-247-831-91	CARBON	1K	5%	1/4W	
R5304	1-202-565-81	SOLID	470	20%	1/2W	
R5305	1-215-926-51	METAL OXIDE	33K	5%	3W	F
R5306	1-247-845-91	CARBON	3.9K	5%	1/4W	
R5307	1-247-863-91	CARBON	22K	5%	1/4W	
R5325	1-247-831-91	CARBON	1K	5%	1/4W	
R5326	1-247-823-91	CARBON	680	5%	1/4W	
R5327	1-247-813-91	CARBON	180	5%	1/4W	
R5328	1-249-417-11	CARBON	1K	5%	1/4W	
R5329	1-202-565-81	SOLID	470	20%	1/2W	
R5330	1-215-926-51	METAL OXIDE	33K	5%	3W	F
R5331	1-247-845-91	CARBON	3.9K	5%	1/4W	
R5332	1-247-863-91	CARBON	22K	5%	1/4W	
R5350	1-249-417-11	CARBON	1K	5%	1/4W	
R5351	1-247-823-91	CARBON	470	5%	1/4W	
R5352	1-247-829-91	CARBON	820	5%	1/4W	
R5353	1-247-839-91	CARBON	2.2K	5%	1/4W	
R5354	1-247-833-91	CARBON	1.2K	5%	1/4W	
R5355	1-247-813-91	CARBON	180	5%	1/4W	
R5356	1-249-417-11	CARBON	1K	5%	1/4W	
R5357	1-202-565-81	SOLID	470	20%	1/2W	
R5358	1-215-926-51	METAL OXIDE	33K	5%	3W	F
R5359	1-247-863-91	CARBON	22K	5%	1/4W	
R5360	1-247-845-91	CARBON	3.9K	5%	1/4W	
R5361	1-247-859-91	CARBON	4.7K	5%	1/4W	
R5375	1-247-867-91	CARBON	33K	5%	1/4W	
R5376	1-247-855-91	CARBON	10K	5%	1/4W	
R5377	1-247-857-91	CARBON	12K	5%	1/4W	
R5378	1-247-855-91	CARBON	10K	5%	1/4W	
R5379	1-247-873-91	CARBON	56K	5%	1/4W	
R5380	1-247-863-91	CARBON	22K	5%	1/4W	
R5381	1-247-837-91	CARBON	1.8K	5%	1/4W	
R5382	1-202-549-81	SOLID	100	20%	1/2W	
R5383	1-216-399-51	METAL OXIDE	6.8	5%	3W	F
R5384	1-216-399-51	METAL OXIDE	6.8	5%	3W	F
R5385	1-202-549-81	SOLID	100	20%	1/2W	
R5386	1-202-884-91	SOLID	820K	20%	1/2W	
R5387	1-202-884-91	SOLID	820K	20%	1/2W	
R5388	1-215-911-51	METAL OXIDE	100	5%	3W	F
R5389	1-249-417-91	CARBON	1K	5%	1/4W	F
		< VARIABLE RESISTOR >				
RV5375	1-241-656-21	RES, ADJ, METAL FILM 110M				
RV5376	1-230-641-21	RES, ADJ, METAL GLAZE 2.2M				

REF. NO.	PART.NO	DESCRIPTION				REMARK
	*A-1640-329-A	D1 BOARD, COMPLETE (KV-28FX60)				
		**********				
	*A-1640-322-A	D1 BOARD, COMPLETE (KV-32FX60)				
		**********				
	4-382-854-11	SCREW (M3X10), P, SW (+)				
		< CAPACITOR >				
C6100	1-136-165-00	FILM	0.1MF	5%	50V	
C6101	1-136-165-00	FILM	0.1MF	5%	50V	
C6102	1-136-165-00	FILM	0.1MF	5%	50V	
C6103	1-163-205-00	CERAMIC CHIP	0.001MF	5%	50V	
C6104	1-163-205-00	CERAMIC CHIP	0.001MF	5%	50V	
C6105	1-126-967-11	ELECT	47MF	20%	50V	
C6106	1-163-133-00	CERAMIC CHIP	470PF	5%	50V	
C6108	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V	
C6109	1-126-967-11	ELECT	47MF	20%	50V	
C6110	1-126-967-11	ELECT	47MF	20%	50V	
C6111	1-126-967-11	ELECT	47MF	20%	50V	
C6112	1-163-037-11	CERAMIC CHIP	0.022MF	10%	50V	
C6113	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V	
C6114	1-126-964-11	ELECT	10MF	20%	50V	
C6115	1-163-005-11	CERAMIC CHIP	470PF	10%	50V	
C6116	1-163-275-11	CERAMIC CHIP	0.001MF	5%	50V	
C6117	1-163-275-11	CERAMIC CHIP	0.001MF	5%	50V	
C6119	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V	
C6121	1-126-964-11	ELECT	10MF	20%	50V	
C6122	1-126-967-11	ELECT	47MF	20%	50V	
C6125	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V	
C6126	1-163-809-11	CERAMIC CHIP	0.047MF	10%	25V	
C6127	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V	
C6128	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V	
C6129	1-163-809-11	CERAMIC CHIP	0.047MF	10%	25V	(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)
	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V	(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)
C6130	1-163-259-91	CERAMIC CHIP	220PF	5%	50V	(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)
C6131	1-126-964-11	ELECT	10MF	20%	50V	
C6132	1-163-259-91	CERAMIC CHIP	220PF	5%	50V	
C6199	1-163-229-11	CERAMIC CHIP	12PF	5%	50V	
C6207	1-126-967-11	ELECT	47MF	20%	50V	
C6208	1-126-967-11	ELECT	47MF	20%	50V	
C6209	1-163-133-00	CERAMIC CHIP	470PF	5%	50V	
C6210	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V	
C6250	1-104-664-11	ELECT	47MF	20%	16V	
C6253	1-115-339-11	CERAMIC CHIP	0.1MF	10%	50V	
C6254	1-136-177-00	FILM	1MF	5%	50V	
C6255	1-136-177-00	FILM	1MF	5%	50V	
C6256	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	

D1

REF. NO.	PART.NO	DESCRIPTION			REMARK
C6257	1-115-339-11	CERAMIC CHIP	0.1MF	10%	50V
C6258	1-163-127-00	CERAMIC CHIP	270PF	5%	50V
C6259	1-110-501-11	CERAMIC CHIP	0.33MF	10%	16V
C6260	1-104-664-11	ELECT	47MF	20%	16V
C6261	1-115-339-11	CERAMIC CHIP	0.1MF	10%	50V
C6262	1-136-165-00	FILM	0.1MF	5%	50V
C6263	1-163-109-00	CERAMIC CHIP	47PF	5%	50V
C6264	1-126-964-11	ELECT	10MF	20%	50V
C6306	1-126-964-11	ELECT	10MF	20%	50V
C6307	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C6350	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C6351	1-126-967-11	ELECT	47MF	20%	50V
C6353	1-115-339-11	CERAMIC CHIP	0.1MF	10%	50V
C6354	1-136-159-00	FILM	0.033MF	5%	50V
C6355	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C6356	1-163-809-11	CERAMIC CHIP	0.047MF	10%	25V
C6357	1-136-165-00	FILM	0.1MF	5%	50V
C6358	1-104-329-11	CERAMIC CHIP	0.1MF	10%	50V
C6359	1-104-329-11	CERAMIC CHIP	0.1MF	10%	50V
C6360	1-107-714-11	ELECT	10MF	20%	50V
C6361	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C6362	1-164-182-11	CERAMIC CHIP	0.0033MF	10%	50V
C6363	1-104-665-11	ELECT	100MF	20%	25V
C6364	1-137-493-11	FILM	0.0047MF	5%	630V
C6365	1-163-809-11	CERAMIC CHIP	0.047MF	10%	25V
C6367	1-104-329-11	CERAMIC CHIP	0.1MF	10%	50V
C6368	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C6370	1-137-493-11	FILM	0.0047MF	5%	630V
C6371	1-137-493-11	FILM	0.0047MF	5%	630V
C6373	1-136-153-00	FILM	0.01MF	5%	50V
C6374	1-137-499-11	FILM	0.015MF	5%	630V
C6375	1-102-110-00	CERAMIC	220PF	10%	50V
C6376	1-104-664-11	ELECT	47MF	20%	16V
C6377	1-128-551-11	ELECT	22MF	20%	25V
C6378	1-115-339-11	CERAMIC CHIP	0.1MF	10%	50V
C6380	1-136-165-00	FILM	0.1MF	5%	50V
C6381	1-126-960-11	ELECT	1MF	20%	50V
C6385	1-104-664-11	ELECT	47MF	20%	25V
C6386	1-104-664-11	ELECT	47MF	20%	25V
C6388	1-126-964-11	ELECT	10MF	20%	50V
C6389	1-126-964-11	ELECT	10MF	20%	50V
C6392	1-104-664-11	ELECT	47MF	20%	25V
C6401	1-126-964-11	ELECT	10MF	20%	50V
C6402	1-107-714-11	ELECT	10MF	20%	50V
C6407	1-136-161-00	FILM	0.047MF	5%	50V
C6408	1-136-161-00	FILM	0.047MF	5%	50V
C6409	1-126-964-11	ELECT	10MF	20%	50V

REF. NO.	PART.NO	DESCRIPTION	REMARK
		< CONNECTOR >	
CN6502	1-564-509-11	PLUG, CONNECTOR 6P	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	*1-568-881-51	PIN, CONNECTOR 6P	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
CN6601	1-695-302-11	CONNECTOR, BOARD TO BOARD 50P	
CN6622	*1-568-878-51	PIN, CONNECTOR 3P	
CN6633	*1-568-878-51	PIN, CONNECTOR 3P	
		< DIODE >	
D6100	8-719-914-43	DIODE DAN202K	
D6101	8-719-921-40	DIODE MTZJ-4.7C	
D6102	8-719-914-43	DIODE DAN202K	
D6104	8-719-914-43	DIODE DAN202K	
D6105	8-719-914-43	DIODE DAN202K	
D6106	8-719-914-43	DIODE DAN202K	
D6107	8-719-914-47	DIODE DAN202K-T-146	
D6108	8-719-921-40	DIODE MTZJ-4.7C	
D6127	8-719-914-43	DIODE DAN202K	
D6128	8-719-914-43	DIODE DAN202K	
D6129	8-719-914-43	DIODE DAN202K	
D6198	8-719-109-54	DIODE MTZJ-T-77-2.2B	
D6253	8-719-911-19	DIODE 1SS119-25	
D6254	1-535-303-00	LEAD, JUMPER (5.0MM)	
D6255	8-719-914-43	DIODE DAN202K	
D6350	8-719-914-43	DIODE DAN202K	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
D6351	8-719-914-43	DIODE DAN202K	
D6352	8-719-914-43	DIODE DAN202K	
D6353	8-719-987-87	DIODE ERA85-009	
D6354	8-719-914-43	DIODE DAN202K	
D6355	8-719-914-43	DIODE DAN202K	
D6358	8-719-914-43	DIODE DAN202K	
D6359	8-719-302-43	DIODE EL1Z	
D6401	8-719-914-43	DIODE DAN202K	
D6402	8-719-982-03	DIODE MTZJ-3.6A	
D6403	8-719-921-63	DIODE MTZJ-7.5B	
D6404	8-719-914-43	DIODE DAN202K	
D6405	8-719-921-63	DIODE MTZJ-7.5B	
		< IC >	
IC6100	8-759-103-93	IC LM393N	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	8-759-450-95	IC LM393N	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

D1

REF. NO.	PART.NO	DESCRIPTION	REMARK
IC6101	8-759-103-93	IC LM393N (KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	8-759-450-95	IC LM393N (KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
IC6102	8-759-701-50	IC NJM3404AD	
IC6103	8-759-450-95	IC LM393N	
IC6250	8-759-478-66	IC CXA8070P	
IC6251	8-759-903-16	IC LM318P	
IC6302	8-752-072-94	IC CXA1875AM-T4	
IC6350	8-759-135-80	IC LM358P (KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	8-759-008-70	IC LM358N (KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
IC6351	8-759-103-93	IC LM393P (KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	8-759-450-95	IC LM393N (KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
IC6352	8-759-103-93	IC LM393P (KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	8-759-450-95	IC LM393N (KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
IC6353	8-759-231-53	IC TA7805S	
IC6354	8-759-325-48	IC CA0005AD	
IC6355	8-759-008-70	IC LM358N	
IC6356	8-759-822-38	IC LA6510	
		< FILTER >	
LF6350	1-406-989-21	INDUCTOR 0UH	
LF6351	1-406-989-21	INDUCTOR 0UH	
		< IC LINK >	
PS6376	⚠ 1-532-637-00	LINK,IC 1A (ICP-N25)	
		< TRANSISTOR >	
Q6100	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6101	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6102	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6103	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6104	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6105	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6106	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6107	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6108	8-729-216-22	TRANSISTOR 2SA1162-G	
Q6110	8-729-216-22	TRANSISTOR 2SA1162-G	
Q6112	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6113	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6118	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6119	8-729-216-22	TRANSISTOR 2SA1162-G	
Q6120	8-729-216-22	TRANSISTOR 2SA1162-G	
Q6122	8-729-216-22	TRANSISTOR 2SA1162-G	
Q6123	8-729-216-22	TRANSISTOR 2SA1162-G	
Q6125	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6126	8-729-216-22	TRANSISTOR 2SA1162-G	
Q6127	8-729-216-22	TRANSISTOR 2SA1162-G	
Q6128	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6129	8-729-216-22	TRANSISTOR 2SA1162-G	
Q6130	8-729-216-22	TRANSISTOR 2SA1162-G	
Q6131	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6201	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6202	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6250	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6251	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6252	8-729-216-22	TRANSISTOR 2SA1162-G	
Q6253	8-729-017-06	TRANSISTOR 2SC4793	
Q6254	8-729-017-05	TRANSISTOR 2SA1837	
Q6350	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6351	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q6352	8-729-140-97	TRANSISTOR 2SB734-34	
Q6353	8-729-140-97	TRANSISTOR 2SB734-34	
Q6354	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6356	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6358	8-729-038-83	TRANSISTOR 2SK2251-01-F19	
Q6401	1-801-806-11	TRANSISTOR DTC144EKA-T146	
Q6402	1-801-806-11	TRANSISTOR DTC144EKA-T146	
Q6403	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6404	8-729-216-22	TRANSISTOR 2SA1162-G	
Q6405	8-729-216-22	TRANSISTOR 2SA1162-G	
Q6455	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q6465	8-729-620-06	TRANSISTOR 2SC3052-EF	
		< RESISTOR >	
R6100	1-216-033-00	RES,CHIP 220 5% 1/10W	
R6101	1-216-033-00	RES,CHIP 220 5% 1/10W	
R6102	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6103	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6104	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6105	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R6106	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6107	1-216-657-11	METAL CHIP 1.8K 0.50% 1/10W	
R6108	1-216-657-11	METAL CHIP 1.8K 0.50% 1/10W	
R6109	1-216-683-11	METAL CHIP 22K 0.5% 1/10W (KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	1-216-683-11	METAL CHIP 22K 0.50% 1/10W (KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	

D1

REF. NO.	PART.NO	DESCRIPTION	REMARK
R6110	1-216-691-11	METAL CHIP 47K 0.50% 1/10W	
R6111	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6112	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6113	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R6114	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R6115	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R6116	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R6117	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R6118	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R6119	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R6120	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6121	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6122	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6123	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R6124	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R6125	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6126	1-216-037-00	RES,CHIP 330 5% 1/10W	
R6127	1-216-659-11	METAL CHIP 2.2K 0.50% 1/10W	
R6128	1-216-691-11	METAL CHIP 47K 0.50% 1/10W	
R6129	1-216-691-11	METAL CHIP 47K 0.50% 1/10W	
R6130	1-218-768-11	METAL CHIP 470K 0.50% 1/10W	(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)
R6131	1-216-037-00	RES,CHIP 330 5% 1/10W	
R6132	1-216-037-00	RES,CHIP 330 5% 1/10W	
R6133	1-216-037-00	RES,CHIP 330 5% 1/10W	
R6134	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6135	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6136	1-216-691-11	METAL CHIP 47K 0.50% 1/10W	
R6137	1-216-691-11	METAL CHIP 47K 0.50% 1/10W	
R6138	1-216-691-11	METAL CHIP 47K 0.50% 1/10W	
R6139	1-216-691-11	METAL CHIP 47K 0.50% 1/10W	
R6140	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6141	1-216-069-00	RES,CHIP 6.8K 5% 1/10W	(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)
	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)
R6142	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)
	1-216-053-00	RES,CHIP 1.5K 5% 1/10W	(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)
R6143	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6145	1-216-075-00	RES,CHIP 12K 5% 1/10W	(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)
	1-216-045-00	RES,CHIP 680 5% 1/10W	(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)
R6146	1-216-085-00	RES,CHIP 33K 5% 1/10W	(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)
	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)
R6147	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6148	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6149	1-216-025-91	RES,CHIP 100 5% 1/10W	
R6154	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)
	1-216-041-00	RES,CHIP 470 5% 1/10W	(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)
R6155	1-216-067-00	RES,CHIP 5.6K 5% 1/10W	(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)
	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)
R6158	1-216-675-11	METAL CHIP 10K 5% 1/10W	(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)
	1-216-671-11	METAL CHIP 6.8K 0.50% 1/10W	(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)
R6159	1-216-295-91	SHORT 0	
R6160	1-216-295-91	SHORT 0	(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)
	1-216-655-11	METAL CHIP 1.5K 0.50% 1/10W	(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)
R6161	1-216-671-11	METAL CHIP 6.8K 0.50% 1/10W	(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)
	1-216-669-11	METAL CHIP 5.6K 0.50% 1/10W	(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)
R6162	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R6165	1-216-699-11	METAL CHIP 100K 0.50% 1/10W	
R6168	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R6169	1-216-699-11	METAL CHIP 100K 0.50% 1/10W	
R6170	1-216-037-00	RES,CHIP 330 5% 1/10W	
R6171	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6174	1-216-075-00	PES,CHIP 12K 5% 1/10W	(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)
	1-216-081-00	RES,CHIP 22K 5% 1/10W	(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)
R6175	1-216-075-00	RES,CHIP 12K 5% 1/10W	

REF. NO.	PART.NO	DESCRIPTION	REMARK
R6176	1-216-295-91	SHORT 0	
R6177	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R6178	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R6179	1-216-067-00	RES,CHIP 5.6K 5% 1/10W	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	1-216-059-00	RES,CHIP 2.7K 5% 1/10W	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
R6180	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6182	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R6183	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6186	1-216-295-91	SHORT 0	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	1-216-049-91	RES,CHIP 1K 5% 1/10W	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
R6187	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R6188	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
R6189	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	1-216-049-91	RES,CHIP 1K 5% 1/10W	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
R6190	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6191	1-215-925-11	METAL OXIDE 22K 5% 3W F	
R6192	1-216-081-00	RES,CHIP 22K 5% 1/10W	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
R6194	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R6195	1-216-093-00	RES,CHIP 68K 5% 1/10W	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
R6196	1-249-377-11	CARBON 0.47 5% 1/4W F	
R6198	1-216-075-00	RES,CHIP 12K 5% 1/10W	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	1-216-081-00	RES,CHIP 22K 5% 1/10W	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
R6199	1-216-081-00	RES,CHIP 22K 5% 1/10W	
R6205	1-216-025-91	RES,CHIP 100 5% 1/10W	
R6206	1-216-105-91	RES,CHIP 220K 5% 1/10W	
R6208	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R6209	1-216-295-91	SHORT 0	
R6210	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6211	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R6212	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6215	1-216-089-91	RES,CHIP 47K 5% 1/10W	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
R6216	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R6217	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R6254	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R6255	1-216-061-00	RES,CHIP 3.3K 5% 1/10W	
R6256	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6257	1-216-061-00	RES,CHIP 3.3K 5% 1/10W	
R6258	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6259	1-216-097-91	RES,CHIP 100K 5% 1/10W	
R6260	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R6261	1-216-097-91	RES,CHIP 100K 5% 1/10W	
R6262	1-260-321-71	CARBON 270 5% 1/2W	
R6263	1-216-025-91	RES,CHIP 100 5% 1/10W	
R6264	1-216-025-91	RES,CHIP 100 5% 1/10W	
R6265	1-216-101-00	RES,CHIP 150K 5% 1/10W	
R6267	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R6269	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R6270	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R6271	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R6272	1-216-683-11	METAL CHIP 22K 5% 1/10W	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
R6273	1-216-081-00	RES,CHIP 22K 5% 1/10W	
R6276	1-216-689-11	METAL CHIP 39K 0.50% 1/10W	
R6277	1-216-686-11	METAL CHIP 30K 0.50% 1/10W	
R6278	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6279	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6280	1-249-377-11	CARBON 0.47 5% 1/4W F	
R6281	1-249-377-11	CARBON 0.47 5% 1/4W F	
R6282	1-215-886-11	METAL OXIDE 100 5% 2W F	
R6283	1-216-393-00	METAL OXIDE 2.2 5% 3W F	
R6284	1-216-113-00	RES,CHIP 470K 5% 1/10W	
R6285	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6286	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R6287	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R6313	1-216-295-91	SHORT 0	
R6322	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R6323	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R6324	1-216-025-91	RES,CHIP 100 5% 1/10W	
R6325	1-216-025-91	RES,CHIP 100 5% 1/10W	
R6350	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R6351	1-218-762-11	METAL CHIP 270K 0.50% 1/10W	
R6353	1-216-671-11	METAL CHIP 6.8K 0.50% 1/10W	
R6355	1-218-774-11	METAL CHIP 820K 0.50% 1/10W	
R6356	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R6357	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R6358	1-216-047-91	RES,CHIP 820 5% 1/10W	

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

REF. NO.	PART.NO	DESCRIPTION			REMARK
R6359	1-216-097-91	RES,CHIP	100K	5%	1/10W
R6360	1-216-073-00	RES,CHIP	10K	5%	1/10W
R6361	1-216-097-91	RES,CHIP	100K	5%	1/10W
R6362	1-216-687-11	METAL CHIP	33K	0.50%	1/10W
R6363	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R6364	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R6365	1-216-033-00	RES,CHIP	220	5%	1/10W
R6366	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R6367	1-216-679-11	METAL CHIP	15K	0.50%	1/10W
R6368	1-218-760-11	METAL CHIP	220K	0.50%	1/10W
R6369	1-218-762-11	METAL CHIP	270K	0.50%	1/10W
R6370	1-216-675-11	METAL CHIP	10K		
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/28FX60K/28FX60R/28FX60U)			
	1-216-677-11	METAL CHIP	12K	0.50%	1/10W
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/32FX60K/32FX60R/32FX60U)			
R6371	1-216-474-11	METAL OXIDE	82	5%	3W F
R6372	1-216-033-00	RES,CHIP	220	5%	1/10W
R6373	1-216-681-11	METAL CHIP	18K	0.50%	1/10W
R6374	1-216-689-11	METAL CHIP	39K	0.50%	1/10W
R6375	1-216-041-00	RES,CHIP	470	5%	1/10W
R6377	1-216-689-11	METAL CHIP	39K	0.50%	1/10W
R6378	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R6379	1-216-295-91	SHORT	0		
R6380	1-218-754-11	METAL CHIP	120K	0.50%	1/10W
R6381	1-216-045-00	RES,CHIP	680	5%	1/10W
R6382	1-218-754-11	METAL CHIP	120K	0.50%	1/10W
R6383	1-216-687-11	METAL CHIP	33K	0.50%	1/10W
R6384	1-216-043-91	RES,CHIP	560	5%	1/10W
R6385	1-216-295-91	SHORT	0		
R6386	1-216-699-11	METAL CHIP	100K	0.50%	1/10W
R6387	1-216-677-11	METAL CHIP	12K	0.50%	1/10W
R6391	1-249-417-11	CARBON	1K	5%	1/4W
R6394	1-216-069-00	RES,CHIP	6.8K	5%	1/10W
R6395	1-216-081-00	RES,CHIP	22K	5%	1/10W
R6397	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R6398	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R6399	1-218-756-11	METAL CHIP	150K	0.50%	1/10W
R6400	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R6401	1-216-295-91	SHORT	0		
R6402	1-216-295-91	SHORT	0		
R6403	1-216-661-11	METAL CHIP	2.7K	0.50%	1/10W
R6404	1-216-683-11	METAL CHIP	22K	0.50%	1/10W
R6405	1-216-683-11	METAL CHIP	22K	0.50%	1/10W
R6409	1-216-025-91	RES,CHIP	100	5%	1/10W
R6410	1-216-073-00	RES,CHIP	10K	5%	1/10W
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/28FX60K/28FX60R/28FX60U)			
R6411	1-216-073-00	RES,CHIP	10K	5%	1/10W
R6412	1-216-073-00	RES,CHIP	10K	5%	1/10W
R6413	1-216-679-11	METAL CHIP	15K	0.50%	1/10W
R6414	1-216-679-11	METAL CHIP	15K	0.50%	1/10W
R6415	1-216-683-11	METAL CHIP	22K	0.50%	1/10W
R6416	1-216-683-11	METAL CHIP	22K	0.50%	1/10W
R6418	1-216-093-00	RES,CHIP	68K	5%	1/10W
R6419	1-216-073-00	RES,CHIP	10K	5%	1/10W
R6420	1-216-091-00	RES,CHIP	56K	5%	1/10W
R6421	1-216-637-11	METAL CHIP	270	0.50%	1/10W
R6422	1-216-639-11	METAL CHIP	330	0.50%	1/10W
R6423	1-216-657-11	METAL CHIP	1.8K	0.50%	1/10W
R6426	1-216-081-00	RES,CHIP	22K	5%	1/10W
R6427	1-216-081-00	RES,CHIP	22K	5%	1/10W
R6428	1-216-101-00	RES,CHIP	150K	5%	1/10W
R6429	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R6430	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R6431	1-216-113-00	RES,CHIP	470K	5%	1/10W
R6432	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R6433	1-216-073-00	RES,CHIP	10K	5%	1/10W
R6437	1-249-422-11	CARBON	2.7K	5%	1/4W
R6438	1-249-421-11	CARBON	2.2K	5%	1/4W
R6439	1-216-683-11	METAL CHIP	22K	0.50%	1/10W
R6440	1-216-683-11	METAL CHIP	22K	0.50%	1/10W
R6441	1-216-673-11	METAL CHIP	8.2K	0.50%	1/10W
R6442	1-216-039-00	RES,CHIP	390	5%	1/10W
R6455	1-216-295-91	SHORT	0		
R6456	1-216-097-91	RES,CHIP	100K	5%	1/10W
R6457	1-216-075-00	RES,CHIP	12K	5%	1/10W
R6458	1-216-089-91	RES,CHIP	47K	5%	1/10W
R6459	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R6460	1-249-393-11	CARBON	10	5%	1/4W
R6461	1-249-411-11	CARBON	330	5%	1/4W
R6462	1-249-406-11	CARBON	120	5%	1/4W
R6463	1-216-095-00	RES,CHIP	82K	5%	1/10W
R6464	1-216-079-00	RES,CHIP	18K	5%	1/10W

****

*A-1640-328-A D BOARD, COMPLETE (KV-28FX60)
****

*A-1640-323-A D BOARD, COMPLETE (KV-32FX60)
****

4-201-023-01 SPACER, INSULATING
4-202-373-01 SPRING,IC
4-382-854-11 SCREW (M3X10), P, SW (+)
*4-931-401-01 HEAT SINK, V.OUT

< CAPACITOR >

C6600	⚠	1-162-580-51	CERAMIC	0.01MF		400V
C6603		1-126-933-11	ELECT	100MF	20%	16V
C6604		1-126-767-11	ELECT	1000MF	20%	16V
C6605	⚠	1-119-888-51	CERAMIC	2200PF	20%	250V
C6606	⚠	1-119-888-51	CERAMIC	2200PF	20%	250V
C6607	⚠	1-107-565-11	FILM	0.33MF	20%	300V

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

D

REF. NO.		PART.NO	DESCRIPTION			REMARK
C6608	⚠	1-161-964-91	CERAMIC	0.0047MF		250V
C6609	⚠	1-161-964-91	CERAMIC	0.0047MF		250V
C6610		1-162-599-12	CERAMIC	0.0047MF		250V
C6611		1-162-599-12	CERAMIC	0.0047MF		250V
C6612		1-161-744-00	CERAMIC	0.01MF		400V
C6616		1-164-625-11	CERAMIC	680PF	10%	500V
C6617		1-164-625-11	CERAMIC	680PF	10%	500V
C6618		1-136-175-00	FILM	0.68MF	5%	50V
C6619		1-137-194-91	FILM	0.47MF	5%	50V
C6620		1-136-618-11	FILM	0.047MF	5%	1.25KV
C6621		1-136-175-00	FILM	0.68MF	5%	50V
C6622		1-164-625-11	CERAMIC	680PF	10%	500V
C6623		1-137-194-91	FILM	0.47MF	5%	50V
C6624		1-126-968-11	ELECT	100MF	20%	50V
C6626		1-164-625-11	CERAMIC	680PF	10%	500V
C6627		1-164-625-11	CERAMIC	680PF	10%	500V
C6628		1-126-936-11	ELECT	3300MF	20%	16V
C6629		1-128-548-11	ELECT	4700MF	20%	25V
C6630		1-110-626-11	ELECT	330MF	20%	160V
C6631		1-128-548-11	ELECT	4700MF	20%	25V
C6632		1-128-548-11	ELECT	4700MF	20%	25V
C6633		1-126-935-11	ELECT	470MF	20%	16V
C6634		1-136-165-00	FILM	0.1MF	5%	50V
C6635		1-104-664-11	ELECT	47MF	20%	25V
C6636		1-102-129-00	CERAMIC	0.01MF	10%	50V
C6637		1-102-129-00	CERAMIC	0.01MF	10%	50V
C6638		1-137-368-11	FILM	0.0047MF	5%	50V
C6639		1-102-228-00	CERAMIC	470PF	10%	500V
C6641		1-126-967-11	ELECT	47MF	20%	50V
C6642		1-126-964-11	ELECT	10MF	20%	50V
C6647		1-104-664-11	ELECT	47MF	20%	25V
C6649		1-126-965-11	ELECT	22MF	20%	50V
C6651		1-162-599-12	CERAMIC	0.0047MF		250V
C6652		1-107-679-91	ELECT	10MF	20%	450V
C6653		1-126-968-11	ELECT	100MF	20%	50V
C6654		1-162-117-00	CERAMIC	100PF	10%	500V
C6655		1-109-879-11	CERAMIC	22PF	5%	2KV
C6656		1-126-967-11	ELECT	47MF	20%	50V
C6657		1-126-941-11	ELECT	470MF	20%	25V
C6658		1-104-665-11	ELECT	100MF	20%	25V
C6659		1-104-665-11	ELECT	100MF	20%	25V
C6661		1-117-753-11	ELECT(BLOCK)	470MF	20%	450V
C6662		1-136-165-00	FILM	0.1MF	5%	50V
C6664		1-136-153-00	FILM	0.01MF	5%	50V
C6665		1-136-165-00	FILM	0.1MF	5%	50V
C6666		1-136-165-00	FILM	0.1MF	5%	50V
C6667		1-126-933-11	ELECT	100MF	20%	16V
C6668		1-126-933-11	ELECT	100MF	20%	16V
C6669		1-136-165-00	FILM	0.1MF	5%	50V
C6670		1-136-165-00	FILM	0.1MF	5%	50V
C6671		1-104-664-11	ELECT	47MF	20%	16V
C6672		1-104-664-11	ELECT	47MF	20%	16V
C6673		1-104-664-11	ELECT	47MF	20%	16V
C6677		1-136-165-00	FILM	0.1MF	5%	50V
C6679		1-130-495-00	FILM	0.1MF	5%	50V
C6680		1-137-370-11	FILM	0.01MF	5%	50V
C6681		1-126-964-11	ELECT	10MF	20%	50V
C6700		1-102-129-00	CERAMIC	0.01MF	10%	50V
C6703		1-128-527-11	ELECT	330MF	20%	25V
C6704		1-126-968-11	ELECT	100MF	20%	50V
C6705		1-128-527-11	ELECT	330MF	20%	25V
C6706		1-106-228-00	MYLAR	0.22MF	10%	100V
C6707		1-129-702-00	FILM	0.001MF	10%	400V
C6708		1-106-220-00	MYLAR	0.1MF	10%	100V
C6709		1-102-129-00	CERAMIC	0.01MF	10%	50V
C6710		1-130-785-11	MYLAR	0.47MF	10%	100V
C6727		1-102-228-00	CERAMIC	470PF	10%	500V
C6801		1-104-664-11	ELECT	47MF	20%	25V
C6802		1-126-960-11	ELECT	1MF	20%	50V
C6803		1-126-960-11	ELECT	1MF	20%	50V
C6804		1-102-114-00	CERAMIC	470PF	10%	50V
C6805		1-102-114-00	CERAMIC	470PF	10%	50V
C6808		1-102-030-00	CERAMIC	330PF	10%	500V
C6809		1-102-030-00	CERAMIC	330PF	10%	500V
C6810		1-107-368-11	FILM	0.047MF	10%	200V
C6811		1-107-368-11	FILM	0.047MF	10%	200V
C6812		1-162-131-11	CERAMIC	220PF	10%	2KV
C6813		1-162-134-11	CERAMIC	470PF	10%	2KV
C6814		1-117-641-11	FILM	7500PF	3%	1.2KV (KV-28FX60A/28FX60B/28FX60D/28FX60E/28FX60K/28FX60R/28FX60U)
		1-117-640-11	FILM	6800PF	3%	1.2KV (KV-32FX60A/32FX60B/32FX60D/32FX60E/32FX60K/32FX60R/32FX60U)
C6815		1-117-836-11	FILM	6800PF	3%	2KV (KV-28FX60A/28FX60B/28FX60D/28FX60E/28FX60K/28FX60R/28FX60U)
		1-117-835-11	FILM	6200PF	3%	2KV (KV-32FX60A/32FX60B/32FX60D/32FX60E/32FX60K/32FX60R/32FX60U)
C6816		1-137-364-00	FILM	0.001MF	5%	50V
C6817		1-125-893-11	FILM	680PF	3%	2KV
C6818		1-125-893-11	FILM	680PF	3%	2KV
C6819		1-125-893-11	FILM	680PF	3%	2KV
C6820		1-125-893-11	FILM	680PF	3%	2KV
C6824		1-107-846-11	FILM	0.1MF	5%	200V
C6825		1-117-662-11	FILM	0.18MF	5%	200V
C6826		1-117-666-71	FILM	0.39MF	5%	250V (KV-28FX60A/28FX60B/28FX60D/28FX60E/28FX60K/28FX60R/28FX60U)
		1-117-665-11	FILM	0.33MF	5%	200V (KV-32FX60A/32FX60B/32FX60D/32FX60E/32FX60K/32FX60R/32FX60U)

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

D

REF. NO.	PART.NO	DESCRIPTION			REMARK
C6827	1-117-660-21	FILM	0.12MF	5%	200V
C6828	1-127-681-91	CERAMIC	10000PF	2%	100V
C6829	1-127-681-91	CERAMIC	10000PF	2%	100V
C6830	1-107-655-11	ELECT	47MF	20%	250V
C6831	1-102-228-00	CERAMIC	470PF	10%	500V
C6832	1-126-941-11	ELECT	470MF	20%	25V
C6833	1-126-941-11	ELECT	470MF	20%	25V
C6834	1-102-228-00	CERAMIC	470PF	10%	500V
C6835	1-102-228-00	CERAMIC	470PF	10%	500V
C6836	1-123-024-21	ELECT	33MF		160V
C6837	1-106-375-12	MYLAR	0.022MF	10%	250V
C6840	1-137-370-11	FILM	0.01MF	5%	50V
C6841	1-104-664-11	ELECT	47MF	20%	16V
C6842	1-136-207-11	FILM	0.047MF	10%	400V
C6843	1-136-177-00	FILM	1MF	5%	50V
C6851	1-162-131-11	CERAMIC	220PF	10%	2KV
C6852	1-162-129-00	CERAMIC	150PF	10%	2KV
C6853	1-137-536-11	FILM	0.0022MF	5%	630V
C6855	1-136-205-11	FILM	0.022MF	10%	400V
C6856	1-102-030-00	CERAMIC	330PF	10%	500V
C6857	1-130-785-11	FILM	0.47MF	10%	100V
C6861	1-137-364-11	FILM	0.001MF	5%	50V
C6862	1-137-364-11	FILM	0.001MF	5%	50V
C6863	1-162-134-11	CERAMIC	470PF	10%	2KV
		< CONNECTOR >			
CN6100	1-785-805-11	JACK, I.LINK			
CN6101	1-785-805-11	JACK, I.LINK			
CN6102	1-785-805-11	JACK, I.LINK			
CN6500	1-508-766-00	PIN, CONNECTOR (5MM PITCH) 4P			
CN6600	1-695-299-11	CONNECTOR, BOARD TO BOARD 50P			
CN6611	*1-580-798-11	CONNECTOR, PIN (DY) 6P			
CN6620 ⚠	1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P			
CN6655	1-695-915-11	TAB (CONTACT)			
CN6666 ⚠	1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P			
CN6677	1-695-915-11	TAB (CONTACT)			
CN6688	1-695-915-11	TAB (CONTACT)			
CN6700 ⚠	*1-691-291-11	PIN, CONNECTOR (PC BOARD) 5P			
		< DIODE >			
D6600	8-719-911-19	DIODE 1SS119-25			
D6601	8-719-510-64	DIODE S2LA20F			
D6602	8-719-109-89	DIODE RD5.6ESB2			
D6603	8-719-911-19	DIODE 1SS119-25			
D6604	8-719-510-53	DIODE D4SB60L			
D6610	8-719-510-64	DIODE S2LA20F			
D6613	8-719-911-19	DIODE 1SS119-25			
D6615	8-719-911-19	DIODE 1SS119-25			
D6616	8-719-510-12	DIODE D10SC4M			
D6617	8-719-500-71	DIODE D8LC40			
D6618	8-719-047-31	DIODE RBA-402L			
D6619	8-719-510-12	DIODE D10SC4M			
D6620	8-719-510-09	DIODE D10SC6M			
D6621	8-719-991-33	DIODE 1SS133T-77			
D6622	8-719-991-33	DIODE 1SS133T-77			
D6623	8-719-911-19	DIODE 1SS119-25			
D6624	8-719-991-33	DIODE 1SS133T-77			
D6625	8-719-991-33	DIODE 1SS133T-77			
D6627	8-719-982-27	DIODE MTZJ-33C			
D6628	8-719-109-97	DIODE RD6.8ESB2			
D6629	8-719-991-33	DIODE 1SS133T-77			
D6630	8-719-991-33	DIODE 1SS133T-77			
D6651	8-719-068-00	DIODE ERC04-06SE			
D6652	8-719-923-78	DIODE MTZJ-T-77-12			
D6653	8-719-510-64	DIODE S2LA20F			
D6654	8-719-059-23	DIODE P6KE200AG23			
D6655	8-719-979-64	DIODE UF4005PKG23			
D6656	8-719-510-64	DIODE S2LA20F			
D6658	8-719-068-00	DIODE ERC04-06SE			
D6659	8-719-510-64	DIODE S2LA20F			
D6676	8-719-991-33	DIODE 1SS133T-77			
D6677	8-719-921-40	DIODE MTZJ-4.7C			
D6678	8-719-921-40	DIODE MTZJ-4.7C			
D6679	8-719-991-33	DIODE 1SS133T-77			
D6700	8-719-908-03	DIODE GP08D			
D6701	8-719-110-41	DIODE RD15ESB2			
D6803	8-719-908-03	DIODE GP08D			
D6805	8-719-302-43	DIODE EL1Z			
D6806	8-719-979-85	DIODE EGP20G			
D6807	8-719-510-73	DIODE S3L20UF4			
D6808	8-719-510-73	DIODE S3L20UF4			
D6809	8-719-991-33	DIODE 1SS133T-77			
D6810	8-719-923-86	DIODE MTZJ-T-77-15			
D6811	8-719-923-86	DIODE MTZJ-T-77-15			
D6812	8-719-991-33	DIODE 1SS133T-77			
D6813	8-719-923-86	DIODE MTZJ-T-77-15			
D6851	8-719-970-87	DIODE ERA38-06			
D6852	8-719-970-87	DIODE ERA38-06			
		< FERRITE BEAD >			
FB6600	1-535-303-00	LEAD, JUMPER (5.0MM)			
FB6601	1-535-303-00	LEAD, JUMPER (5.0MM)			
FB6602	1-410-396-41	FERRITE	0.45UH		
FB6603	1-410-396-41	FERRITE	0.45UH		
		< IC >			
IC6600	1-810-051-11	POWER MODULE DM-48			
IC6604	8-729-045-40	TRANSISTOR MX0842A-F			
IC6651	8-759-468-89	IC TOP209P			
IC6652	8-759-604-39	IC M5F78M12L			
IC6653	8-759-544-13	IC KA78R09TU			
IC6654	8-759-457-44	IC KA78R05TU			

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

D

REF. NO.		PART.NO	DESCRIPTION	REMARK
IC6667		8-759-908-15	IC TL431CLP	
IC6676		8-759-908-15	IC TL431CLP	
IC6700		8-759-192-71	IC STV9379	
IC6801		8-759-103-93	IC UPC393C	
			< COIL >	
L6601		1-535-303-00	LEAD, JUMPER (5.0MM)	
L6602		1-412-529-11	INDUCTOR 22UH	
L6603		1-412-529-11	INDUCTOR 22UH	
L6604		1-412-525-31	INDUCTOR 10UH	
L6605		1-412-525-31	INDUCTOR 10UH	
L6606		1-412-525-31	INDUCTOR 10UH	
L6607		1-412-525-31	INDUCTOR 10UH	
L6651		1-414-183-41	INDUCTOR 10UH	
L6700		1-412-524-41	INDUCTOR 8.2UH	
L6801		1-412-519-11	INDUCTOR 3.3UH	
L6802		1-412-519-11	INDUCTOR 3.3UH	
L6803		1-412-519-11	INDUCTOR 3.3UH	
L6805		1-408-947-00	INDUCTOR 2.2MMH	
L6806		1-410-397-21	FERRITE 1.1UH	
L6807		1-410-397-21	FERRITE 1.1UH	
L6808		1-406-675-11	INDUCTOR 0UH	
L6851		1-535-303-00	LEAD, JUMPER (5.0MM)	
			< FILTER >	
LF6603		1-406-656-21	INDUCTOR 0UH	
LF6604		1-406-656-21	INDUCTOR 0UH	
LF6801		1-406-985-11	INDUCTOR 0UH	
LF6851		1-406-674-11	INDUCTOR 0UH	
			< IC LINK >	
PS6601	⚠	1-801-550-21	PROTECTOR MODULE 2.5A MP250	
PS6602	⚠	1-801-550-21	PROTECTOR MODULE 2.5A MP250	
PS6603	⚠	1-801-550-21	PROTECTOR MODULE 2.5A MP250 (KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	⚠	1-801-549-21	PROTECTOR MODULE 4.0A MP400 (KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
PS6604	⚠	1-801-550-21	PROTECTOR MODULE 2.5A MP250	
PS6605	⚠	1-801-550-21	PROTECTOR MODULE 2.5A MP250	
			< TRANSISTOR >	
Q6600		8-729-046-47	TRANSISTOR KSC2500-BTA	
Q6602		8-729-026-41	TRANSISTOR 2SA933AS-QRT	
Q6603		8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q6605		8-729-046-47	TRANSISTOR KSC2500-BTA	
Q6606		8-729-029-56	TRANSISTOR DTA144ESA	
Q6607		8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q6608		8-729-029-66	TRANSISTOR DTC114ESA	
Q6651		8-729-026-41	TRANSISTOR 2SA933AS-QRT	
Q6652		8-729-029-86	TRANSISTOR DTC124ESA	
Q6667		8-729-026-41	TRANSISTOR 2SA933AS-QRT	
Q6676		8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q6677		8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q6678		8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q6679		8-729-026-41	TRANSISTOR 2SA933AS-QRT	
Q6680		8-729-029-66	TRANSISTOR DTC114ESA	
Q6681		8-729-029-66	TRANSISTOR DTC114ESA	
Q6700		8-729-039-68	TRANSISTOR IRF620	
Q6801		8-729-119-80	TRANSISTOR 2SC2688-LK	
Q6802		8-729-119-80	TRANSISTOR 2SC2688-LK	
Q6803		8-729-046-18	TRANSISTOR 2SC5480-01	
Q6804		8-729-046-18	TRANSISTOR 2SC5480-01	
Q6805		8-729-038-83	TRANSISTOR 2SK2251-01-F19	
Q6806		8-729-930-91	TRANSISTOR IRF740	
Q6807		8-729-030-02	TRANSISTOR DTC144ESA	
Q6809		8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q6810		8-729-026-41	TRANSISTOR 2SA933AS-QRT	
Q6851		8-729-043-95	TRANSISTOR 2SC3840(3)	
			< RESISTOR >	
R6601	⚠	1-202-968-11	CEMENTED 1.2 5% 10W	
R6603		1-249-430-11	CARBON 12K 5% 1/4W	
R6604		1-249-421-11	CARBON 2.2K 5% 1/4W	
R6605		1-249-417-11	CARBON 1K 5% 1/4W F	
R6606	⚠	1-202-968-11	CEMENTED 1.2 5% 10W	
R6607	⚠	1-202-968-11	CEMENTED 1.2 5% 10W	
R6608	⚠	1-202-968-11	CEMENTED 1.2 5% 10W	
R6611		1-260-125-11	CARBON 150K 5% 1/2W	
R6612		1-260-125-11	CARBON 150K 5% 1/2W	
R6613		1-216-369-00	METAL OXIDE 1 5% 2W F	
R6614		1-260-125-11	CARBON 150K 5% 1/2W	
R6615		1-260-125-11	CARBON 150K 5% 1/2W	
R6616		1-216-369-00	METAL OXIDE 1 5% 2W F	
R6619		1-249-425-11	CARBON 4.7K 5% 1/4W	
R6620		1-249-443-11	CARBON 0.47 5% 1/4W F	
R6624		1-249-425-11	CARBON 4.7K 5% 1/4W	
R6625		1-249-429-11	CARBON 10K 5% 1/4W	
R6626		1-247-807-31	CARBON 100 5% 1/4W	
R6627		1-249-429-11	CARBON 10K 5% 1/4W	
R6628		1-260-129-11	CARBON 330K 5% 1/2W	
R6629		1-260-129-11	CARBON 330K 5% 1/2W	
R6630		1-249-417-11	CARBON 1K 5% 1/4W	
R6631		1-249-425-11	CARBON 4.7K 5% 1/4W	
R6632		1-207-905-00	WIREWOUND 0.27 10% 2W F	
R6633		1-249-429-11	CARBON 10K 5% 1/4W	
R6635		1-535-303-00	LEAD, JUMPER (5.0MM)	
R6637		1-249-421-11	CARBON 2.2K 5% 1/4W	
R6638		1-247-895-91	CARBON 470K 5% 1/4W	
R6639		1-249-416-11	CARBON 820 5% 1/4W	
R6640		1-249-417-11	CARBON 1K 5% 1/4W	
R6641		1-260-127-11	CARBON 220K 5% 1/2W	

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

D

REF. NO.		PART.NO	DESCRIPTION			REMARK
R6642		1-249-389-11	CARBON	4.7	5%	1/4W F
R6643		1-249-417-11	CARBON	1K	5%	1/4W F
R6644		1-249-429-11	CARBON	10K	5%	1/4W
R6645		1-260-131-11	CARBON	470K	5%	1/2W
R6646		1-249-429-11	CARBON	10K	5%	1/4W
R6647		1-249-410-11	CARBON	270	5%	1/4W
R6648		1-247-863-91	CARBON	22K	5%	1/4W
R6649		1-215-926-00	METAL OXIDE	33K	5%	3W F
R6651		1-247-791-91	CARBON	22	5%	1/4W
R6652		1-249-389-11	CARBON	4.7	5%	1/4W F
R6653		1-249-421-11	CARBON	2.2K	5%	1/4W
R6655		1-249-429-11	CARBON	10K	5%	1/4W
R6656	⚠	1-218-265-11	METAL	8.2M	5%	1W
R6657		1-215-424-00	METAL	1.3K	1%	1/4W
R6666		1-202-933-61	FUSIBLE	0.1	10%	1/2W F
R6667		1-215-441-00	METAL	6.8K	1%	1/4W
R6668		1-249-429-11	CARBON	10K	5%	1/4W
R6669		1-249-413-11	CARBON	470	5%	1/4W
R6670		1-249-417-11	CARBON	1K	5%	1/4W
R6676		1-249-417-11	CARBON	1K	5%	1/4W
R6677		1-249-417-11	CARBON	1K	5%	1/4W
R6678		1-249-417-11	CARBON	1K	5%	1/4W
R6679		1-215-479-00	METAL	270K	1%	1/4W
R6681		1-215-467-00	METAL	82K	1%	1/4W
R6682		1-215-447-00	METAL	12K	1%	1/4W
R6683		1-215-429-00	METAL	2.2K	1%	1/4W
R6684		1-247-807-31	CARBON	100	5%	1/4W
R6685		1-249-417-11	CARBON	1K	5%	1/4W
R6686		1-215-449-00	METAL	15K	1%	1/4W
R6687		1-249-431-11	CARBON	15K	5%	1/4W
R6688		1-249-417-11	CARBON	1K	5%	1/4W
R6700		1-215-441-00	METAL	6.8K	1%	1/4W
R6701		1-215-439-00	METAL	5.6K	1%	1/4W
			(KV-28FX60A/28FX60B/28FX60D/28FX60E/28FX60K/28FX60R/28FX60U)			
		1-215-437-00	METAL	4.7K	1%	1/4W
			(KV-32FX60A/32FX60B/32FX60D/32FX60E/32FX60K/32FX60R/32FX60U)			
R6702		1-215-441-00	METAL	6.8K	1%	1/4W
R6703		1-215-439-00	METAL	5.6K	1%	1/4W
			(KV-28FX60A/28FX60B/28FX60D/28FX60E/28FX60K/28FX60R/28FX60U)			
		1-215-437-00	METAL	4.7K	1%	1/4W
			(KV-32FX60A/32FX60B/32FX60D/32FX60E/32FX60K/32FX60R/32FX60U)			
R6704		1-249-383-11	CARBON	1.5	5%	1/4W F
R6705		1-247-791-91	CARBON	22	5%	1/4W
R6707		1-215-888-00	METAL OXIDE	220	5%	2W F
R6708		1-214-798-21	METAL	1.8	1%	1/2W
R6709		1-214-798-21	METAL	1.8	1%	1/2W
R6710		1-247-843-11	CARBON	3.3K	5%	1/4W
R6801		1-215-440-00	METAL	6.2K	1%	1/4W
R6802		1-214-915-00	METAL	120K	1%	1/2W
R6803		1-249-421-11	CARBON	2.2K	5%	1/4W
R6804		1-247-807-31	CARBON	100	5%	1/4W
R6805		1-247-807-31	CARBON	100	5%	1/4W
R6806		1-249-411-11	CARBON	330	5%	1/4W
R6807		1-249-411-11	CARBON	330	5%	1/4W
R6808		1-260-340-11	CARBON	10K	5%	1/2W
R6809		1-260-340-11	CARBON	10K	5%	1/2W
R6810		1-215-895-11	METAL OXIDE	3.3K	5%	3W F
			(KV-28FX60A/28FX60B/28FX60D/28FX60E/28FX60K/28FX60R/28FX60U)			
		1-216-460-11	METAL OXIDE	3.9K	5%	3W F
			(KV-32FX60A/32FX60B/32FX60D/32FX60E/32FX60K/32FX60R/32FX60U)			
R6811		1-216-461-00	METAL OXIDE	5.6K	5%	2W F
R6812		1-215-895-11	METAL OXIDE	3.3K	5%	2W F
R6813		1-215-895-11	METAL OXIDE	3.3K	5%	2W F
R6814		1-215-880-00	METAL OXIDE	10	5%	2W F
R6815		1-215-880-00	METAL OXIDE	10	5%	2W F
R6816		1-216-361-00	METAL OXIDE	0.22	5%	2W F
R6817		1-216-361-00	METAL OXIDE	0.22	5%	2W F
R6818		1-247-807-31	CARBON	100	5%	1/4W
R6819		1-247-807-31	CARBON	100	5%	1/4W
R6831		1-260-124-11	CARBON	120K	5%	1/2W
R6832		1-216-434-11	METAL OXIDE	1.8K	5%	1W F
R6833		1-202-972-61	FUSIBLE	1	5%	1/4W F
R6834		1-249-377-11	CARBON	0.47	5%	1/4W F
R6835		1-249-377-11	CARBON	0.47	5%	1/4W F
R6836		1-249-431-11	CARBON	15K		
			(KV-28FX60A/28FX60B/28FX60D/28FX60E/28FX60K/28FX60R/28FX60U)			
		1-249-429-11	CARBON	10K	5%	1/4W
			(KV-32FX60A/32FX60B/32FX60D/32FX60E/32FX60K/32FX60R/32FX60U)			
R6837		1-215-894-11	METAL OXIDE	2.2K	5%	2W F
R6838		1-260-119-11	CARBON	47K	5%	1/2W
R6839		1-215-894-11	METAL OXIDE	2.2K	5%	2W F
R6840		1-247-843-11	CARBON	3.3K	5%	1/4W
R6842		1-260-123-11	CARBON	100K	5%	1/2W
R6843		1-249-429-11	CARBON	10K	5%	1/4W
R6844		1-249-441-11	CARBON	100K	5%	1/4W
R6845		1-247-863-91	CARBON	22K	5%	1/4W
R6851		1-260-123-11	CARBON	100K	5%	1/4W
			(KV-28FX60A/28FX60B/28FX60D/28FX60E/28FX60K/28FX60R/28FX60U)			
		1-260-127-11	CARBON	220K	5%	1/2W
			(KV-32FX60A/32FX60B/32FX60D/32FX60E/32FX60K/32FX60R/32FX60U)			
R6852		1-260-123-11	CARBON	100K	5%	1/4W
			(KV-28FX60A/28FX60B/28FX60D/28FX60E/28FX60K/28FX60R/28FX60U)			
		1-260-127-11	CARBON	220K	5%	1/2W
			(KV-32FX60A/32FX60B/32FX60D/32FX60E/32FX60K/32FX60R/32FX60U)			

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

D E

REF. NO.	PART.NO	DESCRIPTION	REMARK
R6853	1-260-123-11	CARBON 100K 5% 1/4W	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	1-260-127-11	CARBON 220K 5% 1/2W	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
R6854	1-247-831-91	CARBON 1K 5% 1/4W	
R6856	1-216-486-00	METAL OXIDE 8.2K 5% 3W F	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	1-215-922-11	METAL OXIDE 6.8K 5% 3W F	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
R6857	1-216-486-00	METAL OXIDE 8.2K 5% 3W F	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	1-215-922-11	METAL OXIDE 6.8K 5% 3W F	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
R6858	1-216-486-00	METAL OXIDE 8.2K 5% 3W F	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	1-215-922-11	METAL OXIDE 6.8K 5% 3W F	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
R6859	1-216-486-00	METAL OXIDE 8.2K 5% 3W F	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	1-215-922-11	METAL OXIDE 6.8K 5% 3W F	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
R6880	1-215-436-00	METAL 4.3K 1% 1/4W	
R6885	1-215-493-00	METAL 1M 1% 1/4W	
R6886	1-215-477-00	METAL 220K 1% 1/4W	
R6887	1-215-461-00	METAL 47K 1% 1/4W	
R6888	1-249-441-11	CARBON 100K 5% 1/4W	
R6889	1-249-421-11	CARBON 2.2K 5% 1/4W	
R6890	1-247-887-00	CARBON 220K 5% 1/4W	
R6891	1-247-895-91	CARBON 470K 5% 1/4W	
R6892	1-249-437-11	CARBON 47K 5% 1/4W	
R6893	1-249-429-11	CARBON 10K 5% 1/4W	
R6895	1-249-443-11	CARBON 0.47 5% 1/4W F	
R6896	1-249-443-11	CARBON 0.47 5% 1/4W F	
		< RELAY >	
RY6601	⚠ 1-755-167-11	RELAY, AC POWER	
RY6602	⚠ 1-755-167-11	RELAY, AC POWER	
		< TRANSFORMER >	
T6600	⚠ 1-431-616-11	TRANSFORMER, CONVERTER	
T6601	⚠ 1-433-516-11	TRANSFORMER, CONVERTER	
T6651	1-431-732-11	TRANSFORMER, CONVERTER (SRT)	
T6801	1-433-489-11	TRANSFORMER, FERRITE (HDT)	
T6802	1-433-489-11	TRANSFORMER, FERRITE (HDT)	
T6804	⚠ 1-453-272-11	TRANFORMER, ASSY, FLYBACK (NX-4512/U2B4)	
T6805	1-429-741-11	TRANSFORMER, DRIVE	
T6852	1-426-896-11	TRANSFORMER, FERRITE (DFT)	
		< THERMISTOR >	
TH6600	⚠ 1-809-827-11	THERMISTOR, POSITIVE	
TH6700	1-800-193-00	THERMISTOR	
		**********	
	*A-1640-341-A	E BOARD, COMPLETE (KV-28FX60) **********	
	*A-1640-337-A	E BOARD, COMPLETE (KV-32FX60) **********	
		< CAPACITOR >	
C4316	1-104-664-11	ELECT 47MF 20% 25V	
C4317	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4318	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4319	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4320	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4321	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4322	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4324	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4325	1-163-093-00	CERAMIC CHIP 10PF 5% 50V	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	
C4329	1-126-963-11	ELECT 4.7MF 20% 50V	
C4330	1-136-165-00	FILM 0.1MF 5% 50V	
C4331	1-126-959-11	ELECT 0.47MF 20% 50V	
C4332	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4333	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4334	1-126-967-11	ELECT 47MF 20% 50V	
C4336	1-126-967-11	ELECT 47MF 20% 50V	
C4338	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4340	1-126-967-11	ELECT 47MF 20% 50V	
C4342	1-163-021-91	CERAMIC CHIP 0.01MF 10% 50V	
C4343	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4344	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V	
C4345	1-126-967-11	ELECT 47MF 20% 50V	
C4346	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4347	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4348	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4349	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4350	1-164-004-11	ELECT 0.1MF 20% 50V	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/28FX60U)	
	1-126-963-11	ELECT 4.7MF 20% 50V	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/ 32FX60K/32FX60R/32FX60U)	

E

REF. NO.	PART.NO	DESCRIPTION	REMARK
C4351	1-164-009-11	CERAMIC CHIP 0.001MF 10% 50V	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
	1-164-161-11	CERAMIC CHIP 0.0022MF 10% 50V	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/	
		32FX60K/32FX60R/32FX60U)	
C4352	1-126-967-11	ELECT 47MF 20% 50V	
C4353	1-107-823-11	CERAMIC CHIP 0.47MF 10% 16V	
C4354	1-107-823-11	CERAMIC CHIP 0.47MF 10% 16V	
C4355	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4356	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4357	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
	1-163-009-11	CERAMIC CHIP 0.001MF 10% 25V	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/	
		32FX60K/32FX60R/32FX60U)	
C4358	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4359	1-164-161-11	CERAMIC CHIP 0.0022MF 10% 50V	
C4360	1-126-963-11	ELECT 4.7MF 20% 50V	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
	1-126-966-11	ELECT 33MF 20% 50V	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/	
		32FX60K/32FX60R/32FX60U)	
C4361	1-126-967-11	ELECT 47MF 20% 50V	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
C4362	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4363	1-126-967-11	ELECT 47MF 20% 50V	
C4364	1-126-967-11	ELECT 47MF 20% 50V	
C4366	1-163-021-91	CERAMIC CHIP 0.01MF 10% 50V	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/	
		32FX60K/32FX60R/32FX60U)	
C4367	1-104-760-11	CERAMIC CHIP 0.047MF 10% 50V	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/	
		32FX60K/32FX60R/32FX60U)	
C4369	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4370	1-126-967-11	ELECT 47MF 20% 50V	
C4371	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C4377	1-126-960-11	ELECT 1MF 20% 50V	
C4379	1-163-243-11	CERAMIC CHIP 47PF 5% 50V	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/	
		32FX60K/32FX60R/32FX60U)	
C4380	1-163-005-11	CERAMIC CHIP 470PF 10% 50V	
C4381	1-163-249-11	CERAMIC CHIP 82PF 5% 50V	
C4518	1-162-638-11	CERAMIC CHIP 1MF 16V	
		< CONNECTOR >	
CN4101	1-695-301-11	CONNECTOR, BOARD TO BOARD 40P	
CN4500	1-564-511-11	PLUG, CONNECTOR 8P	
CN4502	*1-568-878-51	PIN, CONNECTOR 3P	

REF. NO.	PART.NO	DESCRIPTION	REMARK
		< DIODE >	
D4302	8-719-025-29	DIODE 02CZ5.1-TE85L	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
D4303	8-719-041-97	DIODE MA113-(TX)	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
D4304	8-719-923-60	DIODE MTZJ-T-77-9.1A	
D4305	8-719-923-60	DIODE MTZJ-T-77-9.1A	
D4311	8-719-914-43	DIODE DAN202K	
D4312	8-719-914-43	DIODE DAN202K	
D4313	8-719-401-63	DIODE MA3062M-TX	
		< FERRITE BEAD >	
FB4387	1-414-234-22	INDUCTOR CHIP 0UH	
FB4388	1-414-234-22	INDUCTOR CHIP 0UH	
FB4389	1-414-234-22	INDUCTOR CHIP 0UH	
		< IC >	
IC4301	8-752-086-23	IC CXA2100Q-TL	
		< COIL >	
L4301	1-414-183-41	INDUCTOR 10UH	
L4302	1-414-183-41	INDUCTOR 10UH	
L4303	1-414-183-41	INDUCTOR 10UH	
L4304	1-414-183-41	INDUCTOR 10UH	
L4305	1-414-183-41	INDUCTOR 10UH	
L4306	1-414-183-41	INDUCTOR 10UH	
L4307	1-414-183-41	INDUCTOR 10UH	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
L4308	1-408-609-41	INDUCTOR 33UH	
L4309	1-408-609-41	INDUCTOR 33UH	
		< TRANSISTOR >	
Q4304	8-729-216-22	TRANSISTOR 2SA1162-G	
Q4305	8-729-620-06	TRANSISTOR 2SA2412K-T-146-R	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
Q4306	8-729-620-06	TRANSISTOR 2SA2412K-T-146-R	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
Q4307	8-729-216-22	TRANSISTOR 2SA1162-G	
Q4308	8-729-216-22	TRANSISTOR 2SA1162-G	
Q4309	8-729-216-22	TRANSISTOR 2SA1162-G	
Q4310	8-729-216-22	TRANSISTOR 2SA1162-G	
Q4315	1-801-806-11	TRANSISTOR DTC144EKA-T146	

REF. NO.	PART.NO	DESCRIPTION	REMARK
Q4316	8-729-620-06	TRANSISTOR 2SC2412K-T-146-R	
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
	8-719-918-98	TRANSISTOR SLP253B	
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/	
		32FX60K/32FX60R/32FX60U)	
Q4317	8-729-900-53	TRANSISTOR DTC114EK	
Q4318	8-729-216-22	TRANSISTOR 2SA1162-G	
		< RESISTOR >	
R4301	1-216-025-91	RES,CHIP 100 5%	1/10W
R4302	1-216-025-91	RES,CHIP 100 5%	1/10W
R4303	1-216-025-91	RES,CHIP 100 5%	1/10W
R4304	1-216-025-91	RES,CHIP 100 5%	1/10W
R4305	1-216-025-91	RES,CHIP 100 5%	1/10W
R4306	1-216-025-91	RES,CHIP 100 5%	1/10W
R4313	1-216-065-91	RES,CHIP 4.7K 5%	1/10W
R4314	1-216-057-00	RES,CHIP 2.2K 5%	1/10W
R4331	1-216-073-00	RES,CHIP 10K 5%	1/10W
R4332	1-216-073-00	RES,CHIP 10K 5%	1/10W
R4333	1-216-073-00	RES,CHIP 10K 5%	1/10W
R4334	1-216-025-91	RES,CHIP 100 5%	1/10W
R4335	1-216-025-91	RES,CHIP 100 5%	1/10W
R4336	1-216-025-91	RES,CHIP 100 5%	1/10W
R4337	1-216-025-91	RES,CHIP 100 5%	1/10W
R4339	1-216-049-91	RES,CHIP 1K 5%	1/10W
R4340	1-216-111-00	RES,CHIP 390K 5%	1/10W
R4341	1-216-295-91	SHORT 0	
R4343	1-216-025-91	RES,CHIP 100 5%	1/10W
R4344	1-216-025-91	RES,CHIP 100 5%	1/10W
R4345	1-216-677-11	METAL CHIP 12K 0.50%	1/10W
R4346	1-216-683-11	METAL CHIP 22K 0.50%	1/10W
R4347	1-216-025-91	RES,CHIP 100 5%	1/10W
R4348	1-216-025-91	RES,CHIP 100 5%	1/10W
R4350	1-216-025-91	RES,CHIP 100 5%	1/10W
R4354	1-216-675-11	METAL CHIP 10K 0.50%	1/10W
R4358	1-216-071-00	RES,CHIP 8.2K 5%	1/10W
R4359	1-216-041-00	RES,CHIP 470 5%	1/10W
R4360	1-216-057-00	RES,CHIP 2.2K 5%	1/10W
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
	1-216-061-00	RES,CHIP 3.3K 5%	1/10W
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/	
		32FX60K/32FX60R/32FX60U)	
R4361	1-216-133-00	RES,CHIP 3.3M 5%	1/10W
R4362	1-216-049-91	RES,CHIP 1K 5%	1/10W
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
R4363	1-216-025-91	RES,CHIP 100 5%	1/10W
R4364	1-216-097-91	RES,CHIP 100K 5%	1/10W
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	

REF. NO.	PART.NO	DESCRIPTION	REMARK
R4365	1-216-025-91	RES,CHIP 100 5%	1/10W
R4366	1-216-025-91	RES,CHIP 100 5%	1/10W
R4367	1-216-025-91	RES,CHIP 100 5%	1/10W
R4368	1-215-097-91	RES,CHIP 100K 5%	1/10W
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
R4369	1-216-073-00	RES,CHIP 10K 5%	1/10W
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
R4370	1-216-077-00	RES,CHIP 15K 5%	1/10W
R4371	1-216-069-00	RES,CHIP 6.8K 5%	1/10W
R4372	1-216-049-91	RES,CHIP 1K 5%	1/10W
R4373	1-216-073-00	RES,CHIP 10K 5%	1/10W
R4374	1-216-049-91	RES,CHIP 1K 5%	1/10W
R4375	1-216-049-91	RES,CHIP 1K 5%	1/10W
R4376	1-216-049-91	RES,CHIP 1K 5%	1/10W
R4377	1-216-049-91	RES,CHIP 1K 5%	1/10W
R4378	1-216-101-00	RES,CHIP 150K 5%	1/10W
R4380	1-216-073-00	RES,CHIP 10K 5%	1/10W
R4381	1-216-127-11	RES,CHIP 1.8M 5%	1/10W
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/	
		32FX60K/32FX60R/32FX60U)	
R4382	1-216-073-00	RES,CHIP 10K 5%	1/10W
R4383	1-216-079-00	RES,CHIP 18K 5%	1/10W
		(KV-32FX60A/32FX60B/32FX60D/32FX60E/	
		32FX60K/32FX60R/32FX60U)	
R4384	1-216-025-91	RES,CHIP 100 5%	1/10W
R4387	1-216-025-91	RES,CHIP 100 5%	1/10W
R4388	1-216-025-91	RES,CHIP 100 5%	1/10W
R4389	1-216-025-91	RES,CHIP 100 5%	1/10W
R4395	1-216-295-91	SHORT 0	
R4396	1-216-295-91	SHORT 0	
R4398	1-216-025-91	RES,CHIP 100 5%	1/10W
R4401	1-216-105-91	RES,CHIP 220K 5%	1/10W
R4402	1-216-129-00	RES,CHIP 2.2K 5%	1/10W
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
R4403	1-216-073-00	RES,CHIP 10K 5%	1/10W
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
R4404	1-216-073-00	RES,CHIP 10K 5%	1/10W
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
R4405	1-216-087-91	RES,CHIP 39K 5%	1/10W
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
R4406	1-216-105-91	RES,CHIP 220K 5%	1/10W
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
R4407	1-216-091-00	RES,CHIP 56K 5%	1/10W
		(KV-28FX60A/28FX60B/28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U)	
R4504	1-216-295-91	SHORT 0	

E **VM**

REF. NO.	PART.NO	DESCRIPTION			REMARK
R4505	1-216-295-91	SHORT	0		
R4506	1-216-295-91	SHORT	0		
R4507	1-216-121-91	RES,CHIP	1M	5%	1/10W
R4518	1-216-025-91	RES,CHIP	100	5%	1/10W
R4519	1-216-025-91	RES,CHIP	100	5%	1/10W
R4520	1-216-295-91	SHORT	0		
R4521	1-216-295-91	SHORT	0		
R4522	1-216-295-91	SHORT	0		
R4523	1-216-295-91	SHORT	0		
		< CRYSTAL >			
X4300	1-767-127-11	VIBRATOR, CERAMIC			
**********					
	*A-1644-094-A	VM BOARD, COMPLETE			
		**********			
	4-382-854-11	SCREW (M3X10), P, SW (+)			
		< CAPACITOR >			
C5400	1-107-883-11	ELECT	330MF	20%	16V
C5401	1-126-935-11	ELECT	470MF	20%	16V
C5402	1-137-370-11	FILM	0.01MF	5%	50V
C5403	1-126-935-11	ELECT	470MF	20%	6.3V
C5405	1-126-933-11	ELECT	100MF	20%	16V
C5406	1-126-935-11	ELECT	470MF	20%	6.3V
C5407	1-104-989-91	FILM	0.0022MF	5%	200V
C5408	1-104-989-91	FILM	0.0022MF	5%	200V
C5409	1-107-649-11	ELECT	2.2MF	20%	250V
C5410	1-137-364-11	FILM	0.001MF	5%	50V
C5411	1-137-364-11	FILM	0.001MF	5%	50V
C5412	1-126-933-11	ELECT	100MF	20%	16V
C5413	1-126-933-11	ELECT	100MF	20%	16V
C5414	1-107-638-11	ELECT	33MF	20%	160V
C5415	1-107-363-91	FILM	0.0068MF	10%	200V
C5416	1-102-106-00	CERAMIC	100PF	10%	50V
C5419	1-101-880-00	CERAMIC	47PF	5%	50V
C5430	1-162-117-00	CERAMIC	100PF	10%	500V
		< CONNECTOR >			
CN5402	*1-568-878-51	PIN, CONNECTOR 3P			
CN5444	*1-770-723-11	CONNECTOR, BOARD TO BOARD 8P			
CN5555	1-695-915-11	TAB (CONTACT)			
CN5602	*1-568-881-51	PIN, CONNECTOR 6P			
		< DIODE >			
D5400	8-719-991-33	DIODE 1SS133T-77			
D5401	8-719-510-02	DIODE D1NS4			
D5402	8-719-991-33	DIODE 1SS133T-77			
D5403	8-719-991-33	DIODE 1SS133T-77			
D5404	8-719-991-33	DIODE 1SS133T-77			
D5405	8-719-924-11	DIODE MTZJ-T-77-22			
D5406	8-719-924-11	DIODE MTZJ-T-77-22			
		< FERRITE BEAD >			
FB5400	1-410-397-21	FERRITE	1.1UH		
FB5401	1-410-396-41	FERRITE	0.45UH		
		< COIL >			
L5400	1-410-784-41	INDUCTOR	0.18UH		
		< TRANSISTOR >			
Q5400	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q5401	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q5402	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q5403	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q5404	8-729-026-41	TRANSISTOR 2SA933AS-QRT			
Q5405	8-729-026-41	TRANSISTOR 2SA933AS-QRT			
Q5406	8-729-017-05	TRANSISTOR 2SA1837			
Q5407	8-729-017-06	TRANSISTOR 2SC4793			
		< RESISTOR >			
R5400	1-249-401-11	CARBON	47	5%	1/4W
R5401	1-249-421-11	CARBON	2.2K	5%	1/4W
R5402	1-249-413-11	CARBON	470	5%	1/4W
R5403	1-249-393-11	CARBON	10	5%	1/4W F
R5404	1-249-417-11	CARBON	1K	5%	1/4W
R5405	1-249-425-11	CARBON	4.7K	5%	1/4W
R5406	1-249-425-11	CARBON	4.7K	5%	1/4W
R5407	1-249-399-11	CARBON	33	5%	1/4W
R5408	1-247-807-31	CARBON	100	5%	1/4W
R5409	1-247-815-91	CARBON	220	5%	1/4W
R5410	1-249-401-11	CARBON	47	5%	1/4W
R5411	1-249-401-11	CARBON	47	5%	1/4W
R5412	1-249-429-11	CARBON	10K	5%	1/4W
R5413	1-249-414-11	CARBON	560	5%	1/4W F
R5414	1-249-432-11	CARBON	18K	5%	1/4W
R5415	1-260-311-11	CARBON	39	5%	1/2W
R5416	1-249-383-11	CARBON	1.5	5%	1/4W F
R5417	1-249-432-11	CARBON	18K	5%	1/4W
R5418	1-249-414-11	CARBON	560	5%	1/4W
R5419	1-249-421-11	CARBON	2.2K	5%	1/4W
R5420	1-249-421-11	CARBON	2.2K	5%	1/4W
R5421	1-249-383-11	CARBON	1.5	5%	1/4W F
R5422	1-249-400-11	CARBON	39	5%	1/4W F
R5423	1-215-914-11	METAL OXIDE	330	5%	3W F
R5425	1-249-419-11	CARBON	1.5K	5%	1/4W

REF. NO.	PART.NO	DESCRIPTION	REMARK
	*A-1646-170-A	H1 BOARD, COMPLETE	
		**********	
		< CAPACITOR >	
C7900	1-101-810-00	CERAMIC 100PF 5%	500V
C7901	1-101-810-00	CERAMIC 100PF 5%	500V
C7925	1-137-372-11	FILM 0.022MF 5%	50V
C7926	1-137-372-11	FILM 0.022MF 5%	50V
		< CONNECTOR >	
CN7103	*1-564-514-11	PLUG, CONNECTOR 11P	
		< JACK >	
J7900	1-779-947-11	TERMINAL BLOCK, S	
J7925	1-764-606-11	JACK	
		< COIL >	
L7925	1-414-183-41	INDUCTOR 10UH	
L7926	1-414-183-41	INDUCTOR 10UH	
		< RESISTOR >	
R7900	1-535-303-00	LEAD, JUMPER (5.0MM)	
R7901	1-249-417-11	CARBON 1K 5%	1/4W
R7902	1-247-895-91	CARBON 470K 5%	1/4W
R7903	1-247-895-91	CARBON 470K 5%	1/4W
R7904	1-535-303-00	LEAD, JUMPER (5.0MM)	
R7905	1-249-417-11	CARBON 1K 5%	1/4W
R7906	1-535-303-00	LEAD, JUMPER (5.0MM)	
**********			
	*A-1648-016-A	U BOARD, COMPLETE	
		**********	
		< CAPACITOR >	
C7961	1-101-005-00	CERAMIC 0.022MF	50V
C7962	1-101-005-00	CERAMIC 0.022MF	50V
		< CONNECTOR >	
CN7101	1-573-299-21	CONNECTOR, BOARD TO BOARD 10P	
CN7977	*1-564-519-11	PLUG, CONNECTOR 4P	
CN7988	*1-564-519-11	PLUG, CONNECTOR 4P	
CN7990	*1-564-518-11	PLUG, CONNECTOR 3P	
		< JACK >	
J7952	1-537-339-11	TERMINAL BOARD	
		< COIL >	
L7954	1-402-711-11	INDUCTOR 0UH	
L7956	1-402-711-11	INDUCTOR 0UH	

REF. NO.	PART.NO	DESCRIPTION	REMARK
	*A-1651-100-A	J BOARD, COMPLETE (KV-28FX60A/28FX60B/	
		********** 28FX60D/28FX60E/	
		28FX60K/28FX60R/28FX60U/	
		32FX60A/32FX60D/32FX60E/	
		32FX60K/32FX60R/32FX60U)	
	*A-1651-104-A	J BOARD, COMPLETE (KV-32FX60B)	
		**********	
		< CAPACITOR >	
C8100	1-107-823-11	CERAMIC CHIP 0.47MF 10%	16V
C8101	1-107-823-11	CERAMIC CHIP 0.47MF 10%	16V
C8102	1-104-760-11	CERAMIC CHIP 0.047MF 10%	50V
C8103	1-104-664-11	ELECT 47MF 20%	16V
C8104	1-126-934-11	ELECT 220MF 20%	16V
C8105	1-126-933-11	ELECT 100MF 20%	16V
C8106	1-126-933-11	ELECT 100MF 20%	16V
C8107	1-126-933-11	ELECT 100MF 20%	16V
C8108	1-126-933-11	ELECT 100MF 20%	16V
C8109	1-164-004-11	CERAMIC CHIP 0.1MF 10%	25V
C8110	1-164-004-11	CERAMIC CHIP 0.1MF 10%	25V
C8111	1-126-933-11	ELECT 100MF 20%	16V
C8125	1-107-823-11	CERAMIC CHIP 0.47MF 10%	16V
C8126	1-107-823-11	CERAMIC CHIP 0.47MF 10%	16V
C8127	1-164-004-11	CERAMIC CHIP 0.1MF 10%	25V
C8128	1-104-664-11	ELECT 47MF 20%	16V
C8129	1-107-823-11	CERAMIC CHIP 0.47MF 10%	16V
C8130	1-107-823-11	CERAMIC CHIP 0.47MF 10%	16V
C8131	1-107-823-11	CERAMIC CHIP 0.47MF 10%	16V
C8132	1-107-823-11	CERAMIC CHIP 0.47MF 10%	16V
C8133	1-104-664-11	ELECT 47MF 20%	16V
C8134	1-104-664-11	ELECT 47MF 20%	16V
C8135	1-164-505-11	CERAMIC CHIP 2.2MF	16V
C8136	1-163-251-11	CERAMIC CHIP 100PF 5%	50V
C8137	1-164-505-11	CERAMIC CHIP 2.2MF	16V
C8138	1-107-823-11	CERAMIC CHIP 0.47MF 10%	16V
C8139	1-107-823-11	CERAMIC CHIP 0.47MF 10%	16V
C8140	1-107-823-11	CERAMIC CHIP 0.47MF 10%	16V
C8141	1-107-823-11	CERAMIC CHIP 0.47MF 10%	16V
C8142	1-107-823-11	CERAMIC CHIP 0.47MF 10%	16V
C8143	1-107-823-11	CERAMIC CHIP 0.47MF 10%	16V
C8144	1-107-823-11	CERAMIC CHIP 0.47MF 10%	16V
C8145	1-107-823-11	CERAMIC CHIP 0.47MF 10%	16V
C8146	1-163-251-11	CERAMIC CHIP 100PF 5%	50V
C8200	1-104-664-11	ELECT 47MF 20%	16V
C8201	1-163-241-11	CERAMIC CHIP 39PF 5%	50V
C8202	1-164-004-11	CERAMIC CHIP 0.1MF 10%	25V
C8203	1-164-004-11	CERAMIC CHIP 0.1MF 10%	25V
C8204	1-164-506-11	CERAMIC CHIP 4.7MF	16V
C8205	1-165-319-11	CERAMIC CHIP 0.1MF	50V
C8208	1-164-506-11	CERAMIC CHIP 4.7MF	16V
C8209	1-163-251-11	CERAMIC CHIP 100PF 5%	50V
C8210	1-164-004-11	CERAMIC CHIP 0.1MF 10%	25V

J

REF. NO.	PART.NO	DESCRIPTION	REMARK
C8211	1-163-243-11	CERAMIC CHIP 47PF 5% 50V	
C8212	1-163-243-11	CERAMIC CHIP 47PF 5% 50V	
C8213	1-163-087-00	CERAMIC CHIP 4PF 0.25PF 50V	
C8214	1-163-087-00	CERAMIC CHIP 4PF 0.25PF 50V	
C8215	1-163-243-11	CERAMIC CHIP 47PF 5% 50V	
C8216	1-126-933-11	ELECT 100MF 20% 16V	
C8217	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8218	1-126-964-11	ELECT 10MF 20% 50V	
C8219	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8220	1-126-964-11	ELECT 10MF 20% 50V	
C8221	1-104-664-11	ELECT 47MF 20% 16V	
C8222	1-104-664-11	ELECT 47MF 20% 16V	
C8223	1-104-664-11	ELECT 47MF 20% 16V	
C8224	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8225	1-104-664-11	ELECT 47MF 20% 16V	
C8228	1-163-009-11	CERAMIC CHIP 0.001MF 10% 50V	
C8229	1-163-009-11	CERAMIC CHIP 0.001MF 10% 50V	
C8230	1-163-009-11	CERAMIC CHIP 0.001MF 10% 50V	
C8231	1-163-009-11	CERAMIC CHIP 0.001MF 10% 50V	
C8232	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8233	1-104-664-11	ELECT 47MF 20% 16V	
C8234	1-107-823-11	CERAMIC CHIP 0.47MF 10% 16V	
C8235	1-107-823-11	CERAMIC CHIP 0.47MF 10% 16V	
C8236	1-126-933-11	ELECT 100MF 20% 16V	
C8237	1-163-021-91	CERAMIC CHIP 0.01MF 10% 50V	
C8238	1-164-505-11	CERAMIC CHIP 2.2MF 16V	
C8239	1-107-823-11	CERAMIC CHIP 0.47MF 10% 16V	
C8240	1-107-823-11	CERAMIC CHIP 0.47MF 10% 16V	
C8241	1-126-964-11	ELECT 10MF 20% 50V	
C8242	1-104-664-11	ELECT 47MF 20% 16V	
C8300	1-115-340-11	CERAMIC CHIP 0.22MF 10% 25V	
C8301	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8302	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8303	1-115-340-11	CERAMIC CHIP 0.22MF 10% 25V	
C8304	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8305	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8306	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8307	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8308	1-126-933-11	ELECT 100MF 20% 16V	
C8310	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8311	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8312	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8313	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8314	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8315	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8316	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8317	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8318	1-126-933-11	ELECT 100MF 20% 16V	
C8319	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8320	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8321	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8322	1-126-933-11	ELECT 100MF 20% 16V	
C8323	1-164-182-11	CERAMIC CHIP 0.0033MF 10% 50V	
C8324	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8325	1-115-340-11	CERAMIC CHIP 0.22MF 10% 25V	
C8326	1-163-231-11	CERAMIC CHIP 15PF 5% 50V	
C8327	1-115-340-11	CERAMIC CHIP 0.22MF 10% 25V	
C8328	1-115-340-11	CERAMIC CHIP 0.22MF 10% 25V	
C8329	1-115-340-11	CERAMIC CHIP 0.22MF 10% 25V	
C8330	1-163-231-11	CERAMIC CHIP 15PF 5% 50V	
C8331	1-126-960-11	ELECT 1MF 20% 50V	
C8332	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V	
C8343	1-163-185-00	CERAMIC CHIP 150PF 5% 50V	(KV-32FX60B)
C8344	1-163-173-00	CERAMIC CHIP 47PF 5% 50V	(KV-32FX60B)
C8345	1-126-933-11	ELECT 100MF 20% 16V	(KV-32FX60B)
C8450	1-104-664-11	ELECT 47MF 20% 16V	
C8451	1-104-664-11	ELECT 47MF 20% 16V	
C8455	1-115-340-11	CERAMIC CHIP 0.22MF 10% 25V	
C8456	1-115-340-11	CERAMIC CHIP 0.22MF 10% 25V	
C8601	1-115-340-11	CERAMIC CHIP 0.22MF 10% 25V	
C8602	1-115-340-11	CERAMIC CHIP 0.22MF 10% 25V	
C8605	1-115-340-11	CERAMIC CHIP 0.22MF 10% 25V	
C8606	1-115-340-11	CERAMIC CHIP 0.22MF 10% 25V	
C8607	1-104-664-11	ELECT 47MF 20% 16V	
C8608	1-104-664-11	ELECT 47MF 20% 16V	
C8609	1-115-340-11	CERAMIC CHIP 0.22MF 10% 25V	
C8610	1-115-340-11	CERAMIC CHIP 0.22MF 10% 25V	
C8611	1-115-340-11	CERAMIC CHIP 0.22MF 10% 25V	
C8612	1-115-340-11	CERAMIC CHIP 0.22MF 10% 25V	
C8613	1-104-664-11	ELECT 47MF 20% 16V	
C8614	1-104-664-11	ELECT 47MF 20% 16V	
C8700	1-126-964-11	ELECT 10MF 20% 50V	
C8701	1-104-664-11	ELECT 47MF 20% 16V	
C8702	1-163-133-00	CERAMIC CHIP 470PF 5% 50V	
C8703	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8704	1-163-021-91	CERAMIC CHIP 0.01MF 10% 50V	
C8705	1-163-021-91	CERAMIC CHIP 0.01MF 10% 50V	
C8706	1-163-235-11	CERAMIC CHIP 22PF 5% 50V	
C8707	1-163-235-11	CERAMIC CHIP 22PF 5% 50V	
C8708	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C8709	1-126-964-11	ELECT 10MF 20% 50V	
C8710	1-126-933-11	ELECT 100MF 20% 16V	
C8900	1-163-251-11	CERAMIC CHIP 100PF 5% 50V	
C8901	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V	
C8902	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V	
C8903	1-163-251-11	CERAMIC CHIP 100PF 5% 50V	
C8904	1-163-251-11	CERAMIC CHIP 100PF 5% 50V	
C8905	1-163-251-11	CERAMIC CHIP 100PF 5% 50V	
C8906	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V	

REF. NO.	PART.NO	DESCRIPTION	REMARK
C8907	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V	
C8908	1-163-251-11	CERAMIC CHIP 100PF 5% 50V	
C8909	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V	
C8910	1-163-251-11	CERAMIC CHIP 100PF 5% 50V	
C8911	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V	
C8916	1-126-933-11	ELECT 100MF 20% 16V	
C8977	1-163-009-11	CERAMIC CHIP 0.001MF 10% 50V	
C8978	1-163-009-11	CERAMIC CHIP 0.001MF 10% 50V	
		< FILTER >	
CF8200	1-409-327-00	TRAP, CERAMIC (6.5MHZ)	
		< CONNECTOR >	
CN8101	1-695-302-11	CONNECTOR, BOARD TO BOARD 50P	
CN8102	*1-564-518-11	PLUG, CONNECTOR 3P	
CN8900	1-561-534-41	SOCKET, PIN 21P	
CN8901	1-695-293-11	SOCKET 21P	
CN8902	1-695-293-11	SOCKET 21P	
		< DIODE >	
D8125	8-719-158-49	DIODE RD12SB2	
D8126	8-719-158-49	DIODE RD12SB2	
D8127	8-719-158-49	DIODE RD12SB2	
D8128	8-719-158-49	DIODE RD12SB2	
D8129	8-719-158-49	DIODE RD12SB2	
D8130	8-719-158-49	DIODE RD12SB2	
D8131	8-719-158-49	DIODE RD12SB2	
D8132	8-719-158-49	DIODE RD12SB2	
D8200	8-719-158-49	DIODE RD12SB2	
D8201	8-719-158-49	DIODE RD12SB2	
D8202	8-719-158-49	DIODE RD12SB2	
D8203	8-719-158-49	DIODE RD12SB2	
D8349	8-719-914-42	DIODE DA204K	
D8450	8-719-158-49	DIODE RD12SB2	
D8451	8-719-158-49	DIODE RD12SB2	
D8900	8-719-056-85	DIODE UDZ-TE-17-8.2B	
D8901	8-719-056-85	DIODE UDZ-TE-17-8.2B	
D8902	8-719-056-85	DIODE UDZ-TE-17-8.2B	
D8903	8-719-056-85	DIODE UDZ-TE-17-8.2B	
D8904	8-719-056-85	DIODE UDZ-TE-17-8.2B	
D8905	8-719-056-85	DIODE UDZ-TE-17-8.2B	
D8906	8-719-056-85	DIODE UDZ-TE-17-8.2B	
D8907	8-719-056-85	DIODE UDZ-TE-17-8.2B	
D8908	8-719-056-85	DIODE UDZ-TE-17-8.2B	
D8909	8-719-056-85	DIODE UDZ-TE-17-8.2B	
D8910	8-719-056-85	DIODE UDZ-TE-17-8.2B	
D8911	8-719-056-85	DIODE UDZ-TE-17-8.2B	
D8912	8-719-158-49	DIODE RD12SB2	
D8913	8-719-158-49	DIODE RD12SB2	
D8914	8-719-158-49	DIODE RD12SB2	
D8915	8-719-158-49	DIODE RD12SB2	
D8919	8-719-914-43	DIODE DAN202K-T-146	
D8920	8-719-914-43	DIODE DAN202K-T-146	
D8921	8-719-976-99	DIODE UDZ-TE-17-5.1B	
D8922	8-719-056-84	DIODE UDZ-TE-17-7.5B	
D8923	8-719-978-04	DIODE DTZ-TT11-3.3B	
		< FILTER >	
FL8200	1-236-071-11	ENCAPSULATED COMPONENT	
FL8201	1-233-764-21	FILTER	
FL8203	1-236-071-11	ENCAPSULATED COMPONENT	
FL8300	1-236-071-11	ENCAPSULATED COMPONENT	
FL8301	1-236-071-11	ENCAPSULATED COMPONENT	
FL8700	1-236-071-11	ENCAPSULATED COMPONENT	
FL8701	1-236-071-11	ENCAPSULATED COMPONENT	
		< IC >	
IC8100	8-759-352-94	IC TDA7309D013TR	
IC8101	8-759-085-34	IC TDA2822D	
IC8125	8-759-351-01	IC TEA6422DT	
IC8151	8-752-072-94	IC CXA1875AM-T4	
IC8200	8-759-544-10	IC MSP3410D-QA-B4	
IC8201	8-759-701-36	IC NJM3403AM	
IC8202	8-759-908-15	IC TL431CLP	
IC8300	8-759-546-01	IC TDA9320H-N1-518	
IC8451	8-759-385-76	IC MC14052BDR2	
IC8601	8-759-544-24	IC LF90CDT	
IC8602	8-759-544-23	IC LF80CDT	
IC8603	8-759-544-22	IC LF50CDT	
IC8604	8-759-544-22	IC LF50CDT	
IC8700	8-752-074-78	IC CXD2057M	
		< JACK >	
J8901	1-774-747-11	JACK BLOCK, PIN	
		< COIL >	
L8150	1-414-757-11	INDUCTOR 100UH	
L8200	1-412-006-31	INDUCTOR CHIP 10UH	
L8201	1-412-064-11	INDUCTOR CHIP 100UH	
L8343	1-410-425-11	INDUCTOR 33UH	(KV-32FX60B)
		< TRANSISTOR >	
Q8100	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q8101	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q8156	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q8157	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q8200	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q8201	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q8202	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q8301	8-729-038-96	TRANSISTOR IMZ1A-T109	
Q8303	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q8304	8-729-620-06	TRANSISTOR 2SC3052-EF	

J

REF. NO.	PART.NO	DESCRIPTION	REMARK
Q8305	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q8306	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q8307	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q8308	8-729-038-96	TRANSISTOR IMZ1A-T109	
Q8309	8-729-038-96	TRANSISTOR IMZ1A-T109	
Q8310	8-729-038-96	TRANSISTOR IMZ1A-T109	
Q8311	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q8343	8-729-620-06	TRANSISTOR 2SC3052-EF	(KV-32FX60B)
Q8450	8-729-216-22	TRANSISTOR 2SA1162-G	
Q8453	8-729-216-22	TRANSISTOR 2SA1162-G	
Q8456	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q8459	8-729-216-22	TRANSISTOR 2SA1162-G	
Q8461	8-729-216-22	TRANSISTOR 2SA1162-G	
Q8700	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q8900	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q8901	8-729-620-06	TRANSISTOR 2SC3052-EF	
Q8903	8-729-620-06	TRANSISTOR 2SC3052-EF	
		< RESISTOR >	
R8100	1-216-025-91	RES,CHIP 100 5% 1/10W	
R8101	1-216-025-91	RES,CHIP 100 5% 1/10W	
R8102	1-216-295-91	SHORT 0	
R8103	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R8104	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R8105	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R8106	1-216-081-00	RES,CHIP 22K 5% 1/10W	
R8107	1-216-081-00	RES,CHIP 22K 5% 1/10W	
R8108	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R8109	1-249-389-11	CARBON 4.7 5% 1/4W F	
R8110	1-249-389-11	CARBON 4.7 5% 1/4W F	
R8111	1-216-033-00	RES,CHIP 220 5% 1/10W	
R8112	1-216-033-00	RES,CHIP 220 5% 1/10W	
R8115	1-216-033-00	RES,CHIP 220 5% 1/10W	
R8116	1-216-033-00	RES,CHIP 220 5% 1/10W	
R8117	1-216-033-00	RES,CHIP 220 5% 1/10W	
R8118	1-216-033-00	RES,CHIP 220 5% 1/10W	
R8125	1-216-295-91	SHORT 0	
R8126	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R8127	1-216-113-00	RES,CHIP 470K 5% 1/10W	
R8128	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R8129	1-216-025-91	RES,CHIP 100 5% 1/10W	
R8130	1-216-025-91	RES,CHIP 100 5% 1/10W	
R8131	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R8132	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R8133	1-216-113-00	RES,CHIP 470K 5% 1/10W	
R8165	1-216-295-91	SHORT 0	
R8167	1-216-025-91	RES,CHIP 100 5% 1/10W	
R8168	1-216-025-91	RES,CHIP 100 5% 1/10W	
R8174	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R8175	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R8200	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R8201	1-216-295-91	SHORT 0	
R8202	1-216-021-00	RES,CHIP 68 5% 1/10W	
R8203	1-216-069-00	RES,CHIP 6.8K 5% 1/10W	
R8204	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R8205	1-216-069-00	RES,CHIP 6.8K 5% 1/10W	
R8206	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R8208	1-216-037-00	RES,CHIP 330 5% 1/10W	
R8209	1-216-659-11	METAL CHIP 2.2K 0.50% 1/10W	
R8210	1-216-025-91	RES,CHIP 100 5% 1/10W	
R8211	1-216-295-91	SHORT 0	
R8212	1-216-295-91	SHORT 0	
R8213	1-216-295-91	SHORT 0	
R8214	1-216-295-91	SHORT 0	
R8216	1-216-025-91	RES,CHIP 100 5% 1/10W	
R8217	1-216-025-91	RES,CHIP 100 5% 1/10W	
R8223	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R8224	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R8225	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R8226	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R8227	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R8228	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R8229	1-216-295-91	SHORT 0	
R8230	1-216-081-00	RES,CHIP 22K 5% 1/10W	
R8231	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R8232	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R8233	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R8234	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R8235	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R8236	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R8237	1-216-043-91	RES,CHIP 560 5% 1/10W	
R8238	1-216-063-91	RES,CHIP 3.9K 5% 1/10W	
R8239	1-216-069-00	RES,CHIP 6.8K 5% 1/10W	
R8240	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R8243	1-216-021-00	RES,CHIP 68 5% 1/10W	
R8300	1-216-041-00	RES,CHIP 470 5% 1/10W	
R8301	1-216-295-91	SHORT 0	
R8302	1-216-017-91	RES,CHIP 47 5% 1/10W	
R8303	1-216-041-00	RES,CHIP 470 5% 1/10W	
R8304	1-216-041-00	RES,CHIP 470 5% 1/10W	
R8305	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R8307	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R8308	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R8309	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R8310	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R8311	1-216-085-00	RES,CHIP 33K 5% 1/10W	
R8312	1-216-077-00	RES,CHIP 15K 5% 1/10W	
R8313	1-216-041-00	RES,CHIP 470 5% 1/10W	
R8314	1-216-043-91	RES,CHIP 560 5% 1/10W	
R8316	1-216-295-91	SHORT 0	
R8317	1-216-025-91	RES,CHIP 100 5% 1/10W	
R8318	1-216-025-91	RES,CHIP 100 5% 1/10W	

REF. NO.	PART.NO	DESCRIPTION			REMARK
R8319	1-216-295-91	SHORT	0		
R8320	1-216-295-91	SHORT	0		
R8321	1-216-049-91	RES,CHIP	1K	5%	1/10W
R8322	1-216-049-91	RES,CHIP	1K	5%	1/10W
R8323	1-216-097-91	RES,CHIP	100K	5%	1/10W
R8325	1-216-041-00	RES,CHIP	470	5%	1/10W
R8326	1-216-041-00	RES,CHIP	470	5%	1/10W
R8327	1-216-041-00	RES,CHIP	470	5%	1/10W
R8328	1-216-041-00	RES,CHIP	470	5%	1/10W
R8329	1-216-041-00	RES,CHIP	470	5%	1/10W
R8330	1-216-041-00	RES,CHIP	470	5%	1/10W
R8331	1-216-041-00	RES,CHIP	470	5%	1/10W
R8332	1-216-041-00	RES,CHIP	470	5%	1/10W
R8333	1-216-041-00	RES,CHIP	470	5%	1/10W
R8334	1-216-017-91	RES,CHIP	47	5%	1/10W
R8335	1-216-017-91	RES,CHIP	47	5%	1/10W
R8337	1-216-077-00	RES,CHIP	15K	5%	1/10W
R8338	1-216-017-91	RES,CHIP	47	5%	1/10W
R8339	1-216-017-91	RES,CHIP	47	5%	1/10W
R8340	1-216-049-91	RES,CHIP	1K	5%	1/10W
R8343	1-216-041-00	RES,CHIP	470	5%	1/10W (KV-32FX60B)
R8344	1-216-041-00	RES,CHIP	470	5%	1/10W (KV-32FX60B)
R8345	1-216-033-00	RES,CHIP	220	5%	1/10W (KV-32FX60B)
R8346	1-216-295-41	SHORT	0		(KV-28FX60A/28FX60B/28FX60D/28FX60E/28FX60K/28FX60R/28FX60U/32FX60A/32FX60D/32FX60E/32FX60K/32FX60R/32FX60U)
R8347	1-216-025-91	RES,CHIP	100	5%	1/10W (KV-32FX60B)
R8348	1-216-295-91	SHORT	0		(KV-32FX60B)
R8349	1-216-121-91	RES,CHIP	1M	5%	1/10W
R8350	1-216-073-00	RES,CHIP	10K	5%	1/10W
R8351	1-216-073-00	RES,CHIP	10K	5%	1/10W
R8352	1-216-089-91	RES,CHIP	47K	5%	1/10W (KV-32FX60B)
R8353	1-216-081-00	RES,CHIP	22K	5%	1/10W (KV-32FX60B)
R8354	1-216-067-00	RES,CHIP	5.6K	5%	1/10W
R8355	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R8356	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R8450	1-216-089-91	RES,CHIP	47K	5%	1/10W
R8451	1-216-073-00	RES,CHIP	10K	5%	1/10W
R8453	1-216-089-91	RES,CHIP	47K	5%	1/10W
R8454	1-216-073-00	RES,CHIP	10K	5%	1/10W
R8455	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R8460	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R8462	1-216-073-00	RES,CHIP	10K	5%	1/10W
R8467	1-216-089-91	RES,CHIP	47K	5%	1/10W
R8468	1-216-073-00	RES,CHIP	10K	5%	1/10W
R8469	1-216-033-00	RES,CHIP	220	5%	1/10W
R8470	1-216-022-00	RES,CHIP	75	5%	1/10W
R8472	1-216-089-91	RES,CHIP	47K	5%	1/10W
R8473	1-216-073-00	RES,CHIP	10K	5%	1/10W
R8474	1-216-033-00	RES,CHIP	220	5%	1/10W
R8475	1-216-022-00	RES,CHIP	75	5%	1/10W
R8700	1-216-049-91	RES,CHIP	1K	5%	1/10W
R8701	1-216-073-00	RES,CHIP	10K	5%	1/10W
R8702	1-216-025-91	RES,CHIP	100	5%	1/10W
R8703	1-216-025-91	RES,CHIP	100	5%	1/10W
R8704	1-216-025-91	RES,CHIP	100	5%	1/10W
R8705	1-216-295-91	SHORT	0		
R8706	1-216-049-91	RES,CHIP	1K	5%	1/10W
R8707	1-216-089-91	RES,CHIP	47K	5%	1/10W
R8708	1-216-089-91	RES,CHIP	47K	5%	1/10W
R8900	1-216-039-00	RES,CHIP	390	5%	1/10W
R8901	1-216-049-91	RES,CHIP	1K	5%	1/10W
R8902	1-216-039-00	RES,CHIP	390	5%	1/10W
R8903	1-216-089-91	RES,CHIP	47K	5%	1/10W
R8904	1-216-089-91	RES,CHIP	47K	5%	1/10W
R8905	1-216-113-00	RES,CHIP	470K	5%	1/10W
R8906	1-216-039-00	RES,CHIP	390	5%	1/10W
R8907	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R8908	1-216-039-00	RES,CHIP	390	5%	1/10W
R8909	1-216-049-91	RES,CHIP	1K	5%	1/10W
R8911	1-216-063-91	RES,CHIP	3.9K	5%	1/10W
R8913	1-216-022-00	RES,CHIP	75	5%	1/10W
R8914	1-216-071-00	RES,CHIP	8.2K	5%	1/10W
R8915	1-216-022-00	RES,CHIP	75	5%	1/10W
R8916	1-216-033-00	RES,CHIP	220	5%	1/10W
R8917	1-216-033-00	RES,CHIP	220	5%	1/10W
R8918	1-216-113-00	RES,CHIP	470K	5%	1/10W
R8919	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R8922	1-216-022-00	RES,CHIP	75	5%	1/10W
R8923	1-216-022-00	RES,CHIP	75	5%	1/10W
R8924	1-216-022-00	RES,CHIP	75	5%	1/10W
R8925	1-216-022-00	RES,CHIP	75	5%	1/10W
R8926	1-216-033-00	RES,CHIP	220	5%	1/10W
R8927	1-216-033-00	RES,CHIP	220	5%	1/10W
R8928	1-216-033-00	RES,CHIP	220	5%	1/10W
R8929	1-216-039-00	RES,CHIP	390	5%	1/10W
R8930	1-216-049-91	RES,CHIP	1K	5%	1/10W
R8931	1-216-039-00	RES,CHIP	390	5%	1/10W
R8932	1-216-049-91	RES,CHIP	1K	5%	1/10W
R8933	1-216-089-91	RES,CHIP	47K	5%	1/10W
R8934	1-216-089-91	RES,CHIP	47K	5%	1/10W
R8935	1-216-113-00	RES,CHIP	470K	5%	1/10W
R8936	1-216-113-00	RES,CHIP	470K	5%	1/10W
R8937	1-216-039-00	RES,CHIP	390	5%	1/10W

J

The components identified by shading and marked ⚠ are critical for safety
Replace only with the part number specified.

REF. NO.	PART.NO	DESCRIPTION	REMARK
R8938	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R8939	1-216-039-00	RES,CHIP 390 5% 1/10W	
R8940	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R8941	1-216-063-91	RES,CHIP 3.9K 5% 1/10W	
R8942	1-216-009-00	RES,CHIP 22 5% 1/10W	
R8943	1-216-022-00	RES,CHIP 75 5% 1/10W	
R8944	1-216-071-00	RES,CHIP 8.2K 5% 1/10W	
R8945	1-216-022-00	RES,CHIP 75 5% 1/10W	
R8946	1-216-033-00	RES,CHIP 220 5% 1/10W	
R8947	1-216-039-00	RES,CHIP 390 5% 1/10W	
R8948	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R8949	1-216-022-00	RES,CHIP 75 5% 1/10W	
R8950	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R8951	1-216-033-00	RES,CHIP 220 5% 1/10W	
R8952	1-216-113-00	RES,CHIP 470K 5% 1/10W	
R8953	1-216-039-00	RES,CHIP 390 5% 1/10W	
R8954	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R8955	1-216-039-00	RES,CHIP 390 5% 1/10W	
R8956	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R8957	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R8958	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R8959	1-216-022-00	RES,CHIP 75 5% 1/10W	
R8960	1-216-033-00	RES,CHIP 220 5% 1/10W	
R8961	1-216-022-00	RES,CHIP 75 5% 1/10W	
R8963	1-216-113-00	RES,CHIP 470K 5% 1/10W	
R8964	1-216-039-00	RES,CHIP 390 5% 1/10W	
R8965	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R8968	1-216-022-00	RES,CHIP 75 5% 1/10W	
R8969	1-216-033-00	RES,CHIP 220 5% 1/10W	
R8977	1-216-037-00	RES,CHIP 330 5% 1/10W	
R8978	1-216-037-00	RES,CHIP 330 5% 1/10W	
R8979	1-216-045-00	RES,CHIP 680 5% 1/10W	
R8980	1-216-045-00	RES,CHIP 680 5% 1/10W	
R8981	1-216-085-00	RES,CHIP 33K 5% 1/10W	
R8982	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R8983	1-216-077-00	RES,CHIP 15K 5% 1/10W	
R8987	1-216-081-00	RES,CHIP 22K 5% 1/10W	
R8988	1-216-081-00	RES,CHIP 22K 5% 1/10W	
R8989	1-216-081-00	RES,CHIP 22K 5% 1/10W	
R8990	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R8991	1-216-097-91	RES,CHIP 100K 5% 1/10W	
R8992	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R8993	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
		< CRYSTAL >	
X8200	1-781-148-21	VIBRATOR, CRYSTAL	
X8300	1-567-504-11	OSCILLATOR, CRYSTAL	
X8301	1-567-505-11	OSCILLATOR, CRYSTAL	
X8700	1-767-342-21	VIBRATOR, CRYSTAL	

REF. NO.	PART.NO	DESCRIPTION	REMARK
		MISCELLANEOUS	
		**********	
⚠	1-416-466-11	COIL, DEMAGNETIC (KV-28FX60)	
⚠	1-416-769-11	COIL, DEMAGNETIC (KV-32FX60)	
	1-425-032-00	MAGNETIC DISK; 10MM	
	1-452-094-00	MAGNETIC, ROTATABLE DISK; 15MM	
⚠	1-453-272-11	TRANSFORMER ASSY, FLYBACK (NX-4512/U2B4) (KV-28FX60)	
	1-529-153-11	SPEAKER (4.8X20CM)	
	1-529-144-11	SPEAKER (13CM)	
	1-452-896-11	COIL, NA ROTATION (RT200)	
⚠	1-571-433-21	SWITCH, PUSH (AC POWER)	
⚠	1-574-062-61	CORD, POWER (WITH CONNECTOR) (KV-28FX60A/28FX60B/28FX60D/28FX60E/ 28FX60K/28FX60R/32FX60A/32FX60B/ 32FX60D/32FX60E/32FX60K/32FX60R)	
⚠	1-590-762-21	CORD, POWER (WITH UK PLUG) (KV-28FX60U/32FX60U)	
	1-693-338-11	TUNER/VIF (AEP) (KV-28FX60A/28FX60B/28FX60D/28FX60E/ 38FX60K/28FX60R/32FX60A/32FX60D/ 32FX60E/32FX60K/32FX60R)	
	1-693-340-11	TUNER/VIF (FR) (KV-32FX60B)	
	1-693-339-11	TUNER/VIF (UK) (KV-28FX60U/32FX60U)	
⚠	8-737-785-05	PICTURE TUBE (W66LLX010X) (KV-28FX60)	
⚠	8-735-054-05	PICTURE TUBE (W76LLZ060X) (SD-302) (KV-32FX60)	
⚠	1-451-481-11	DEFLECTION YOKE (Y28RVC2) (KV-28FX60)	
⚠	1-451-480-11	DEFLECTION YOKE (Y28RVC2) (KV-32FX60)	
⚠	8-453-011-11	NECK ASSY, NA299-M	
⚠	1-251-317-31	CAP ASSY, HIGH VOLTAGE	
		**********	
		ACCESSORIES AND PACKAGING MATERIALS (KV-28FX60)	
		**********	
	4-204-548-41	MANUAL, INSTRUCTION (KV-28FX60A) (ITALIAN)	
	4-204-548-51	MANUAL, INSTRUCTION (KV-28FX60B) (FRENCH/GERMAN/ITALIAN/DUTCH)	
	4-204-548-11	MANUAL, INSTRUCTION (KV-28FX60D) (GERMAN/ENGLISH/GERMAN/TURKISH)	
	4-204-548-71	MANUAL, INSTRUCTION (KV-28FX60E) (SPANISH)	
	4-204-548-81	MANUAL, INSTRUCTION (KV-28FX60E) (PORTUGUESE/FINNISH/DANISH/ NORWEGIAN/SWEDISH)	
	4-204-548-91	MANUAL, INSTRUCTION (KV-28FX60K/28FX60R) (RUSSIAN/BULGARIAN/ENGLISH/CZECH)	
	4-204-548-61	MANUAL, INSTRUCTION (KV-28FX60U) (ENGLISH)	
	*4-029-168-01	BAG, PROTECTION	

REF. NO.	PART.NO	DESCRIPTION	REMARK
	*4-204-457-01	INDIVIDUAL CARTON	
	*4-204-451-01	CUSHION (UPPER) (ASSY)	
	*4-204-454-01	CUSHION (LOWER) (ASSY)	
**********			
		ACCESSORIES AND PACKAGING MATERIALS (KV-32FX60)	
		**********	
	4-204-561-41	MANUAL, INSTRUCTION (KV-32FX60A)	(ITALIAN)
	4-204-561-51	MANUAL, INSTRUCTION (KV-32FX60B)	(FRENCH/GERMAN/ITALIAN/DUTCH)
	4-204-561-11	MANUAL, INSTRUCTION (KV-32FX60D)	(GERMAN/ENGLISH/GERMAN/TURKISH)
	4-204-561-71	MANUAL, INSTRUCTION (KV-32FX60E)	(SPANISH/PORTUGUESE/FINNISH/DANISH/ NORWEGIAN/SWEDISH)
	4-204-561-91	MANUAL, INSTRUCTION	(KV-32FX60K/32FX60R) (RUSSIAN/BULGARIAN/ENGLISH/CZECH)
	4-204-561-61	MANUAL, INSTRUCTION (KV-32FX60U)	(ENGLISH)
	*4-029-168-01	BAG, PROTECTION	
	*4-204-378-01	INDIVIDUAL CARTON	
	*4-204-387-01	CUSHION (UPPER) (ASSY)	
	*4-204-388-01	CUSHION (LOWER) (ASSY)	
**********			
		REMOTE COMMANDER	
		**********	
	1-418-047-11	REMOTE COMMANDER (RM-891)	

English
98IP7174-1
Printed in U.K.
© 1998.9

Sony Corporation
Sony UK
Service Promotions Dept.

9-974-976-01